

Shop Manual

WHEEL LOADER

WA150-6

SERIAL NUMBERS 80001 and up

ecot3

KOMATSU

WHEEL LOADER

WA150-6

Machine model Serial number
WA150-6 80001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title.....	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04885-11
00 Index and foreword	SEN05064-11
100 Index	SEN05072-11
200 Foreword and general information	SEN05073-01
01 Specification	SEN05065-00
100 Specification and technical data.....	SEN05074-00
10 Structure, function and maintenance standard.....	SEN05066-02
100 Engine and cooling system	SEN05075-00
200 Power train.....	SEN05076-00
300 Steering system	SEN05077-00
400 Brake system	SEN05078-00
500 Undercarriage and frame	SEN05079-01
600 Hydraulic system.....	SEN05080-00
700 Work equipment.....	SEN05081-00
800 Cab and its attachments	SEN05082-00
901 Electrical system, Part 1	SEN05083-01
902 Electrical system, Part 2	SEN05084-00
20 Standard value table.....	SEN05067-00
100 Standard service value table.....	SEN05123-00
30 Testing and adjusting	SEN05068-05
101 Testing and adjusting, Part 1.....	SEN05124-02
102 Testing and adjusting, Part 2.....	SEN05125-01
103 Testing and adjusting, Part 3.....	SEN05126-03
40 Troubleshooting.....	SEN05069-02
100 Failure code table and fuse locations	SEN05127-01
200 General information on troubleshooting.....	SEN05128-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05129-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN05130-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN05131-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN05132-00
305 Troubleshooting by failure code (Display of code), Part 5	SEN05133-00
306 Troubleshooting by failure code (Display of code), Part 6	SEN05134-00
307 Troubleshooting by failure code (Display of code), Part 7	SEN05135-00
400 Troubleshooting of electrical system (E-mode).....	SEN05136-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN05137-00
600 Troubleshooting of engine (S-mode).....	SEN05138-00
50 Disassembly and assembly.....	SEN05070-04
100 General information on disassembly and assembly	SEN05185-03
200 Engine and cooling system	SEN05186-00

300 Power train	SEN05187-03
400 Undercarriage and frame	SEN05188-01
500 Hydraulic system	SEN05189-00
600 Work equipment	SEN05190-00
700 Cab and its attachments.....	SEN05191-00
800 Electrical system	SEN05192-00
80 Appendix.....	SEN05139-01
100 Air conditioner	SEN05140-01
90 Diagrams and drawings.....	SEN05071-00
100 Hydraulic diagrams and drawings	SEN05085-00
200 Electrical diagrams and drawings.....	SEN05086-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$