

Shop Manual

WHEEL LOADER

WA200 -6

WA200PZ -6

SERIAL NUMBERS

WA200-

WA200PZ

C10172 and up

-

ecot3

KOMATSU

WHEEL LOADER

WA200-6

WA200PZ-6

Machine model	Serial number
WA200-6	C10172 and up
WA200PZ-6	-

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05282C0-07
00 Index and foreword	SEN05283-07
100 Index	SEN05291-07 ●
200 Foreword and general information	SEN05292-00
01 Specification	SEN05284-00
100 Specification and technical data.....	SEN05293-00
10 Structure, function and maintenance standard.....	SEN05285-04
100 Engine and cooling system	SEN05294-01
200 Power train.....	SEN05295-00
300 Steering system	SEN05296-01 ●
400 Brake system	SEN05297-00
500 Undercarriage and frame	SEN05298-00
600 Hydraulic system.....	SEN05299-00
700 Work equipment.....	SEN05300-01 ●
800 Cab and its attachments	SEN05301-00
901 Electrical system, Part 1	SEN05302-02
902 Electrical system, Part 2	SEN05303-00
20 Standard value table.....	SEN05286-00
100 Standard service value table.....	SEN05304-00
30 Testing and adjusting	SEN05287-05
101 Testing and adjusting, Part 1.....	SEN05305-01
102 Testing and adjusting, Part 2.....	SEN05306-03
103 Testing and adjusting, Part 3.....	SEN05307-02
40 Troubleshooting.....	SEN05288-01
100 Failure code table and fuse locations	SEN05308-01
200 General information on troubleshooting.....	SEN05309-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05310-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN05311-00
303 Troubleshooting by failure code (Display of code), Part 3	SEN05312-00
304 Troubleshooting by failure code (Display of code), Part 4	SEN05313-00
305 Troubleshooting by failure code (Display of code), Part 5	SEN05314-00

306	Troubleshooting by failure code (Display of code), Part 6.....	SEN05315-00
307	Troubleshooting by failure code (Display of code), Part 7.....	SEN05316-00
400	Troubleshooting of electrical system (E-mode)	SEN05317-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05318-00
600	Troubleshooting of engine (S-mode).....	SEN05319-00
50	Disassembly and assembly	SEN05289-03
100	General information on disassembly and assembly.....	SEN05320-00
200	Engine and cooling system	SEN05321-00
301	Power train, Part 1.....	SEN05322-01
302	Power train, Part 2.....	SEN05323-00
400	Undercarriage and frame	SEN05324-01
500	Hydraulic system	SEN05325-01 ●
600	Work equipment	SEN05326-00
700	Cab and its attachments.....	SEN05327-00
800	Electrical system	SEN05328-00
90	Diagrams and drawings.....	SEN05290-01
100	Hydraulic diagrams and drawings	SEN05329-00
200	Electrical diagrams and drawings.....	SEN05330-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$