

Shop Manual

WHEEL LOADER WA200-7

SERIAL NUMBERS H01051 and up
 80001 and up

FIRST DRAFT

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA200-7



Machine model Serial number

WA200-7 H01051 and up
 80001 and up

00 Index and foreword

Index and foreword

Index

00 Index and foreword

Index and foreword	00-2
Foreword, safety and general information.....	00-14
Important safety notice	00-14
How to read the shop manual.....	00-21
Explanation of terms for maintenance standard	00-23
Handling equipment of fuel system devices	00-25
Handling of intake system parts	00-26
Handling of hydraulic equipment	00-27
Method of disconnecting and connecting of push-pull type coupler.....	00-29
Handling of electrical equipment	00-32
How to read electric wire code	00-40
Precautions when performing operation.....	00-43
Practical use of KOMTRAX	00-48
Standard tightening torque table	00-49
List of Abbreviation	00-55
Conversion table.....	00-59

01 Specifications

Specifications	01-4
Specification dimension drawing	01-4
Specifications	01-6
Weight table.....	01-14
Table of fuel, coolant, and lubricants	01-18

10 Structure and function

Engine and cooling system	10-4
VFT	10-4
EGR system piping drawing	10-8
EGR system circuit diagram.....	10-10
EGR valve	10-12
EGR cooler.....	10-14
KCCV layout drawing	10-16
KCCV ventilator.....	10-19
KDOC muffler	10-23
Damper.....	10-25
Cooling system	10-26
Cooling system hydraulic piping diagram.....	10-27
Cooling fan motor	10-28
Power train	10-37
Power train	10-37
Power train system diagram.....	10-38
Drive shaft	10-40
HST hydraulic piping diagram	10-41
HST pump	10-42
HST motor	10-50
Transfer	10-56
Clutch solenoid valve.....	10-62
Axe.....	10-63
Differential	10-65
Torque proportioning differential.....	10-68

Limited slip differential.....	10-69
Final drive.....	10-72
Steering system	10-75
Steering piping diagram	10-75
Orbitrol valve	10-76
Steering column	10-84
Priority valve.....	10-85
Emergency steering valve.....	10-88
Brake system	10-91
Brake piping diagram	10-91
Brake valve.....	10-92
Charge valve	10-96
Accumulator (for brake).....	10-100
Slack adjuster.....	10-101
Brake	10-103
Parking brake control	10-106
Parking brake	10-107
Parking brake cylinder.....	10-108
Parking brake solenoid valve	10-109
Inching valve	10-111
Undercarriage and frame	10-112
Axe mount and center hinge pin.....	10-112
Hydraulic system.....	10-114
Hydraulic component layout	10-114
Work equipment control lever linkage	10-116
Hydraulic tank.....	10-117
Accumulator (for PPC circuit).....	10-119
Work equipment control valve	10-120
PPC valve.....	10-133
Attachment EPC valve	10-139
Work equipment lock solenoid valve	10-140
ECSS valve	10-141
Accumulator (for ECSS).....	10-143
2-way restrictor valve	10-144
Cushion valve.....	10-145
Accumulator (for oil cooler circuit)	10-146
Quadruple gear pump	10-147
Quick coupler solenoid valve.....	10-148
Work equipment.....	10-149
Work equipment linkage	10-149
Bucket	10-151
Bucket positioner and boom kick-out	10-152
Cab and its attachments	10-158
Cab	10-158
Electrical system	10-159
Machine monitor system	10-159
Machine monitor	10-164
Electrical system (HST controller system).....	10-186
System component parts.....	10-202
HST controller	10-208
ECSS.....	10-212
KOMTRAX system	10-214
Engine starting circuit	10-217
Engine stopping circuit	10-219
Preheating system.....	10-220
Automatic preheating system	10-221

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$