

Shop Manual

WHEEL LOADER

WA200-8

SERIAL NUMBERS	H80051	and up
	85001	and up

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL	00-25
SAFETY NOTICE FOR OPERATION	00-27
PRECAUTIONS TO PREVENT FIRE	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-39
PRECAUTIONS FOR DEF	00-40
STORE AdBlue/DEF	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-55
PRACTICAL USE OF KOMTRAX	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-76
STANDARD TIGHTENING TORQUE TABLE	00-79
CONVERSION TABLE	00-86
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-17
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-19
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-21
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-32
BOOT-UP SYSTEM	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-41
SYSTEM OPERATING LAMP SYSTEM	10-43
BATTERY DISCONNECT SWITCH	10-44
PREHEATING SYSTEM	10-45
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM	10-47
ENGINE CONTROL SYSTEM	10-49
AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-57

COOLING SYSTEM.....	10-74
LAYOUT DRAWING OF COOLING SYSTEM	10-74
COOLING FAN CONTROL SYSTEM.....	10-76
COMPONENT PARTS OF COOLING SYSTEM.....	10-81
CONTROL SYSTEM.....	10-92
LAYOUT DRAWING OF CONTROL SYSTEM	10-92
MACHINE MONITOR SYSTEM	10-94
REARVIEW MONITOR SYSTEM.....	10-96
KOMTRAX SYSTEM.....	10-97
COMPONENT PARTS OF CONTROL SYSTEM.....	10-98
HYDRAULIC SYSTEM.....	10-140
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-140
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-141
POWER TRAIN SYSTEM	10-167
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-167
OPERATION OF POWER TRAIN SYSTEM.....	10-169
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-170
HST CONTROL SYSTEM.....	10-172
HST CHARGE SYSTEM.....	10-174
HST PUMP CONTROL SYSTEM.....	10-175
HST CONTROLLER GEAR SHIFT CONTROL FUNCTION.....	10-177
TRANSFER CLUTCH CONTROL FUNCTION.....	10-180
HST SYSTEM PROTECTION FUNCTION.....	10-181
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-183
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-187
WORK EQUIPMENT SYSTEM	10-232
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-232
WORK EQUIPMENT CONTROL SYSTEM.....	10-234
WORK EQUIPMENT LOCK SYSTEM.....	10-235
BUCKET POSITIONER SYSTEM.....	10-237
BOOM KICK-OUT SYSTEM	10-240
ECSS.....	10-243
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-245
STEERING SYSTEM.....	10-257
LAYOUT DRAWING OF STEERING SYSTEM	10-257
STEERING COLUMN	10-258
COMPONENT PARTS OF STEERING SYSTEM.....	10-259
BRAKE SYSTEM.....	10-275
LAYOUT DRAWING OF BRAKE SYSTEM	10-275
PARKING BRAKE CONTROL SYSTEM	10-277
COMPONENT PARTS OF BRAKE SYSTEM.....	10-280
UNDERCARRIAGE AND FRAME.....	10-299
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-299
TIRE	10-302
WORK EQUIPMENT.....	10-304
STRUCTURE OF WORK EQUIPMENT	10-304
STRUCTURE OF BUCKET.....	10-305
CAB AND ITS ATTACHMENTS	10-306
ROPS CAB	10-306
CAB MOUNT	10-307
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: WA200-8.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14
STANDARD VALUE TABLE FOR MACHINE: WA200-8.....	20-14
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$