

Shop Manual

WHEEL LOADER

WA270 -7

SERIAL NUMBERS 80001 and up

H01051 and up

KOMATSU

SHOP MANUAL

WHEEL LOADER

WA270-7

Model	Serial Number
WA270-7	80001 and up
	H01051 and up

00 Index and foreword

00 Index and foreword

Index

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual	00-24
Explanation of terms for maintenance standard	00-26
Handling equipment of fuel system devices	00-28
Handling of intake system parts	00-29
Handling of hydraulic equipment	00-30
Method of disconnecting and connecting of push-pull type coupler	00-32
Handling of electrical equipment	00-35
How to read electric wire code	00-43
Precautions when performing operation	00-46
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-58
Conversion table	00-63
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-7
Weight table	01-17
Table of fuel, coolant, and lubricants	01-21
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVGT	10-6
EGR system piping drawing	10-13
EGR system circuit diagram	10-15
EGR valve	10-17
EGR cooler	10-19
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF	10-24
Cooling system	10-28
Cooling fan motor	10-30
Power train	10-40
Power train system	10-40
Layout of power train parts	10-42
Damper	10-43
HST pump	10-44
HST motor1	10-57
HST motor2	10-59
Transfer	10-64
Clutch solenoid valve	10-71
Drive shaft	10-73
Axe	10-74
Differential	10-76
Torque proportional differential	10-80
Limited slip differential	10-82
Final drive	10-87
Steering system	10-90
Layout of steering devices	10-90
Steering column	10-91
Priority valve	10-92
Cushion valve	10-96

Emergency steering valve.....	10-97
Orbitrol valve	10-100
2way restrictor valve.....	10-106
Brake system	10-107
Layout of brake parts.....	10-107
Brake accumulator charge valve.....	10-109
Brake valve	10-114
Brake accumulator	10-118
Slack adjuster.....	10-119
Brake	10-121
Parking brake control	10-124
Parking brake	10-125
Parking brake solenoid valve	10-126
Undercarriage and frame.....	10-128
Axe mount	10-128
Center hinge pin	10-130
Tire	10-131
Hydraulic system.....	10-133
Hydraulic component layout.....	10-133
Work equipment control.....	10-135
Hydraulic tank.....	10-136
Double type gear pump	10-139
Steering and work equipment pump.....	10-140
Control valve	10-152
CLSS	10-162
Hydraulic circuit diagram and names of valves.....	10-166
Self-pressure reducing valve.....	10-179
Work equipment PPC valve	10-184
Work equipment lock solenoid valve	10-192
PPC circuit accumulator	10-193
ECSS accumulator.....	10-194
Work equipment	10-195
Work equipment linkage	10-195
Bucket	10-196
Cab and its attachments.....	10-197
ROPS cab	10-197
Cab mount	10-199
Electrical system	10-200
Engine control system	10-200
Preheating system	10-203
Engine output limit function	10-205
Automatic warm-up function.....	10-206
Parking brake control system	10-207
System operating lamp function.....	10-211
Battery disconnect switch function	10-212
HST controller system.....	10-214
Machine monitor system.....	10-254
Rearview monitor system.....	10-275
KOMTRAX system.....	10-278
System component parts	10-281
Sensor	10-304
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$