

# Shop Manual

# WA270-8

## WHEEL LOADER

**SERIAL NUMBERS**    **WA270-8 A28001** and up

**ENGINE**                    **6D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2018 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

December 2018



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-21
FOREWORD, SAFETY, BASIC INFORMATION .....	00-27
HOW TO READ THE SHOP MANUAL .....	00-27
SAFETY NOTICE FOR OPERATION .....	00-29
PRECAUTIONS TO PREVENT FIRE .....	00-37
ACTIONS IF FIRE OCCURS .....	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-41
PRECAUTIONS FOR DEF .....	00-42
STORE AdBlue/DEF .....	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-57
PRACTICAL USE OF KOMTRAX .....	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE .....	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-78
STANDARD TIGHTENING TORQUE TABLE .....	00-81
CONVERSION TABLE .....	00-88
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-18
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-14
FUNCTION OF UREA SCR SYSTEM .....	10-15
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-32
BOOT-UP SYSTEM .....	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-41
SYSTEM OPERATING LAMP SYSTEM .....	10-43
BATTERY DISCONNECT SWITCH .....	10-44
PREHEATING SYSTEM .....	10-45
ENGINE SYSTEM .....	10-47
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-47
ENGINE CONTROL SYSTEM .....	10-49
AUTOMATIC IDLE STOP SYSTEM .....	10-56
COMPONENT PARTS OF ENGINE SYSTEM .....	10-57
COOLING SYSTEM .....	10-76

LAYOUT DRAWING OF COOLING SYSTEM .....	10-76
COOLING FAN CONTROL SYSTEM.....	10-78
COMPONENT PARTS OF COOLING SYSTEM.....	10-83
CONTROL SYSTEM.....	10-96
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-96
MACHINE MONITOR SYSTEM .....	10-98
REARVIEW MONITOR SYSTEM.....	10-100
KOMTRAX SYSTEM.....	10-101
COMPONENT PARTS OF CONTROL SYSTEM.....	10-102
HYDRAULIC SYSTEM.....	10-144
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-144
CLSS .....	10-145
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-148
POWER TRAIN SYSTEM .....	10-196
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-196
OPERATION OF POWER TRAIN SYSTEM.....	10-198
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-199
HST CONTROL SYSTEM.....	10-201
HST CHARGE SYSTEM.....	10-203
HST PUMP CONTROL SYSTEM.....	10-204
HST CONTROLLER GEAR SHIFT CONTROL FUNCTION.....	10-206
TRANSFER CLUTCH CONTROL FUNCTION.....	10-209
HST SYSTEM PROTECTION FUNCTION.....	10-210
MAXIMUM SPEED LOW FUEL CONSUMPTION CONTROL.....	10-213
KOMATSU TRACTION CONTROL SYSTEM (KTCS).....	10-216
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-221
WORK EQUIPMENT SYSTEM .....	10-267
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-267
WORK EQUIPMENT CONTROL SYSTEM.....	10-269
WORK EQUIPMENT LOCK SYSTEM.....	10-270
BUCKET POSITIONER SYSTEM.....	10-272
FORK POSITIONER SYSTEM .....	10-276
REMOTE POSITIONER SYSTEM .....	10-280
ECSS.....	10-283
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-285
STEERING SYSTEM.....	10-300
LAYOUT DRAWING OF STEERING SYSTEM .....	10-300
STEERING COLUMN .....	10-301
COMPONENT PARTS OF STEERING SYSTEM.....	10-302
BRAKE SYSTEM.....	10-316
LAYOUT DRAWING OF BRAKE SYSTEM .....	10-316
PARKING BRAKE CONTROL SYSTEM .....	10-318
COMPONENT PARTS OF BRAKE SYSTEM.....	10-322
AUTO-GREASING SYSTEM .....	10-340
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-340
SPECIFICATIONS OF AUTO-GREASING SYSTEM .....	10-341
FUNCTION OF AUTO-GREASING SYSTEM .....	10-342
COMPONENT PARTS OF AUTO-GREASING SYSTEM .....	10-343
UNDERCARRIAGE AND FRAME.....	10-344
FRAME, AXLE MOUNT AND CENTER HINGE PIN .....	10-344
TIRE .....	10-347
WORK EQUIPMENT.....	10-349
STRUCTURE OF WORK EQUIPMENT .....	10-349
STRUCTURE OF BUCKET.....	10-350
CAB AND ITS ATTACHMENTS .....	10-351
ROPS CAB .....	10-351
CAB MOUNT .....	10-352
20 STANDARD VALUE TABLE .....	20-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$