

Shop Manual

WHEEL LOADER

WA380 -6

WA380Z-6

SERIAL NUMBERS

WA380- 65001

WA380Z-66847

and up

ecot3

KOMATSU

WHEEL LOADER

WA380-6

WA380Z-6

Machine model	Serial number
WA380-6	65001 and up
WA380Z-6	66847 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN06411-15
00 Index and foreword	SEN06412-15
Index	SEN06413-15
Foreword and general information	SEN06414-02
01 Specification	SEN06415-00
Specification and technical data	SEN06416-00
10 Structure, function and maintenance standard	SEN06417-06
Engine and cooling system	SEN06418-00
Power train	SEN06419-04
Steering system	SEN06420-00
Brake system	SEN06421-01
Undercarriage and frame	SEN06422-00
Hydraulic system, Part 1	SEN06423-00
Hydraulic system, Part 2	SEN06424-00
Work equipment	SEN06425-00
Cab and its attachments	SEN06426-00
Electrical system, Part 1	SEN06427-02
Electrical system, Part 2	SEN06428-01
Electrical system, Part 3	SEN06429-01
20 Standard value table	SEN06430-00
Standard service value table	SEN06431-00
30 Testing and adjusting	SEN06432-04
Testing and adjusting, Part 1	SEN06433-04
Testing and adjusting, Part 2	SEN06434-01
Testing and adjusting, Part 3	SEN06435-00
40 Troubleshooting	SEN06436-04
Failure code table and fuse locations	SEN06437-03
General information on troubleshooting	SEN06438-00
Troubleshooting by failure code (Display of code), Part 1	SEN06439-00
Troubleshooting by failure code (Display of code), Part 2	SEN06440-02
Troubleshooting by failure code (Display of code), Part 3	SEN06441-01
Troubleshooting by failure code (Display of code), Part 4	SEN06442-01
Troubleshooting by failure code (Display of code), Part 5	SEN06443-01
Troubleshooting by failure code (Display of code), Part 6	SEN06444-00
Troubleshooting by failure code (Display of code), Part 7	SEN06445-00
Troubleshooting by failure code (Display of code), Part 8	SEN06446-01
Troubleshooting by failure code (Display of code), Part 9	SEN06447-00
Troubleshooting by failure code (Display of code), Part 10	SEN06448-00
Troubleshooting of electrical system (E-mode)	SEN06449-00

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN06450-00
Troubleshooting of engine (S-mode)	SEN06451-00
50 Disassembly and assembly	SEN06452-11
General information on disassembly and assembly	SEN06453-07
Engine and cooling system	SEN06454-04
Power train	SEN06455-10
Steering system	SEN06456-04
Brake system	SEN06457-04
Undercarriage and frame	SEN06458-04
Hydraulic system	SEN06459-03
Work equipment	SEN06460-04
Cab and its attachments	SEN06461-04
Electrical system	SEN06462-04
90 Diagrams and drawings	SEN06463-01
Hydraulic diagrams and drawings	SEN06464-00
Electrical diagrams and drawings	SEN06465-01

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$