

# Shop Manual

# WA380-8

## WHEEL LOADER

**SERIAL NUMBERS**    **WA380-8 A74001** and up

**ENGINE**                    **6D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2018 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-22
FOREWORD, SAFETY, BASIC INFORMATION .....	00-28
HOW TO READ THE SHOP MANUAL.....	00-28
SAFETY NOTICE FOR OPERATION.....	00-30
PRECAUTIONS TO PREVENT FIRE.....	00-38
ACTIONS IF FIRE OCCURS .....	00-40
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-41
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-42
PRECAUTIONS FOR DEF.....	00-43
STORE AdBlue/DEF .....	00-44
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-48
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-55
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-57
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-58
PRACTICAL USE OF KOMTRAX .....	00-59
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-60
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-64
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-68
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-74
HOW TO READ ELECTRICAL WIRE CODE .....	00-75
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-79
STANDARD TIGHTENING TORQUE TABLE.....	00-82
CONVERSION TABLE .....	00-89
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-18
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-13
UREA SCR SYSTEM DIAGRAM .....	10-17
FUNCTION OF UREA SCR SYSTEM.....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-35
BOOT-UP SYSTEM .....	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-44
SYSTEM OPERATING LAMP SYSTEM .....	10-45
BATTERY DISCONNECT SWITCH .....	10-46
PREHEATING SYSTEM .....	10-48
ENGINE SYSTEM .....	10-50
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-50
ENGINE CONTROL SYSTEM .....	10-52
ENGINE POWER MODE SELECTOR SYSTEM.....	10-58
AUTOMATIC IDLE STOP SYSTEM .....	10-60
COMPONENT PARTS OF ENGINE SYSTEM .....	10-61

COOLING SYSTEM.....	10-79
LAYOUT DRAWING OF COOLING SYSTEM .....	10-79
COOLING FAN CONTROL SYSTEM.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-87
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-101
MACHINE MONITOR SYSTEM .....	10-103
REARVIEW MONITOR SYSTEM.....	10-105
KOMTRAX SYSTEM.....	10-106
COMPONENT PARTS OF CONTROL SYSTEM.....	10-107
HYDRAULIC SYSTEM.....	10-156
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-156
CLSS .....	10-157
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM .....	10-160
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-161
POWER TRAIN SYSTEM .....	10-235
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-235
OPERATION OF POWER TRAIN SYSTEM.....	10-238
TRANSMISSION CONTROL SYSTEM .....	10-239
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-241
TRANSMISSION PROTECTION FUNCTION .....	10-247
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-250
TRANSMISSION CUT-OFF FUNCTION .....	10-252
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-254
WORK EQUIPMENT SYSTEM .....	10-305
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-305
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-307
WORK EQUIPMENT CONTROL SYSTEM.....	10-309
WORK EQUIPMENT NEUTRAL LOCK SYSTEM .....	10-314
REMOTE POSITIONER SYSTEM .....	10-316
BUCKET POSITIONER AND BOOM POSITIONER.....	10-321
AUTO-DIGGING SYSTEM.....	10-322
SEMI AUTO-DIGGING SYSTEM .....	10-324
ECSS.....	10-326
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-328
STEERING SYSTEM.....	10-336
LAYOUT DRAWING OF STEERING SYSTEM .....	10-336
SECONDARY STEERING SYSTEM.....	10-337
STEERING COLUMN .....	10-339
COMPONENT PARTS OF STEERING SYSTEM.....	10-340
BRAKE SYSTEM.....	10-360
LAYOUT DRAWING OF BRAKE SYSTEM .....	10-360
PARKING BRAKE CONTROL SYSTEM .....	10-362
BRAKE COOLING CONTROL SYSTEM.....	10-364
COMPONENT PARTS OF BRAKE SYSTEM.....	10-365
AUTO-GREASING SYSTEM .....	10-390
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-390
SPECIFICATIONS OF AUTO-GREASING SYSTEM .....	10-391
FUNCTION OF AUTO-GREASING SYSTEM .....	10-393
COMPONENT PARTS OF AUTO-GREASING SYSTEM .....	10-394
UNDERCARRIAGE AND FRAME.....	10-395
FRAME, AXLE MOUNT AND CENTER HINGE PIN .....	10-395
TIRE .....	10-397
WORK EQUIPMENT.....	10-399
STRUCTURE OF WORK EQUIPMENT .....	10-399
STRUCTURE OF BUCKET.....	10-400
CAB AND ITS ATTACHMENTS .....	10-401
ROPS CAB .....	10-401

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$