

# Shop Manual

WHEEL LOADER

WA470-7

SERIAL NUMBERS

H52051 and up  
10001 and up

**KOMATSU**



# WHEEL LOADER

## WA470-7

Model	Serial Number
WA470-7	H52051 and up 10001 and up

---

## 00 Index and foreword

---

---

# 00 Index and foreword

## Index

### Index (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-18
Important safety notice .....	00-18
How to read the shop manual .....	00-25
Explanation of terms for maintenance standard .....	00-27
Handling equipment of fuel system devices .....	00-29
Handling of intake system parts .....	00-30
Handling of hydraulic equipment .....	00-31
Method of disconnecting and connecting of push-pull type coupler .....	00-33
Handling of electrical equipment .....	00-36
How to read electric wire code .....	00-44
Precautions when performing operation .....	00-47
Practical use of KOMTRAX .....	00-51
Standard tightening torque table .....	00-52
List of abbreviation .....	00-56
Conversion table .....	00-61
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specifications .....	01-5
Weight table .....	01-11
Table of fuel, coolant, and lubricants .....	01-13
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
KVTG .....	10-6
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-15
EGR cooler .....	10-17
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Cooling system .....	10-27
Cooling fan pump .....	10-30
Cooling fan motor .....	10-39
Power train .....	10-46
Power train system .....	10-46
Drive shaft .....	10-49
Power train piping drawing .....	10-50
Transmission control .....	10-51
Torque converter .....	10-54
Transmission .....	10-59
Transmission control valve .....	10-78
Forward and reverse clutch ECMV and 1st and 2nd clutch ECMV .....	10-81
3rd, 4th clutch ECMV .....	10-88
Lockup clutch ECMV .....	10-95
Main relief and torque converter relief valve .....	10-99
Axle .....	10-101
Differential .....	10-103
Final drive .....	10-113
Steering system .....	10-115
Layout of steering parts .....	10-115
Steering column .....	10-116

Steering pump .....	10-117
Steering valve.....	10-129
Orbit-roll valve .....	10-143
Stop valve .....	10-149
Emergency steering motor .....	10-150
Emergency steering pump .....	10-151
Brake system .....	10-152
Layout of brake parts.....	10-152
Charge valve .....	10-154
Brake valve .....	10-160
Slack adjuster.....	10-164
Accumulator (for brake) .....	10-167
Brake.....	10-168
Parking brake control .....	10-171
Parking brake .....	10-172
Parking brake solenoid valve .....	10-173
Parking brake emergency release valve.....	10-176
Undercarriage and frame.....	10-177
Axle mount and center hinge pin.....	10-177
Tire .....	10-178
Hydraulic system .....	10-180
Hydraulic component layout.....	10-180
Work equipment control.....	10-182
Hydraulic tank.....	10-183
Double type gear pump .....	10-186
Work equipment pump.....	10-187
Control valve .....	10-208
CLSS.....	10-217
Hydraulic circuit diagram and names of valves.....	10-221
Accumulator charge valve.....	10-232
Work equipment lock solenoid valve .....	10-236
Accumulator (for PPC circuit) .....	10-237
Accumulator (for ECSS) .....	10-238
Work equipment .....	10-239
Work equipment linkage .....	10-239
Bucket .....	10-240
Bucket positioner and boom positioner.....	10-241
Cab and its attachments.....	10-242
ROPS cab .....	10-242
Electrical system .....	10-243
Engine control system .....	10-243
Preheating system .....	10-245
Engine power mode selector circuit .....	10-247
Engine output limit function .....	10-248
Automatic warm-up function.....	10-249
Parking brake control system .....	10-250
System operating lamp function.....	10-252
Battery disconnect switch function .....	10-254
Transmission controller system .....	10-256
Work equipment control system.....	10-277
Machine monitor system .....	10-293
Rear view monitor system.....	10-317
KOMTRAX system.....	10-320
System component parts .....	10-323
Sensor.....	10-350
Central lubrication system (CLS).....	10-379
20 Standard value tables.....	20-1
Table of contents .....	20-2
Standard service value table.....	20-3
Standard value table for engine .....	20-3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$