

# Shop Manual

WHEEL LOADER

**WA475-10**  
**WA475-10EO**

SERIAL NUMBERS 120001 and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Foreword, Safety, Basic Information .....	00-28
How to Read the Shop Manual .....	00-28
Safety Notice for Operation .....	00-30
Precautions to Prevent Fire .....	00-38
Procedures If Fire Occurs .....	00-40
Precautions for Disposing of Waste Materials .....	00-41
Procedures for Exhaust Gas Regulations .....	00-42
Precautions for DEF .....	00-43
Store DEF .....	00-44
Precautions When You Handle Hydraulic Equipment .....	00-45
Precautions When You Disconnect and Connect Pipings .....	00-48
Precautions When You Handle Electrical Equipment .....	00-55
Precautions When You Handle Fuel System Equipment .....	00-57
Precautions When You Handle Intake System Equipment .....	00-58
Practical Use of KOMTRAX .....	00-59
Disconnect and Connect Push-Pull Type Coupler .....	00-60
Precautions for Disconnection and Connection of Connectors .....	00-64
How to Disconnect and Connect Deutsch Connector .....	00-68
How to Disconnect and Connect Slide Lock Type Connector .....	00-69
How to Disconnect and Connect Connector with Lock to Pull .....	00-71
How to Disconnect and Connect Connector with Lock to Push .....	00-72
How to Disconnect and Connect Connector with Housing to Rotate .....	00-74
How to Read the Codes for Electric Cable .....	00-75
Explanation of Terms for Maintenance Standard .....	00-79
Standard Tightening Torque Table .....	00-82
Conversion Table .....	00-89
Abbreviation List .....	00-94
01 Specifications .....	01-1
Table of Contents .....	01-2
Specifications .....	01-3
Specification Drawing .....	01-3
Specifications .....	01-7
Weight Table .....	01-17
Fuel, Coolant, Lubricants (For North America) .....	01-21
Fuel, Coolant, Lubricants (for European Union and Turkey) .....	01-23
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Urea SCR System .....	10-7
Layout Drawing of Urea SCR System .....	10-7
Urea SCR System Diagram .....	10-9
Function of Urea SCR System .....	10-10
Component Parts of Urea SCR System .....	10-27
Boot-up System .....	10-36
Layout Drawing of Boot-up System .....	10-36
System Operating Lamp System .....	10-38
Battery Disconnect Switch .....	10-40
Preheating System .....	10-41
Engine System .....	10-43
Layout Drawing of Engine System .....	10-43
Engine Control System .....	10-45
Automatic Idle Stop System .....	10-49
Component Parts of Engine System .....	10-50
Cooling System .....	10-67
Layout Drawing of Cooling System .....	10-67
Cooling Fan Control System .....	10-69

Component Parts of Cooling System .....	10-74
Control System .....	10-89
Layout Drawing of Control System .....	10-89
Machine Monitor System .....	10-91
Rearview Monitor System .....	10-93
KOMTRAX System .....	10-94
Load Meter System .....	10-95
Component Parts of Control System .....	10-102
Hydraulic System .....	10-158
Layout Drawing of Hydraulic System .....	10-158
CLSS .....	10-159
Work Equipment Pump and Steering Pump Control System .....	10-163
Component Parts of Hydraulic System .....	10-164
Total Control System .....	10-239
System Diagram of Total Control System .....	10-239
Independent Work Equipment Control Function .....	10-240
Power Mode Selector Function .....	10-242
Overheat Prevention Function .....	10-243
Output Limitation Function for Low Temperature .....	10-244
Work Equipment Speed Level .....	10-245
Power Train System .....	10-246
Layout Drawing of Power Train System .....	10-246
Operation of Power Train System .....	10-248
HST Charge System .....	10-249
Pump Motor Control System .....	10-250
Transmission Gear Shift Control System .....	10-252
Transmission Protection Function .....	10-254
Directional Selector Switch Control Function .....	10-255
Traction Control System .....	10-257
Component Parts of Power Train System .....	10-260
Work Equipment System .....	10-316
Layout Drawing of Work Equipment System .....	10-316
Work Equipment Control System .....	10-319
Work Equipment Neutral Lock System .....	10-325
Remote Positioner System .....	10-327
Automatic Bucket Shake System .....	10-332
Bucket Positioner and Boom Positioner .....	10-333
Auto-Digging System .....	10-334
ECSS .....	10-337
Component Parts of Work Equipment System .....	10-339
Steering System .....	10-349
Layout Drawing of Steering System .....	10-349
Secondary Steering System .....	10-352
AJSS .....	10-354
Steering Column .....	10-360
Component Parts of Steering System .....	10-361
Brake System .....	10-385
Layout Drawing of Brake System .....	10-385
Parking Brake Control System .....	10-389
Brake Cooling Control System .....	10-391
Component Parts of Brake System .....	10-392
Auto-Greasing System .....	10-415
Layout Drawing of Auto-Greasing System .....	10-415
Specifications of Auto-Greasing System .....	10-416
Function of Auto-Greasing System .....	10-418
Auto-Greasing System .....	10-419
Undercarriage and Frame .....	10-420
Frame, Axle Mount and Center Hinge Pin .....	10-420

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$