

Shop Manual

WHEEL LOADER

WA480-8

SERIAL NUMBERS DZCT0001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-26
FOREWORD, SAFETY, BASIC INFORMATION	00-32
HOW TO READ THE SHOP MANUAL	00-32
SAFETY NOTICE FOR OPERATION	00-34
PRECAUTIONS TO PREVENT FIRE	00-42
ACTIONS IF FIRE OCCURS	00-44
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-45
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-46
PRECAUTIONS FOR DEF	00-47
STORE AdBlue/DEF	00-48
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-52
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-59
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-61
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-62
PRACTICAL USE OF KOMTRAX	00-63
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-64
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-68
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-72
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-75
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-76
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-78
HOW TO READ ELECTRICAL WIRE CODE	00-79
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-83
STANDARD TIGHTENING TORQUE TABLE	00-86
CONVERSION TABLE	00-93
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-17
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-19
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-21
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-15
FUNCTION OF UREA SCR SYSTEM	10-16
COMPONENT PARTS OF UREA SCR SYSTEM	10-33
BOOT-UP SYSTEM	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL-	10-44
LER)	
SYSTEM OPERATING LAMP SYSTEM	10-46
BATTERY DISCONNECT SWITCH	10-49
PREHEATING SYSTEM	10-50
ENGINE SYSTEM	10-52
LAYOUT DRAWING OF ENGINE SYSTEM	10-52
ENGINE CONTROL SYSTEM	10-54

ENGINE POWER MODE SELECTOR SYSTEM.....	10-60
AUTOMATIC IDLE STOP SYSTEM	10-62
COMPONENT PARTS OF ENGINE SYSTEM	10-63
COOLING SYSTEM.....	10-80
LAYOUT DRAWING OF COOLING SYSTEM	10-80
COOLING FAN CONTROL SYSTEM.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-87
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-101
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-103
MACHINE MONITOR SYSTEM	10-105
REARVIEW MONITOR SYSTEM.....	10-107
KOMTRAX SYSTEM.....	10-108
LOAD METER SYSTEM	10-110
COMPONENT PARTS OF CONTROL SYSTEM.....	10-117
HYDRAULIC SYSTEM.....	10-171
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-171
CLSS	10-172
WORK EQUIPMENT PUMP AND STEERING PUMP CONTROL SYSTEM	10-176
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-177
POWER TRAIN SYSTEM	10-247
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-247
OPERATION OF POWER TRAIN SYSTEM.....	10-250
TRANSMISSION CONTROL SYSTEM	10-251
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-253
TRANSMISSION PROTECTION FUNCTION	10-259
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-262
TRANSMISSION CUT-OFF FUNCTION	10-264
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-266
WORK EQUIPMENT SYSTEM	10-327
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-327
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-329
WORK EQUIPMENT CONTROL SYSTEM.....	10-331
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-335
REMOTE POSITIONER SYSTEM	10-337
BUCKET POSITIONER AND BOOM POSITIONER.....	10-342
AUTO-DIGGING SYSTEM.....	10-343
ECSS.....	10-345
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-347
STEERING SYSTEM.....	10-355
LAYOUT DRAWING OF STEERING SYSTEM	10-355
SECONDARY STEERING SYSTEM.....	10-358
AJSS	10-360
STEERING COLUMN	10-366
COMPONENT PARTS OF STEERING SYSTEM.....	10-367
BRAKE SYSTEM.....	10-391
LAYOUT DRAWING OF BRAKE SYSTEM	10-391
PARKING BRAKE CONTROL SYSTEM	10-396
BRAKE COOLING CONTROL SYSTEM.....	10-398
COMPONENT PARTS OF BRAKE SYSTEM.....	10-401
AUTO-GREASING SYSTEM	10-432
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-432
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-433
FUNCTION OF AUTO-GREASING SYSTEM	10-435
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-436
UNDERCARRIAGE AND FRAME.....	10-437
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-437

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$