

Shop Manual

WA500-8

WHEEL LOADER

SERIAL NUMBERS **WA500-8 A96001 and up**

ENGINE **6D140E-7**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

June 2017

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-24
FOREWORD, SAFETY, BASIC INFORMATION	00-30
HOW TO READ THE SHOP MANUAL.....	00-30
SAFETY NOTICE FOR OPERATION.....	00-32
PRECAUTIONS TO PREVENT FIRE.....	00-40
ACTIONS IF FIRE OCCURS	00-42
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-43
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-44
PRECAUTIONS FOR DEF.....	00-45
STORE AdBlue/DEF	00-46
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-47
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-50
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-59
PRACTICAL USE OF KOMTRAX	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-80
STANDARD TIGHTENING TORQUE TABLE.....	00-83
CONVERSION TABLE	00-90
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-35
BOOT-UP SYSTEM	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-44
SYSTEM OPERATING LAMP SYSTEM	10-46
BATTERY DISCONNECT SWITCH	10-47
PREHEATING SYSTEM	10-49
ENGINE SHUTDOWN SECONDARY SWITCH	10-51
ENGINE SYSTEM	10-53
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-53
ENGINE CONTROL SYSTEM	10-55
ENGINE POWER MODE SELECTOR SYSTEM.....	10-61
AUTOMATIC IDLE STOP SYSTEM	10-62

RPM SET	10-63
COMPONENT PARTS OF ENGINE SYSTEM	10-67
COOLING SYSTEM.....	10-87
LAYOUT DRAWING OF COOLING SYSTEM	10-87
COOLING FAN CONTROL SYSTEM.....	10-89
COMPONENT PARTS OF COOLING SYSTEM.....	10-94
CONTROL SYSTEM.....	10-108
LAYOUT DRAWING OF CONTROL SYSTEM	10-108
MACHINE MONITOR SYSTEM	10-110
REARVIEW MONITOR SYSTEM.....	10-112
KOMTRAX SYSTEM.....	10-113
LOAD METER SYSTEM	10-114
COMPONENT PARTS OF CONTROL SYSTEM.....	10-120
HYDRAULIC SYSTEM.....	10-170
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-170
CLSS	10-171
WORK EQUIPMENT PUMP CONTROL SYSTEM.....	10-174
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-175
POWER TRAIN SYSTEM	10-244
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-244
OPERATION OF POWER TRAIN SYSTEM.....	10-248
TRANSMISSION CONTROL SYSTEM	10-249
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-251
TRANSMISSION PROTECTION FUNCTION	10-257
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-260
TRANSMISSION CUT-OFF FUNCTION	10-262
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-264
WORK EQUIPMENT SYSTEM	10-328
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-328
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-330
WORK EQUIPMENT CONTROL SYSTEM.....	10-332
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-337
REMOTE POSITIONER SYSTEM	10-339
BUCKET POSITIONER AND BOOM POSITIONER.....	10-344
AUTO-DIGGING SYSTEM.....	10-345
ECSS.....	10-347
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-349
STEERING SYSTEM.....	10-360
LAYOUT DRAWING OF STEERING SYSTEM	10-360
SECONDARY STEERING SYSTEM.....	10-362
JOYSTICK STEERING SYSTEM.....	10-363
AJSS	10-369
STEERING COLUMN	10-375
COMPONENT PARTS OF STEERING SYSTEM.....	10-376
BRAKE SYSTEM.....	10-406
LAYOUT DRAWING OF BRAKE SYSTEM	10-406
PARKING BRAKE CONTROL SYSTEM	10-409
COMPONENT PARTS OF BRAKE SYSTEM.....	10-411
AUTO-GREASING SYSTEM	10-431
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-431
SPECIFICATIONS OF AUTO-GREASING SYSTEM	10-432
FUNCTION OF AUTO-GREASING SYSTEM	10-434
COMPONENT PARTS OF AUTO-GREASING SYSTEM	10-435
UNDERCARRIAGE AND FRAME.....	10-436
FRAME, AXLE MOUNT AND CENTER HINGE PIN	10-436
TIRE	10-438
WORK EQUIPMENT.....	10-440
STRUCTURE OF WORK EQUIPMENT	10-440

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$