

# Shop Manual

WHEEL LOADER

**WA500-8**

SERIAL NUMBERS    90001    and up  
                              H50051    and up



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-24
FOREWORD, SAFETY, BASIC INFORMATION .....	00-30
HOW TO READ THE SHOP MANUAL.....	00-30
SAFETY NOTICE FOR OPERATION.....	00-32
PRECAUTIONS TO PREVENT FIRE.....	00-40
ACTIONS IF FIRE OCCURS .....	00-42
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-43
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-44
PRECAUTIONS FOR DEF.....	00-45
STORE AdBlue/DEF .....	00-46
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-47
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-50
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-56
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-58
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-59
PRACTICAL USE OF KOMTRAX .....	00-60
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-61
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-65
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-69
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-75
HOW TO READ ELECTRICAL WIRE CODE .....	00-76
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-80
STANDARD TIGHTENING TORQUE TABLE.....	00-83
CONVERSION TABLE .....	00-90
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-18
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-13
UREA SCR SYSTEM DIAGRAM .....	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-35
BOOT-UP SYSTEM .....	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-44
SYSTEM OPERATING LAMP SYSTEM .....	10-46
BATTERY DISCONNECT SWITCH .....	10-47
PREHEATING SYSTEM .....	10-49
ENGINE SHUTDOWN SECONDARY SWITCH .....	10-51
ENGINE SYSTEM .....	10-53
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-53
ENGINE CONTROL SYSTEM .....	10-55
ENGINE POWER MODE SELECTOR SYSTEM.....	10-61
AUTOMATIC IDLE STOP SYSTEM .....	10-62

RPM SET .....	10-63
COMPONENT PARTS OF ENGINE SYSTEM .....	10-67
COOLING SYSTEM.....	10-87
LAYOUT DRAWING OF COOLING SYSTEM .....	10-87
COOLING FAN CONTROL SYSTEM.....	10-89
COMPONENT PARTS OF COOLING SYSTEM.....	10-94
CONTROL SYSTEM.....	10-108
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-108
MACHINE MONITOR SYSTEM .....	10-110
REARVIEW MONITOR SYSTEM.....	10-112
KOMTRAX SYSTEM.....	10-113
LOAD METER SYSTEM .....	10-114
COMPONENT PARTS OF CONTROL SYSTEM.....	10-120
HYDRAULIC SYSTEM.....	10-170
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-170
CLSS .....	10-171
WORK EQUIPMENT PUMP CONTROL SYSTEM.....	10-174
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-175
POWER TRAIN SYSTEM .....	10-244
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-244
OPERATION OF POWER TRAIN SYSTEM.....	10-248
TRANSMISSION CONTROL SYSTEM .....	10-249
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-251
TRANSMISSION PROTECTION FUNCTION .....	10-257
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION.....	10-260
TRANSMISSION CUT-OFF FUNCTION .....	10-262
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-264
WORK EQUIPMENT SYSTEM .....	10-328
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-328
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-330
WORK EQUIPMENT CONTROL SYSTEM.....	10-332
WORK EQUIPMENT NEUTRAL LOCK SYSTEM .....	10-337
REMOTE POSITIONER SYSTEM .....	10-339
BUCKET POSITIONER AND BOOM POSITIONER.....	10-344
AUTO-DIGGING SYSTEM.....	10-345
ECSS.....	10-347
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-349
STEERING SYSTEM.....	10-360
LAYOUT DRAWING OF STEERING SYSTEM .....	10-360
SECONDARY STEERING SYSTEM.....	10-362
JOYSTICK STEERING SYSTEM.....	10-363
AJSS .....	10-369
STEERING COLUMN .....	10-375
COMPONENT PARTS OF STEERING SYSTEM.....	10-376
BRAKE SYSTEM.....	10-406
LAYOUT DRAWING OF BRAKE SYSTEM .....	10-406
PARKING BRAKE CONTROL SYSTEM .....	10-409
COMPONENT PARTS OF BRAKE SYSTEM.....	10-411
AUTO-GREASING SYSTEM .....	10-431
LAYOUT DRAWING OF AUTO-GREASING SYSTEM.....	10-431
SPECIFICATIONS OF AUTO-GREASING SYSTEM .....	10-432
FUNCTION OF AUTO-GREASING SYSTEM .....	10-434
COMPONENT PARTS OF AUTO-GREASING SYSTEM .....	10-435
UNDERCARRIAGE AND FRAME.....	10-436
FRAME, AXLE MOUNT AND CENTER HINGE PIN .....	10-436
TIRE .....	10-438
WORK EQUIPMENT.....	10-440
STRUCTURE OF WORK EQUIPMENT .....	10-440

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$