

Shop Manual

WHEEL LOADER

WA500-8

SERIAL NUMBERS 90001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-28
Foreword, Safety, Basic Information	00-34
How to Read the Shop Manual	00-34
Safety Notice for Operation	00-36
Precautions to Prevent Fire	00-44
Procedures If Fire Occurs	00-46
Precautions for Disposing of Waste Materials	00-47
Procedures for Exhaust Gas Regulations	00-48
Precautions for DEF	00-49
Store DEF	00-50
Precautions When You Handle Hydraulic Equipment	00-51
Precautions When You Disconnect and Connect Pipings	00-54
Precautions When You Handle Electrical Equipment	00-61
Precautions When You Handle Fuel System Equipment	00-63
Precautions When You Handle Intake System Equipment	00-64
Practical Use of KOMTRAX	00-65
Disconnect and Connect Push-Pull Type Coupler	00-66
Precautions for Disconnection and Connection of Connectors	00-70
How to Disconnect and Connect Deutsch Connector	00-74
How to Disconnect and Connect Slide Lock Type Connector	00-75
How to Disconnect and Connect Connector with Lock to Pull	00-77
How to Disconnect and Connect Connector with Lock to Push	00-78
How to Disconnect and Connect Connector with Housing to Rotate	00-80
How to Read the Codes for Electric Cable	00-81
Explanation of Terms for Maintenance Standard	00-85
Standard Tightening Torque Table	00-88
Conversion Table	00-95
01 Specifications	01-1
Table of Contents	01-2
Abbreviation List	01-3
Specifications	01-9
Specification Drawing	01-9
Specifications	01-11
Weight Table	01-16
Table of Fuel, Coolant, and Lubricants	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Abbreviation List	10-7
Urea SCR System	10-13
Layout Drawing of Urea SCR System	10-13
Urea SCR System Diagram	10-16
Function of Urea SCR System	10-17
Component Parts of Urea SCR System	10-36
Boot-up System	10-45
Layout Drawing of Boot-up System (Machine with KOMTRAX Terminal)	10-45
Layout Drawing of Boot-up System (Machine with Gateway Function Controller)	10-47
Layout Drawing of Boot-up System (For Emergency Engine Stop Switch Spec) (Machine with KOMTRAX Terminal)	10-49
Layout Drawing of Boot-up System (For Emergency Engine Stop Switch Spec) (Machine with Gateway Function Controller)	10-51
System Operating Lamp System	10-53
Battery Disconnect Switch	10-56
Preheating System	10-59
Engine Shutdown Secondary Switch	10-61
Engine System	10-63

Layout Drawing of Engine System	10-63
Engine Control System	10-65
Engine Power Mode Selector System	10-72
Automatic Idle Stop System	10-73
RPM Set	10-74
Component Parts of Engine System	10-78
Cooling System.....	10-99
Layout Drawing of Cooling System	10-99
Cooling Fan Control System	10-101
Component Parts of Cooling System	10-106
Control System	10-120
Layout Drawing of Control System (Machine with KOMTRAX Terminal)	10-120
Layout Drawing of Control System (Machine with Gateway Function Controller)	10-122
Machine Monitor System.....	10-124
Rearview Monitor System	10-126
KOMTRAX System	10-127
Load Meter System.....	10-129
Component Parts of Control System	10-136
Hydraulic System	10-193
Layout Drawing of Hydraulic System.....	10-193
CLSS	10-194
Work Equipment Pump Control System	10-198
Component Parts of Hydraulic System.....	10-199
Power Train System.....	10-269
Layout Drawing of Power Train System	10-269
Operation of Power Train System	10-273
Transmission Control System.....	10-274
Transmission Gear Shift Control System.....	10-276
Transmission Protection Function	10-282
Directional Selector Switch Control Function.....	10-285
Transmission Cut-off Function.....	10-287
Component Parts of Power Train System.....	10-289
Work Equipment System.....	10-353
Layout Drawing of Work Equipment System	10-353
Work Equipment System Diagram (Applicable Machine: 90001 to 90960).....	10-355
Work Equipment System Diagram (Applicable Machine: 90961 and Up)	10-357
Work Equipment Control System	10-359
Work Equipment Neutral Lock System	10-364
Remote Positioner System.....	10-366
Bucket Positioner and Boom Positioner	10-371
Auto-Digging System	10-372
ECSS.....	10-374
Component Parts of Work Equipment System	10-376
Steering System.....	10-387
Layout Drawing of Steering System	10-387
Secondary Steering System.....	10-389
Joystick Steering System	10-390
AJSS.....	10-396
Steering Column	10-403
Component Parts of Steering System	10-404
Brake System.....	10-434
Layout Drawing of Brake System	10-434
Parking Brake Control System	10-437
Component Parts of Brake System	10-439
Auto-Greasing System	10-458
Layout Drawing of Auto-Greasing System.....	10-458
Specifications of Auto-Greasing System	10-459
Function of Auto-Greasing System.....	10-461

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$