

Shop Manual

WHEEL LOADER

WA500-8E0

SERIAL NUMBERS H50151 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-26
FOREWORD, SAFETY, BASIC INFORMATION	00-32
HOW TO READ THE SHOP MANUAL.....	00-32
SAFETY NOTICE FOR OPERATION.....	00-34
PRECAUTIONS TO PREVENT FIRE.....	00-42
ACTIONS IF FIRE OCCURS	00-44
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-45
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-46
PRECAUTIONS FOR DEF.....	00-47
STORE AdBlue/DEF	00-48
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-49
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-52
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-59
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-61
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-62
PRACTICAL USE OF KOMTRAX	00-63
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-64
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-68
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-72
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-73
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-75
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-76
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-78
HOW TO READ ELECTRICAL WIRE CODE	00-79
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-83
STANDARD TIGHTENING TORQUE TABLE.....	00-86
CONVERSION TABLE	00-93
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-11
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-7
UREA SCR SYSTEM.....	10-13
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-33
BOOT-UP SYSTEM	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL).....	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER).....	10-44
LAYOUT DRAWING OF BOOT-UP SYSTEM (FOR EMERGENCY ENGINE STOP SWITCH SPEC) (MACHINE WITH KOMTRAX TERMINAL).....	10-46
LAYOUT DRAWING OF BOOT-UP SYSTEM (FOR EMERGENCY ENGINE STOP SWITCH SPEC) (MACHINE WITH KOMTRAX TERMINAL).....	10-48
SYSTEM OPERATING LAMP SYSTEM	10-50
BATTERY DISCONNECT SWITCH	10-53
PREHEATING SYSTEM	10-55

ENGINE SHUTDOWN SECONDARY SWITCH	10-57
ENGINE SYSTEM	10-59
LAYOUT DRAWING OF ENGINE SYSTEM	10-59
ENGINE CONTROL SYSTEM	10-61
ENGINE POWER MODE SELECTOR SYSTEM	10-68
AUTOMATIC IDLE STOP SYSTEM	10-69
RPM SET	10-70
COMPONENT PARTS OF ENGINE SYSTEM	10-74
COOLING SYSTEM	10-93
LAYOUT DRAWING OF COOLING SYSTEM	10-93
COOLING FAN CONTROL SYSTEM	10-95
COMPONENT PARTS OF COOLING SYSTEM	10-100
CONTROL SYSTEM	10-114
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-114
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL- LER)	10-116
MACHINE MONITOR SYSTEM	10-118
REARVIEW MONITOR SYSTEM	10-120
KOMTRAX SYSTEM	10-121
LOAD METER SYSTEM	10-123
COMPONENT PARTS OF CONTROL SYSTEM	10-130
HYDRAULIC SYSTEM	10-181
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-181
CLSS	10-182
WORK EQUIPMENT PUMP CONTROL SYSTEM	10-186
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-187
POWER TRAIN SYSTEM	10-256
LAYOUT DRAWING OF POWER TRAIN SYSTEM	10-256
OPERATION OF POWER TRAIN SYSTEM	10-260
TRANSMISSION CONTROL SYSTEM	10-261
TRANSMISSION GEAR SHIFT CONTROL SYSTEM	10-263
TRANSMISSION PROTECTION FUNCTION	10-269
DIRECTIONAL SELECTOR SWITCH CONTROL FUNCTION	10-272
TRANSMISSION CUT-OFF FUNCTION	10-274
COMPONENT PARTS OF POWER TRAIN SYSTEM	10-276
WORK EQUIPMENT SYSTEM	10-339
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-339
WORK EQUIPMENT SYSTEM DIAGRAM	10-341
WORK EQUIPMENT CONTROL SYSTEM	10-343
WORK EQUIPMENT NEUTRAL LOCK SYSTEM	10-348
REMOTE POSITIONER SYSTEM	10-350
BUCKET POSITIONER AND BOOM POSITIONER	10-355
AUTO-DIGGING SYSTEM	10-356
ECSS	10-358
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-360
STEERING SYSTEM	10-371
LAYOUT DRAWING OF STEERING SYSTEM	10-371
SECONDARY STEERING SYSTEM	10-373
JOYSTICK STEERING SYSTEM	10-374
AJSS	10-380
STEERING COLUMN	10-387
COMPONENT PARTS OF STEERING SYSTEM	10-388
BRAKE SYSTEM	10-417
LAYOUT DRAWING OF BRAKE SYSTEM	10-417
PARKING BRAKE CONTROL SYSTEM	10-420
COMPONENT PARTS OF BRAKE SYSTEM	10-422
AUTO-GREASING SYSTEM	10-441
LAYOUT DRAWING OF AUTO-GREASING SYSTEM	10-441

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$