

Shop Manual

WHEEL LOADER

WA600-6

SERIAL NUMBERS 60001 and up

ecot3

KOMATSU

WHEEL LOADER

WA600-6

Machine model Serial number

WA600-6 60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00235-27
00 Index and foreword	SEN00397-27
Index	SEN00398-27
Foreword and general information	SEN00415-05
01 Specification	SEN00399-05
Specification and technical data	SEN00400-05
10 Structure, function and maintenance standard	SEN00401-11
Engine and cooling system	SEN00402-01
Power train, Part 1	SEN00403-02
Power train, Part 2	SEN02455-01
Steering system	SEN00404-04
Brake system	SEN00405-02
Undercarriage and frame	SEN00406-00
Hydraulic system, Part 1	SEN00407-01
Hydraulic system, Part 2	SEN02456-01
Work equipment	SEN00408-03
Cab and its attachments	SEN00409-01
Electrical system, Part 1	SEN01009-04
Electrical system, Part 2	SEN00410-02
Electrical system, Part 3	SEN00411-04
20 Standard value table	SEN00566-06
Standard service value table	SEN00552-06
30 Testing and adjusting	SEN00567-14
Testing and adjusting, Part 1	SEN00553-08
Testing and adjusting, Part 2	SEN00554-08
Testing and adjusting, Part 3	SEN00555-07
Testing and adjusting, Part 4	SEN00556-09
40 Troubleshooting	SEN00568-07
Failure code table and fuse locations	SEN03364-03
General information on troubleshooting	SEN00557-03
Troubleshooting by failure code (Display of code), Part 1	SEN00558-03
Troubleshooting by failure code (Display of code), Part 2	SEN00559-04
Troubleshooting by failure code (Display of code), Part 3	SEN00560-03
Troubleshooting by failure code (Display of code), Part 4	SEN00561-04
Troubleshooting by failure code (Display of code), Part 5	SEN00562-04
Troubleshooting by failure code (Display of code), Part 6	SEN00569-06
Troubleshooting by failure code (Display of code), Part 7	SEN00570-04
Troubleshooting by failure code (Display of code), Part 8	SEN00571-04
Troubleshooting by failure code (Display of code), Part 9	SEN00572-04

Troubleshooting by failure code (Display of code), Part 10	SEN00573-04
Troubleshooting by failure code (Display of code), Part 11	SEN00574-04
Troubleshooting of electrical system (E-mode)	SEN00563-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00564-02
Troubleshooting of engine (S-mode)	SEN00565-02
50 Disassembly and assembly	SEN00583-11
General information on disassembly and assembly	SEN01156-05
Engine and cooling system, Part 1	SEN01157-05
Engine and cooling system, Part 2	SEN01158-04
Power train, Part 1	SEN01160-04
Power train, Part 2	SEN01162-05
Power train, Part 3	SEN01164-05
Power train, Part 4	SEN01165-03
Brake system	SEN01167-04
Undercarriage and frame	SEN01169-04
Hydraulic system	SEN01171-04
Work equipment	SEN01174-03
Cab and its attachments	SEN01175-04
Electrical system	SEN01177-04
90 Diagrams and drawings	SEN00414-09
Hydraulic diagrams and drawings	SEN00412-05
Electrical diagrams and drawings	SEN00413-05

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$