

Shop Manual

WHEEL LOADER

WA900-8

SERIAL NUMBERS 90001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL	00-25
SAFETY NOTICE FOR OPERATION	00-27
PRECAUTIONS TO PREVENT FIRE	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS	00-38
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-39
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-42
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT	00-48
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-50
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-51
PRACTICAL USE OF KOMTRAX	00-52
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-53
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-57
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-61
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-62
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-64
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-67
HOW TO READ ELECTRICAL WIRE CODE	00-68
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-72
STANDARD TIGHTENING TORQUE TABLE	00-75
CONVERSION TABLE	00-82
ABBREVIATION LIST	00-87
01 SPECIFICATION	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-5
WEIGHT TABLE	01-10
FUEL, COOLANT, LUBRICANT	01-12
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
BOOT-UP SYSTEM	10-8
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-8
PRE-LUBRICATION SYSTEM	10-10
SYSTEM OPERATING LAMP SYSTEM	10-14
BATTERY DISCONNECT SWITCH	10-15
STARTING MOTOR DISCONNECT SWITCH	10-16
PREHEATING SYSTEM	10-17
ENGINE SHUTDOWN SECONDARY SWITCH	10-19
EMERGENCY ENGINE STOP SWITCH	10-20
EXTERNAL POWER SUPPLY ENGINE PREHEATER	10-21
ENGINE SYSTEM	10-22
LAYOUT DRAWING OF ENGINE SYSTEM	10-22
ENGINE CONTROL SYSTEM	10-24
ENGINE POWER MODE SELECTOR SYSTEM	10-27
AUTOMATIC IDLE STOP SYSTEM	10-28
RPM SET	10-29
ENGINE SYSTEM	10-31
COOLING SYSTEM	10-53
LAYOUT DRAWING OF COOLING SYSTEM	10-53
COOLING FAN CONTROL SYSTEM	10-56
COOLING SYSTEM	10-60

CONTROL SYSTEM.....	10-75
LAYOUT DRAWING OF CONTROL SYSTEM PARTS.....	10-75
MACHINE MONITOR SYSTEM.....	10-77
REARVIEW MONITOR SYSTEM.....	10-79
KOMTRAX Plus SYSTEM.....	10-80
LOAD METER SYSTEM.....	10-82
MACHINE LOCK-OUT SYSTEM.....	10-88
CONTROL SYSTEM.....	10-90
HYDRAULIC SYSTEM.....	10-153
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	10-153
CLSS.....	10-154
WORK EQUIPMENT PUMP CONTROL SYSTEM.....	10-157
STEERING PUMP CONTROL SYSTEM.....	10-159
COMPONENT PARTS OF HYDRAULIC SYSTEM.....	10-160
POWER TRAIN SYSTEM.....	10-241
LAYOUT DRAWING OF POWER TRAIN SYSTEM.....	10-241
TRANSMISSION CONTROL SYSTEM.....	10-245
TRANSMISSION GEAR SHIFT CONTROL SYSTEM.....	10-247
TRANSMISSION PROTECTION FUNCTION.....	10-252
TIRE SLIP CONTROL SYSTEM.....	10-256
POWER TRAIN SYSTEM.....	10-258
WORK EQUIPMENT SYSTEM.....	10-316
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM.....	10-316
WORK EQUIPMENT SYSTEM DIAGRAM.....	10-318
WORK EQUIPMENT CONTROL SYSTEM.....	10-320
WORK EQUIPMENT NEUTRAL LOCK SYSTEM.....	10-327
REMOTE POSITIONER SYSTEM.....	10-329
BUCKET POSITIONER AND BOOM POSITIONER.....	10-334
AUTO-DIGGING SYSTEM.....	10-335
SEMI-AUTO APPROACH SYSTEM.....	10-337
SEMI-AUTO DUMP SYSTEM.....	10-338
ECSS.....	10-340
WALL DIGGING PREVENTION CONTROL SYSTEM.....	10-342
WORK EQUIPMENT SYSTEM.....	10-344
STEERING SYSTEM.....	10-350
LAYOUT DRAWING OF STEERING SYSTEM.....	10-350
SECONDARY STEERING SYSTEM.....	10-351
AJSS.....	10-352
STEERING LOCK SYSTEM.....	10-359
STEERING SYSTEM.....	10-360
BRAKE SYSTEM.....	10-388
LAYOUT DRAWING OF BRAKE SYSTEM.....	10-388
PARKING BRAKE CONTROL SYSTEM.....	10-391
BRAKE SYSTEM.....	10-393
AUTOMATIC GREASE SYSTEM.....	10-413
LAYOUT DRAWING OF AUTOMATIC GREASE SYSTEM.....	10-413
AUTOMATIC GREASE SYSTEM DIAGRAM.....	10-416
SPECIFICATIONS OF AUTOMATIC GREASE SYSTEM.....	10-417
FUNCTION OF AUTOMATIC GREASE SYSTEM.....	10-418
AUTOMATIC GREASE SYSTEM.....	10-419
LIFTING SYSTEM.....	10-424
POWER LADDER SYSTEM.....	10-424
POWER LADDER SYSTEM.....	10-428
UNDERCARRIAGE AND FRAME.....	10-433
FRAME, AXLE MOUNT AND HINGE PIN.....	10-433
STRUCTURE OF LUBRICATION SYSTEM FOR UNDERCARRIAGE.....	10-435
SERVICE CENTER.....	10-436
TIRE.....	10-440

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$