

Shop Manual

WHEEL LOADER

WA900-8R

SERIAL NUMBERS 95001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-21
How to Read the Shop Manual	00-21
Safety Notice for Operation	00-23
Precautions to Prevent Fire	00-31
Procedures If Fire Occurs	00-33
Precautions When You Dispose of Waste Materials	00-34
Precautions When You Handle Hydraulic Equipment	00-35
Precautions When You Disconnect and Connect Pipings	00-38
Precautions When You Handle Electrical Equipment	00-45
Precautions When You Handle Fuel System Equipment	00-47
Precautions When You Handle Intake System Equipment	00-48
Practical Use of KOMTRAX	00-49
Disconnect and Connect Push-Pull Type Coupler	00-50
Precautions for Disconnection and Connection of Connectors	00-54
How to Disconnect and Connect Deutsch Connector	00-58
How to Disconnect and Connect Slide Lock Type Connector	00-59
How to Disconnect and Connect Connector with Lock to Pull	00-61
How to Disconnect and Connect Connector with Lock to Push	00-62
How to Disconnect and Connect Connector with Housing to Rotate	00-64
Standard Tightening Torque Table	00-65
Conversion Table	00-72
Abbreviation List	00-77
01 Specifications	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Specifications	01-5
Weight Table	01-10
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-7
Layout Drawing of Boot-up System	10-7
Pre-lubrication System	10-9
System Operating Lamp System	10-13
Battery Disconnect Switch	10-14
Starting Motor Disconnect Switch	10-15
Preheating System	10-16
Engine Shutdown Secondary Switch	10-18
Emergency Engine Stop Switch	10-19
External Power Supply Engine Preheater	10-20
Engine System	10-21
Layout Drawing of Engine System	10-21
Engine Control System	10-23
Engine Power Mode Selector System	10-26
RPM Set	10-27
Component Parts of Engine System	10-29
Cooling System	10-35
Layout Drawing of Cooling System	10-35
Cooling Fan Control System	10-38
Component Parts of Cooling System	10-42
Control System	10-57
Layout Drawing of Control System	10-57
Machine Monitor System	10-59
Rearview Monitor System	10-61

KOMTRAX Plus System	10-62
Load Meter System	10-64
Machine Lock-out System	10-70
Component Parts of Control System	10-72
Hydraulic System	10-132
Layout Drawing of Hydraulic System	10-132
CLSS	10-133
Work Equipment Pump Control System	10-136
Steering Pump Control System	10-138
Component Parts of Hydraulic System	10-139
Power Train System	10-220
Layout Drawing of Power Train System	10-220
Transmission Control System	10-224
Transmission Gear Shift Control System	10-226
Transmission Protection Function	10-231
Tire Slip Control System	10-235
Component Parts of Power Train System	10-237
Work Equipment System	10-295
Layout Drawing of Work Equipment System	10-295
Work Equipment System Diagram	10-297
Work Equipment Control System	10-299
Work Equipment Neutral Lock System	10-306
Remote Positioner System	10-308
Bucket Positioner and Boom Positioner	10-313
Auto-Digging System	10-314
Semi-Auto Approach System	10-316
Semi-Auto Dump System	10-317
ECSS	10-319
Wall Digging Prevention Control System	10-321
Component Parts of Work Equipment System	10-323
Steering System	10-329
Layout Drawing of Steering System	10-329
Secondary Steering System	10-330
AJSS	10-331
Steering Lock System	10-338
Component Parts of Steering System	10-339
Brake System	10-367
Layout Drawing of Brake System	10-367
Parking Brake Control System	10-370
Component Parts of Brake System	10-372
Auto-Greasing System	10-392
Layout Drawing of Auto-Greasing System	10-392
Auto-Greasing System Diagram	10-395
Specifications of Auto-Greasing System	10-396
Function of Auto-Greasing System	10-397
Auto-Greasing System	10-398
Lifting System	10-403
Power Ladder System	10-403
Power Ladder System	10-407
Undercarriage and Frame	10-412
Frame, Axle Mount and Hinge Pin	10-412
Structure of Lubrication System for Undercarriage	10-415
Service Center	10-416
Tires	10-420
Work Equipment	10-421
Structure of Work Equipment	10-421
Structure of Bucket	10-422
Structure of Lubrication System for Work Equipment	10-423

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$