

Shop Manual

BACKHOE LOADER

WB93R-8E0

SERIAL NUMBERS WB93R-8E0 F85004 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

| | |
|--|--------|
| 00 INDEX AND FOREWORD | 00-1 |
| FOREWORD, SAFETY, BASIC INFORMATION | 00-14 |
| HOW TO READ THE SHOP MANUAL | 00-14 |
| SAFETY NOTICE FOR OPERATION | 00-16 |
| PRECAUTIONS TO PREVENT FIRE | 00-24 |
| ACTIONS IF FIRE OCCURS | 00-26 |
| PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS | 00-27 |
| ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS | 00-28 |
| PRECAUTIONS FOR DEF | 00-29 |
| STORE AdBlue/DEF | 00-30 |
| PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT | 00-31 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS | 00-34 |
| PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT | 00-41 |
| PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT | 00-43 |
| PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT | 00-44 |
| PRACTICAL USE OF KOMTRAX | 00-45 |
| DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER | 00-46 |
| PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS | 00-50 |
| METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR | 00-54 |
| METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR | 00-55 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL .. | 00-57 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. | 00-58 |
| METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . | 00-60 |
| HOW TO READ ELECTRICAL WIRE CODE | 00-61 |
| EXPLANATION OF TERMS FOR MAINTENANCE STANDARD | 00-65 |
| STANDARD TIGHTENING TORQUE TABLE | 00-68 |
| CONVERSION TABLE | 00-75 |
| ABBREVIATION LIST | 00-80 |
| 01 SPECIFICATIONS | 01-1 |
| CONTENTS | 01-2 |
| SPECIFICATIONS | 01-3 |
| SPECIFICATION DRAWING | 01-3 |
| SPECIFICATIONS | 01-5 |
| WEIGHT TABLE | 01-11 |
| FUEL, COOLANT, LUBRICANTS | 01-13 |
| 10 STRUCTURE AND FUNCTION | 10-1 |
| CONTENTS | 10-2 |
| UREA SCR SYSTEM | 10-4 |
| LAYOUT DRAWING OF UREA SCR SYSTEM | 10-4 |
| UREA SCR SYSTEM DIAGRAM | 10-7 |
| FUNCTION OF UREA SCR SYSTEM | 10-9 |
| COMPONENT PARTS OF UREA SCR SYSTEM | 10-17 |
| HYDRAULIC SYSTEM | 10-27 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-27 |
| CLSS | 10-29 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-32 |
| POWER TRAIN SYSTEM | 10-90 |
| LAYOUT DRAWING OF POWER TRAIN SYSTEM | 10-90 |
| OPERATION OF POWER TRAIN SYSTEM | 10-92 |
| COMPONENT PARTS OF POWER TRAIN SYSTEM | 10-93 |
| WORK EQUIPMENT SYSTEM | 10-113 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-113 |
| LOADER WORK EQUIPMENT PPC VALVE | 10-116 |
| BACKHOE PPC VALVE | 10-129 |
| OUTRIGGER PPC VALVE | 10-133 |

| | |
|--|--------|
| STEERING UNIT | 10-138 |
| BRAKE PUMP | 10-139 |
| SOLENOID VALVES | 10-140 |
| PPC CIRCUIT ACCUMULATOR | 10-145 |
| SAFETY VALVES | 10-146 |
| WORK EQUIPMENT | 10-151 |
| STRUCTURE OF LOADER WORK EQUIPMENT | 10-151 |
| STRUCTURE OF BACKHOE WORK EQUIPMENT | 10-152 |
| FUNCTION OF WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM | 10-153 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| STANDARD VALUE TABLE FOR ENGINE | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE: WB93R-8E0 | 20-3 |
| STANDARD VALUE TABLE FOR MACHINE | 20-6 |
| STANDARD VALUE TABLE FOR MACHINE: WB93R-8E0 | 20-6 |
| MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE | 20-26 |
| 30 TESTING AND ADJUSTING | 30-1 |
| CONTENTS | 30-2 |
| ENGINE AND COOLING SYSTEM | 30-5 |
| TEST VISUAL CHECK CRANKCASE SYSTEM | 30-5 |
| TEST CHECK CYLINDER MECHANICS | 30-7 |
| TEST CHECK EGR VALVE ACTUATOR | 30-9 |
| TEST CHECK EXTERNAL FUEL LEAKAGE ENGINE AREA | 30-11 |
| TEST CHECK PRESSURE LIMITING VALVE (PLV) BACKFLOW RATE | 30-13 |
| TEST CHECK TURBO SYSTEM | 30-15 |
| TEST CHECK INTAKE AIR SYSTEM | 30-17 |
| TEST CHECK COOLING SYSTEM | 30-19 |
| CHECK PRESSURE BETWEEN MAIN FILTER AND HIGH PRESSURE PUMP | 30-24 |
| TEST CHECK HIGH PRESSURE PUMP BACKFLOW RATE | 30-27 |
| TEST CHECK HIGH PRESSURE SYSTEM BACKFLOW RATE | 30-29 |
| PRESSURE TEST RAIL PRESSURE ADJUSTMENT CHECK | 30-31 |
| PRESSURE TEST CHECK RAIL PRESSURE DURING RAIL | 30-32 |
| PRESSURE TEST CHECK PRESSURE BETWEEN GEAR PUMP AND MAIN FILTER | 30-33 |
| TEST CHECK INTAKE AIR PRESSURE AND TEMPERATURE SENSOR | 30-35 |
| PRESSURE TEST CHECK SUCTION PRESSURE BETWEEN TANK AND PRE-FILTER | 30-36 |
| PRESSURE TEST CHECK SUCTION PRESSURE AFTER PRE-FILTER | 30-38 |
| TEST CHECK WATER IN FUEL SENSOR PLAUSIBILITY | 30-40 |
| TEST CHECK EXTERNAL FUEL LEAKAGE HIGH PRESSURE SYSTEM | 30-41 |
| TEST CHECK SINGLE INJECTOR BACKFLOW RATE | 30-42 |
| TEST INJECTOR CUT OUT ACTIVATION CHECK | 30-44 |
| TEST ENGINE SPEED | 30-45 |
| TEST EXHAUST GAS COLOR | 30-48 |
| STEERING SYSTEM | 30-50 |
| CHECK LEAKAGES IN STEERING CYLINDER | 30-50 |
| TEST STEERING CIRCUIT OIL PRESSURE | 30-51 |
| ADJUST TOE-IN/STEERING ANGLE WITH AXLES REMOVED FROM MACHINE | 30-52 |
| ADJUST TOE-IN/STEERING ANGLE WITH AXLES WITHOUT REMOVED FROM MACHINE | 30-55 |
| BRAKE SYSTEM | 30-58 |
| TEST BRAKE SYSTEM PRESSURE | 30-58 |
| TEST BRAKE SYSTEM LEAKAGE | 30-60 |
| TEST BRAKE PISTON STROKE | 30-61 |
| BLEED AIR FROM THE BRAKE CIRCUIT | 30-62 |
| TEST AND ADJUST PARKING BRAKE SYSTEM | 30-63 |
| HYDRAULIC SYSTEM | 30-65 |
| RELEASE REMAINING PRESSURE FROM WORK EQUIPMENT CIRCUIT | 30-65 |
| TEST AND ADJUST HYDRAULIC CIRCUIT PRESSURE | 30-66 |
| TEST AND ADJUST WORK EQUIPMENT OIL PRESSURE | 30-67 |
| TEST AND ADJUST CONTROL CIRCUIT OIL PRESSURE | 30-73 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$