

# Shop Manual

BACKHOE LOADER

# WB93R-8R

SERIAL NUMBERS WB93R-8 F80004 and up

**KOMATSU**



# **SHOP MANUAL**

---

# **BACKHOE LOADER WB93R-8**

<b>Machine model</b>	<b>Serial number</b>
WB93R-8	F80004 and up

---

## **00 INDEX AND FOREWORD**

---

---

## **TABLE OF CONTENTS**

### **00 INDEX AND FOREWORD**

TABLE OF CONTENTS .....	2
FOREWORD, SAFETY AND GENERAL INFORMATION .....	8
IMPORTANT SAFETY NOTICE .....	8
FIRE PREVENTION .....	13
DISPOSE OF WASTE MATERIALS .....	14
HOW TO READ THE SHOP MANUAL .....	15
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	17
HANDLING EQUIPMENT OF FUEL SYSTEM DEVICES .....	19
HANDLING OF INTAKE SYSTEM PARTS .....	20
HANDLING OF HYDRAULIC EQUIPMENT .....	21
METHOD OF DISCONNECTING AND CONNECTING OF PUSH-PULL TYPE COUPLER .....	23
HANDLING OF ELECTRICAL EQUIPMENT .....	26
HOW TO READ ELECTRIC WIRE CODE .....	34
PRECAUTIONS WHEN PERFORMING OPERATION .....	37
PRACTICAL USE OF KOMTRAX .....	42
STANDARD TIGHTENING TORQUE TABLE .....	43
ABBREVIATION .....	49
CONVERSION TABLE .....	56

### **01 SPECIFICATION**

CONTENTS .....	2
SPECIFICATIONS .....	3
OVERALL DIMENSIONS .....	3
WORKING RANGE DRAWINGS .....	4
SPECIFICATIONS .....	6
WEIGHT TABLE .....	11
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	13

### **10 STRUCTURE AND FUNCTION**

CONTENTS .....	2
ABBREVIATION LIST .....	3
UREA SCR SYSTEM .....	10
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10
INDUCEMENT STRATEGY .....	17
COMPONENT PARTS OF UREA SCR SYSTEM .....	24
DEF TANK .....	28
DEF PUMP .....	30
DEF INJECTOR .....	31
DEF HOSE .....	32
DEF TANK HEATING VALVE .....	33
POWER TRAIN .....	34

POWER TRAIN DESCRIPTION .....	34
UNDERCARRIAGE AND FRAME .....	37
4WD TRANSMISION .....	37
FRONT AXLE .....	47
REAR AXLE .....	51
HYDRAULIC SYSTEM .....	56
LAYOUT DRAWING OF HYDRAULIC SYSTEM.....	56
HYDRAULIC TANK .....	58
HYDRAULIC PUMP .....	59
CONTROL VALVE - 9-spool loader and backhoe valves .....	73
CONTROL VALVE - 11-spool loader and backhoe valves .....	84
CLSS .....	95
WORK EQUIPMENT SYSTEM.....	115
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM.....	115
LOADER WORK EQUIPMENT PPC VALVE.....	118
OUTRIGGER PPC VALVE .....	131
STEERING UNIT .....	136
BRAKE PUMP .....	137
SOLENOID VALVE.....	138
ACCUMULATOR .....	140
HOLDING VALVE .....	141
WORK EQUIPMENT .....	146
LOADER WORK EQUIPMENT.....	146
BACKHOE WORK EQUIPMENT.....	147
 <b>20 STANDARD VALUE TABLES</b>	
CONTENTS .....	2
ABBREVIATION LIST.....	3
STANDARD SERVICE VALUE TABLE .....	10
STANDARD VALUE TABLE FOR ENGINE.....	10
STANDARD VALUE TABLE FOR MACHINE.....	15
 <b>30 TESTING AND ADJUSTING</b>	
CONTENTS .....	2
ABBREVIATION LIST.....	3
ENGINE AND COOLING SYSTEM .....	10
TEST ENGINE SPEED.....	10
TEST EXHAUST GAS COLOR .....	13
UNDERCARRIAGE AND FRAME .....	15
CHECKING LEAKAGES IN THE STEERING CYLINDER .....	15
TESTING STEERING CIRCUIT OIL PRESSURE.....	16
TESTING THE BRAKING SYSTEM PRESSURE .....	17
TESTING THE BRAKE SYSTEM LEAKAGE .....	19

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$