

# Shop Manual

BACKHOE LOADER

# WB93S-8E0

SERIAL NUMBERS WB93S-8E0 F25001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-14
HOW TO READ THE SHOP MANUAL .....	00-14
SAFETY NOTICE FOR OPERATION .....	00-16
PRECAUTIONS TO PREVENT FIRE .....	00-24
ACTIONS IF FIRE OCCURS .....	00-26
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-27
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-28
PRECAUTIONS FOR DEF .....	00-29
STORE AdBlue/DEF .....	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-44
PRACTICAL USE OF KOMTRAX .....	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-60
HOW TO READ ELECTRICAL WIRE CODE .....	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-65
STANDARD TIGHTENING TORQUE TABLE .....	00-68
CONVERSION TABLE .....	00-75
ABBREVIATION LIST .....	00-80
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING .....	01-3
SPECIFICATIONS .....	01-5
WEIGHT TABLE .....	01-6
FUEL, COOLANT, LUBRICANTS .....	01-8
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
UREA SCR SYSTEM .....	10-4
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-4
UREA SCR SYSTEM DIAGRAM .....	10-7
FUNCTION OF UREA SCR SYSTEM .....	10-9
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-17
HYDRAULIC SYSTEM .....	10-27
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-27
CLSS .....	10-29
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-32
POWER TRAIN SYSTEM .....	10-90
LAYOUT DRAWING OF POWER TRAIN SYSTEM .....	10-90
OPERATION OF POWER TRAIN SYSTEM .....	10-92
COMPONENT PARTS OF POWER TRAIN SYSTEM .....	10-93
OPERATION OF STEERING SYSTEM .....	10-114
WORK EQUIPMENT SYSTEM .....	10-118
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-118
LOADER WORK EQUIPMENT PPC VALVE .....	10-121
BACKHOE PPC VALVE .....	10-134

OUTRIGGER PPC VALVE .....	10-138
STEERING UNIT .....	10-143
BRAKE PUMP .....	10-144
SOLENOID VALVES .....	10-145
PPC CIRCUIT ACCUMULATOR .....	10-151
SAFETY VALVES .....	10-152
WORK EQUIPMENT .....	10-157
STRUCTURE OF LOADER WORK EQUIPMENT .....	10-157
STRUCTURE OF BACKHOE WORK EQUIPMENT .....	10-158
FUNCTION OF WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM .....	10-159
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: WB93S-8E0 .....	20-3
STANDARD VALUE TABLE FOR MACHINE .....	20-6
STANDARD VALUE TABLE FOR MACHINE: WB93S-8E0 .....	20-6
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE .....	20-26
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ENGINE AND COOLING SYSTEM .....	30-5
TEST VISUAL CHECK CRANKCASE SYSTEM .....	30-5
TEST CHECK CYLINDER MECHANICS .....	30-7
TEST CHECK EGR VALVE ACTUATOR .....	30-9
TEST CHECK EXTERNAL FUEL LEAKAGE ENGINE AREA .....	30-11
TEST CHECK PRESSURE LIMITING VALVE (PLV) BACKFLOW RATE .....	30-13
TEST CHECK TURBO SYSTEM .....	30-15
TEST CHECK INTAKE AIR SYSTEM .....	30-17
TEST CHECK COOLING SYSTEM .....	30-19
CHECK PRESSURE BETWEEN MAIN FILTER AND HIGH PRESSURE PUMP .....	30-24
TEST CHECK HIGH PRESSURE PUMP BACKFLOW RATE .....	30-27
TEST CHECK HIGH PRESSURE SYSTEM BACKFLOW RATE .....	30-29
PRESSURE TEST RAIL PRESSURE ADJUSTMENT CHECK .....	30-31
PRESSURE TEST CHECK RAIL PRESSURE DURING RAIL .....	30-32
PRESSURE TEST CHECK PRESSURE BETWEEN GEAR PUMP AND MAIN FILTER .....	30-33
TEST CHECK INTAKE AIR PRESSURE AND TEMPERATURE SENSOR .....	30-35
PRESSURE TEST CHECK SUCTION PRESSURE BETWEEN TANK AND PRE-FILTER .....	30-36
PRESSURE TEST CHECK SUCTION PRESSURE AFTER PRE-FILTER .....	30-38
TEST CHECK WATER IN FUEL SENSOR PLAUSIBILITY .....	30-40
TEST CHECK EXTERNAL FUEL LEAKAGE HIGH PRESSURE SYSTEM .....	30-41
TEST CHECK SINGLE INJECTOR BACKFLOW RATE .....	30-42
TEST INJECTOR CUT OUT ACTIVATION CHECK .....	30-44
TEST ENGINE SPEED .....	30-45
TEST EXHAUST GAS COLOR .....	30-48
STEERING SYSTEM .....	30-50
CHECK LEAKAGES IN STEERING CYLINDER .....	30-50
TEST STEERING CIRCUIT OIL PRESSURE .....	30-51
ADJUST TOE-IN/STEERING ANGLE WITH AXLES REMOVED FROM MACHINE .....	30-52
ADJUST TOE-IN/STEERING ANGLE WITH AXLES WITHOUT REMOVED FROM MACHINE .....	30-64
BRAKE SYSTEM .....	30-67
TEST BRAKE SYSTEM PRESSURE .....	30-67
TEST BRAKE SYSTEM LEAKAGE .....	30-69
TEST BRAKE PISTON STROKE .....	30-70
BLEED AIR FROM THE BRAKE CIRCUIT .....	30-71
TEST AND ADJUST PARKING BRAKE SYSTEM .....	30-72
HYDRAULIC SYSTEM .....	30-74
RELEASE REMAINING PRESSURE FROM WORK EQUIPMENT CIRCUIT .....	30-74
TEST AND ADJUST HYDRAULIC CIRCUIT PRESSURE .....	30-75
TEST AND ADJUST WORK EQUIPMENT OIL PRESSURE .....	30-76

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$