

Shop Manual

BACKHOE LOADER

WB97R-8

SERIAL NUMBERS WB97R-8 F60001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
FOREWORD, SAFETY, BASIC INFORMATION	00-7
HOW TO READ THE SHOP MANUAL	00-7
SAFETY NOTICE FOR OPERATION	00-9
PRECAUTIONS TO PREVENT FIRE	00-17
ACTIONS IF FIRE OCCURS	00-19
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-20
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-21
PRECAUTIONS FOR DEF	00-22
STORE AdBlue/DEF	00-23
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-24
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-27
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-34
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-36
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-37
PRACTICAL USE OF KOMTRAX	00-38
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-39
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-43
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-47
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-48
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-50
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-51
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-53
HOW TO READ ELECTRICAL WIRE CODE	00-54
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-58
STANDARD TIGHTENING TORQUE TABLE	00-61
CONVERSION TABLE	00-68
ABBREVIATION LIST	00-73
01 SPECIFICATIONS	01-1
CONTENTS	01-2
SPECIFICATIONS	01-3
SPECIFICATION DRAWING	01-3
SPECIFICATIONS	01-6
WEIGHT TABLE	01-12
FUEL, COOLANT, LUBRICANTS	01-14
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
UREA SCR SYSTEM	10-4
LAYOUT DRAWING OF UREA SCR SYSTEM	10-4
UREA SCR SYSTEM DIAGRAM	10-7
FUNCTION OF UREA SCR SYSTEM	10-8
COMPONENT PARTS OF UREA SCR SYSTEM	10-16
HYDRAULIC SYSTEM	10-26
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-26
CLSS	10-28
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-31
POWER TRAIN SYSTEM	10-76
LAYOUT DRAWING OF POWER TRAIN SYSTEM	10-76
OPERATION OF POWER TRAIN SYSTEM	10-78
COMPONENT PARTS OF POWER TRAIN SYSTEM	10-79
WORK EQUIPMENT SYSTEM	10-104
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-104
LOADER WORK EQUIPMENT PPC VALVE	10-107
BACKHOE PPC VALVE	10-120
OUTRIGGER PPC VALVE	10-124

STEERING UNIT	10-129
BRAKE PUMP	10-130
SOLENOID VALVES	10-131
PPC CIRCUIT ACCUMULATOR	10-137
SAFETY VALVES	10-138
WORK EQUIPMENT	10-143
STRUCTURE OF LOADER WORK EQUIPMENT	10-143
STRUCTURE OF BACKHOE WORK EQUIPMENT	10-144
FUNCTION OF WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM	10-145
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
STANDARD VALUE TABLE FOR ENGINE	20-3
STANDARD VALUE TABLE FOR ENGINE: WB97R-8	20-3
STANDARD VALUE TABLE FOR MACHINE	20-6
STANDARD VALUE TABLE FOR MACHINE: WB97R-8	20-6
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE	20-24
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ENGINE AND COOLING SYSTEM	30-4
TEST ENGINE SPEED	30-4
TEST EXHAUST GAS COLOR	30-7
STEERING SYSTEM	30-9
CHECK LEAKAGES IN STEERING CYLINDER	30-9
TEST STEERING CIRCUIT OIL PRESSURE	30-10
ADJUST TOE-IN/STEERING ANGLE WITH AXLES REMOVED FROM MACHINE	30-11
ADJUST TOE-IN/STEERING ANGLE WITH AXLES WITHOUT REMOVED FROM MACHINE	30-14
BRAKE SYSTEM	30-17
TEST BRAKE SYSTEM PRESSURE	30-17
TEST BRAKE SYSTEM LEAKAGE	30-19
TEST BRAKE PISTON STROKE	30-20
BLEED AIR FROM THE BRAKE CIRCUIT	30-21
TEST BRAKE PUMP BALANCING VALVE	30-22
TEST BRAKE PEDAL STROKE	30-23
ADJUST BRAKE PEDAL TRAVEL	30-24
TEST AND ADJUST PARKING BRAKE SYSTEM	30-26
HYDRAULIC SYSTEM	30-28
RELEASE REMAINING PRESSURE FROM WORK EQUIPMENT CIRCUIT	30-28
TEST AND ADJUST HYDRAULIC CIRCUIT PRESSURE	30-29
TEST AND ADJUST WORK EQUIPMENT OIL PRESSURE	30-30
TEST AND ADJUST CONTROL CIRCUIT OIL PRESSURE	30-36
MEASURE AND ADJUST PUMP PC CONTROL OIL PRESSURE	30-37
MEASURE AND ADJUST PUMP LS CONTROL OIL PRESSURE	30-41
TEST SOLENOID VALVE OUTLET PRESSURE	30-43
TEST PPC VALVE OUTLET PRESSURE	30-44
ADJUST WORK EQUIPMENT PPC VALVES PLAY	30-46
TEST TRANSMISSION OIL PRESSURE	30-47
TEST THE PARTS WHICH CAUSE HYDRAULIC DRIFT OF WORK EQUIPMENT	30-49
BLEED AIR FROM HYDRAULIC SYSTEM	30-51
WORK EQUIPMENT	30-53
OUTRIGGER SENSOR AND SAFETY SYSTEM	30-53
ADJUST RETURN TO DIG SENSOR	30-56
ADJUST TELESCOPIC ARM GUIDE SLACK	30-57
ELECTRICAL SYSTEM	30-59
SET AND OPERATE MACHINE MONITOR	30-59
START UP KOMTRAX TERMINAL	30-82
LAMP DISPLAY OF KOMTRAX TERMINAL	30-86
ADJUST FRONT PANEL SETTINGS	30-89
PREPARE KOMTRAX TERMINAL FOR TROUBLESHOOTING OF ELECTRICAL SYSTEM	30-90

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$