

SERVICE MANUAL

5500 / 6500 / 7500
Tractor

Part number 47899740

English
June 2015





SERVICE MANUAL

5500 Turbo Super, TIER 3 engine, 2WD tractor , 5500 Turbo Super, TIER 3, 4WD tractor , 6500 TIER 3 engine, 2WD tractor , 6500 TIER 3 engine, 4WD tractor , 7500 TIER 3 engine, 2WD tractor , 7500 TIER 3 engine, 4WD tractor

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.218] Fuel injection system.....	10.8
[10.250] Turbocharger and lines.....	10.9
[10.400] Engine cooling system	10.10
[10.414] Fan and drive	10.11
[10.304] Engine lubrication system.....	10.12
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.126] Gearbox external controls.....	21.3
[21.145] Gearbox internal components.....	21.4
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.400] Non-powered front axle	25.1
[25.100] Powered front axle	25.2

[25.102] Front bevel gear set and differential	25.3
[25.108] Final drive hub, steering knuckles, and shafts	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.201] Power Take-Off (PTO) drive shaft	31.2
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.104] Fixed displacement pump	35.2
[35.359] Main control valve	35.3
[35.204] Remote control valves	35.4
[35.100] Main lift system	35.5
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels	44.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3

[55.301] Alternator 55.4

[55.302] Battery..... 55.5

[55.404] External lighting 55.6

[55.408] Warning indicators, alarms, and instruments 55.7

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$