

SERVICE MANUAL

Boomer™ 30 ROPS / Boomer™ 35 ROPS **Compact Tractor**

Boomer™ 30 - From PIN 0 to 2107013768; From PIN 2107013769 to 2107015119; PIN 2107015120 and above;
Boomer™ 35 - From PIN 0 to 2109014283; From PIN 2109014284 to 2109016018; PIN 2109016019 and above

Part number 47916997

1st edition English

November 2016





SERVICE MANUAL

**Boomer™ 30 [0 - 2107013768] , Boomer™ 30 [2107013769 - 2107015119] ,
Boomer™ 30 [2107015120 -] , Boomer™ 35 [0 - 2109014283] , Boomer™ 35
[2109014284 - 2109016018] , Boomer™ 35 [2109016019 -]**

Link Product / Engine

Product	Market Product	Engine
Boomer™ 30 [0 - 2107013768]	Europe	S4L2
Boomer™ 30 [2107013769 - 2107015119]	Europe	S4L2
Boomer™ 30 [2107015120 -]	Europe	S4L2
Boomer™ 35 [0 - 2109014283]	Europe	S4L2
Boomer™ 35 [2109014284 - 2109016018]	Europe	S4L2
Boomer™ 35 [2109016019 -]	Europe	S4L2

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.400] Engine cooling system	10.4
[10.304] Engine lubrication system.....	10.5
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
[18.112] Slip clutch or flywheel damper	18.4
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.310] Final drives	25.2
Rear axle system	27
[27.106] Rear bevel gear set and differential	27.1
[27.120] Planetary and final drives	27.2
Hydrostatic drive	29

[29.100] Transmission and steering hydrostatic control	29.1
[29.202] Hydrostatic transmission	29.2
[29.218] Pump and motor components.....	29.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.120] Central Power Take-Off (PTO).....	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.120] Mechanical service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.114] Three-point hitch control valve	35.3
[35.116] Three-point hitch cylinder	35.4
[35.204] Remote control valves	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.350] Safety and main relief valves	35.7
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Steering.....	41
[41.106] Tie rods.....	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels.....	44.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$