

---

# CR920, CR940, CR960, CR970 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	4
SECTION 14 - LIVE PTO .....	13
SECTION 21 - TRANSMISSION .....	15
SECTION 25 - FRONT MECHANICAL DRIVE .....	16
SECTION 29 - HYDROSTATIC SYSTEM .....	19
SECTION 33 - BRAKES AND CONTROLS .....	25
SECTION 35 - HYDRAULIC SYSTEMS .....	26
SECTION 41 - STEERING AXLE .....	31
SECTION 50 - CLIMATE CONTROL .....	34
SECTION 55 - ELECTRICAL SYSTEMS .....	41
SECTION 60 - PRODUCT FEEDING .....	79
SECTION 66 - THRESHING .....	84
SECTION 72 - DISCHARGE BEATER .....	87
SECTION 74 - CLEANING SYSTEMS .....	87
SECTION 80 - GRAIN STORAGE .....	93
SECTION 88 - ACCESSORIES .....	95
SECTION 90 - PLATFORM, CAB, BODYWORK, DECALS .....	98

The following pages are the collation of the contents pages from each section and chapter of the CR920, CR940, CR960, and CR970 Repair manual. Complete Repair part # 87600552.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the CR920, CR940, CR960, and CR970 Combines.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87600553

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Foreword .....	3
	About Improvements .....	3
	Part and Accessories .....	3
	Precautionary Statements .....	4
	Personal Safety .....	4
	Machine Safety .....	4
	Information .....	4
	Safety Precautions .....	4
	Personal Considerations .....	4
	Equipment Considerations .....	5
	General Considerations .....	6
	Operational Considerations .....	6
	Health and Safety Precautions .....	7
	Acids and Alkalis .....	7
	Adhesives and Sealers .....	7
	Antifreeze .....	8
	Battery Acids .....	8
	Brake and Clutch Linings and Pads .....	8
	Brazing .....	8
	Chemical Materials - General .....	8
	Clutch Linings and Pads .....	9
	Corrosion Protection Materials .....	9
	Cutting .....	9
	Dewaxing .....	9
	Do's .....	9
	Don'ts .....	9
	Dusts .....	9
	Electric Shock .....	9
	Exhaust Fumes .....	10
	Fiber Insulation .....	10
	Fire .....	10
	First Aid .....	10
	Foams- Polyurethane .....	10
	Fuels .....	10

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87600553

## Chapter 1 - General Information (Continued)

### CONTENTS

Section	Description	Page
	Gas Cylinders .....	11
	Gases .....	11
	Gas Shielding Welding .....	11
	Gas Welding .....	11
	General Workshop Tools and Equipment .....	11
	Glues .....	12
	High-pressure Air, Lubrication and Oil Test Equipment .....	12
	Legal Aspects .....	12
	Lubricants and Greases .....	12
	Noise Insulation Material .....	12
	Paints .....	12
	Paint Thinners .....	12
	Pressurized Equipment .....	12
	Resistance Welding .....	12
	Sealers .....	12
	Solder .....	12
	Welding .....	12
	Service Techniques .....	13
	General .....	13
	Hoses and Tubes .....	13
	Product Identification .....	14
	Base Unit .....	14
	Engine .....	14
	Straw Chopper (If Equipped) .....	16
	Powered Rear Axle Wheel Motors (If Equipped) .....	16
	Minimum Hardware Tightening Torques .....	17
	Recommended Lubricants And Coolants (North America Only) .....	21

---

# SECTION 10 - ENGINE

BOOK 1 - 87600553

## Chapter 1 - 7.5L Engine Block

### CONTENTS

Section	Description	Page
	Specifications .....	3
	Tightening Torques .....	9
	Special Tools .....	10
	Troubleshooting .....	12
	Description and Operation .....	16
	Overhaul .....	23
	Introduction .....	23
	Injection Pump .....	24
	Timing .....	24
	Cylinder Head .....	28
	Removal .....	28
	Disassembly .....	32
	Inspection and Repair .....	33
	Assembly .....	37
	Engine Front Cover and Timing Gears .....	41
	Timing Gears Checking and Removal .....	41
	Gears - Inspection and Repair .....	44
	Installation .....	44
	Oil Pan .....	46
	Removal .....	46
	Inspection and Repair .....	46
	Installation .....	46
	Flywheel .....	47
	Removal .....	47
	Inspection and Repair .....	48
	Installation .....	48
	Rear Cover Plate .....	49
	Removal .....	49
	Installation .....	49
	Oil Pump .....	51
	Removal .....	51
	Disassembly .....	51
	Inspection and Repair .....	52
	Installation .....	52

---

# SECTION 10 - ENGINE

BOOK 1 - 87600553

## Chapter 1 - 7.5L Engine Block (Continued)

### CONTENTS

Section	Description	Page
	Oil Pressure Relief Valve .....	53
	Removal .....	53
	Installation .....	53
	Camshaft .....	54
	Removal .....	54
	Inspection and Repair .....	54
	Camshaft Bearings .....	55
	Installation .....	55
	Pistons .....	57
	Removal .....	57
	Inspection and Repair .....	58
	Connecting Rod Bush Replacement .....	59
	Cylinder Block Overhaul .....	61
	Cylinder Bore .....	62
	Specifications .....	62
	Sleeving - Boring and Honing .....	63
	Reassembly .....	64
	Installing Piston Assembly Into Block .....	66
	Crankshaft .....	67
	Removal .....	67
	Inspection and Repair .....	68
	Reassembly .....	69
	Front Crankshaft Cassette Oil Seal Replacement .....	72
	Removal .....	72
	Installation .....	74
	Engine Compression Test .....	78
	Test Procedure .....	78
	Test Readings .....	78
	Test Conclusion .....	78

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$