



NEW HOLLAND



TRACTOR REPAIR MANUAL

170–190–210–240 hp TRACTORS

CONTENTS

SECTION 10 – ENGINES

CHAPTER 1 – ENGINE AND LUBRICATION SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS	2
	SPECIAL TOOLS	14
	DESCRIPTION OF OPERATION	15
	TROUBLESHOOTING	24
	OVERHAUL	
10 101	CYLINDER HEAD	29
10 106	ENGINE TIMING GEARS	41
10 102	OIL PAN	43
10 105	PISTONS AND CONNECTING RODS	44
10 001	CYLINDER BLOCK	48
10 103	CRANKSHAFT BEARINGS AND FLYWHEEL	54
10 102	LUBRICATION OIL PUMP	58
10 106	CAMSHAFT	65
10 106	ENGINE TIMING	67
10	COMPRESSION TESTING	68

CHAPTER 2 – COOLING SYSTEM

SECTION	DESCRIPTION	PAGE
10 400	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	3
	TROUBLESHOOTING	5
	OVERHAUL	
10 406	RADIATOR	6
10 402	THERMOSTAT	8
10 414	SENDER	9
10 414	FAN BLADES	9
10 414	VISCOUS CLUTCH	10
10 414	BELT TENSIONER	10
10 414	IDLER PULLEY	11
10 402	WATER PUMP	13

CHAPTER 3 – INDUCTION SYSTEM

SECTION	DESCRIPTION	PAGE
10 200	SPECIFICATIONS	2
	DESCRIPTION OF OPERATION	
	AIR CLEANER	3
	TURBO CHARGER	5
	INTERCOOLER	8
	TROUBLESHOOTING	9
	INTERCOOLER LEAK TEST	11
	OVERHAUL	
10 202	AIR CLEANER	12
10 250	TURBO CHARGER	14
10 250	INTERCOOLER	21

CHAPTER 4 – FUEL SYSTEM

SECTION	DESCRIPTION	PAGE
10 000	SPECIFICATIONS	2
	SPECIAL TOOLS	3
	DESCRIPTION AND OPERATION	4
10 200	TESTING AND DIAGNOSIS	
	LOW PRESSURE SYSTEM	16
	HIGH PRESSURE FUEL SYSTEM	22
	INJECTION TIMING CHECK	22
	FUEL INJECTORS	25
	FUEL SHUT OFF	30
10 220	ADJUSTMENTS	32
	REMOVAL AND INSTALLATION	
10 210	FUEL LIFT PUMP	35
10 223	FUEL SHUT OFF SOLENOID	36
10 210	FUEL INJECTION PUMP	37
10 218	FUEL LINES	44
10 206	FUEL FILTER	48
10 218	FUEL INJECTION	50

SECTION 21 – TRANSMISSION

CHAPTER 1 – OPERATION AND OVERVIEW

SECTION	DESCRIPTION	PAGE
21 000	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	4
	TROUBLESHOOTING AND DIAGNOSIS	33

CHAPTER 2 – SEPARATING THE TRANSMISSION FROM THE ENGINE AND FRONT AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS	1
	DESCRIPTION OF OPERATION	1
	SPECIAL TOOLS	1
	DISASSEMBLY	2

CHAPTER 3 – SEPARATING THE TRANSMISSION FROM THE REAR AXLE

SECTION	DESCRIPTION	PAGE
21 116	SPECIFICATIONS	1
	SPECIAL TOOLS	2
	DESCRIPTION OF OPERATION	2
	DISASSEMBLY	3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$