

SERVICE MANUAL

**P2350 / P3440 / P3550 /
P4460 / P4580 / P4760 /
P4950**
Air Cart

Part number 47827462
1st edition English
April 2017





SERVICE MANUAL

P2350, P3440, P3550 , P4460, P4580, P4760, P4950

Contents

INTRODUCTION

Front axle system	25
[25.400] Non-powered front axle	25.1
Rear axle system.....	27
[27.550] Non-powered rear axle.....	27.1
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.912] Hydraulic seeding fan system.....	35.2
[35.744] Seeding and planting hydraulic circuits	35.3
[35.870] Auxiliary tank fill system hydraulic control.....	35.4
Frames and ballasting	39
[39.110] Drawbar and hitch assembly	39.1
Wheels	44
[44.520] Rear wheels.....	44.1
[44.901] Caster wheels	44.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors.....	55.2
[55.301] Alternator.....	55.3
[55.302] Battery.....	55.4
[55.404] External lighting	55.5
[55.516] Seeding control system	55.6
[55.517] Cab seeding controls.....	55.7
[55.545] Auger.....	55.8

[55.640] Electronic modules	55.9
[55.785] Precision farming system	55.10
[55.DTC] FAULT CODES	55.11
Metering system	61
[61.904] Product metering	61.1
Seeding	77
[77.100] Product handling and delivery drive system	77.1
[77.101] Seeding fan system	77.2
[77.150] Auxiliary tank fill system	77.3
[77.904] Air distribution system	77.4
Platform, cab, bodywork, and decals	90
[90.108] Decals and plates	90.1
[90.110] Operator platform less cab	90.2
[90.118] Protections and footboards	90.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$