

SERVICE MANUAL

RG140.B VHP

RG170.B VHP

RG200.B VHP

Motor Graders

Part Number

48050423D

4th Edition

English 10/2017



NEW HOLLAND

CONSTRUCTION



SERVICE MANUAL

RG140.B Direct drive transmission, Tier 3, made in Brazil [HBZN0140TAF02301 -], RG140.B Torque converter transmission, Tier 3, made in Brazil [NAAF08001 -], RG170.B Direct drive transmission, Tier 3, made in Brazil [HBZN0170HBAF00360 -], RG170.B Torque converter transmission, Tier 3, made in Brazil [NAAF09000 -], RG200.B Direct drive transmission, Tier 3, made in Brazil [NAAF11000 -], RG200.B Torque converter transmission, Tier 3, made in Brazil [HBZN0200TBAF00511 -]

Link Product / Engine

Product	Market Product	Engine
RG140.B Transmissão de acionamento direto, Tier 3, produzido no Brasil [HBZN0140TAF02301 -]	Latin America	F4HE9687W*J101
RG140.B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF08001 -]	Latin America	F4HE9687W*J101
RG170.B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF09000 -]	Latin America	F4HE9687C*J100
RG200.B Transmissão de acionamento direto, Tier 3, produzido no Brasil [NAAF11000 -]	Latin America	F4HE9684L*J100
RG200.B Transmissão do conversor de torque, Tier 3, produzido no Brasil [HBZN0200TBAF00511 -]	Latin America	F4HE9687K*J105

Contents

INTRODUCTION

Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.105] Powershift transmission hydraulic components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.700] Torque converter	21.5
[21.900] Hydraulic pump drive.....	21.6
Front axle system	25
[25.400] Non-powered front axle	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.140] Ballasts and supports	39.2
Steering.....	41
[41.200] Hydraulic control components.....	41.1
Cab climate control	50
[50.100] Heating.....	50.1
[50.104] Ventilation	50.2

[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.302] Battery	55.5
[55.010] Fuel injection system	55.6
[55.024] Transmission control system	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.9
[55.020] Transmission speed sensors	55.10
[55.DTC] FAULT CODES	55.11
Dozer blade and arm	86
[86.110] Dozer blade	86.1
Tools	89
[89.128] Ripper assembly	89.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$