

# SERVICE MANUAL

## T4.55 / T4.65 / T4.75 PowerStar™ Tractor

**Part number 84419869A**  
English  
October 2011



## INTRODUCTORY NOTES

- *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.*
- *The different sections can easily be found by consulting the table of contents on the following pages.*
- *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- *The pages of future updates will be identified by the same print number followed by an additional digit: standard manual first edition 84419869A - 1st update 84419869A1 - 2nd update 84419869A2 - etc. The pages of the update can replace or supplement the pages of the standard manual; the necessary information for the procedure to add or replace the pages is given on the title page of the update. The publication will be completed with an appropriate index. If it is necessary to issue a new updated manual (2nd edition) it will have document number 84419869B, this indicates that the manual is composed of the standard version 84419869A completed with all the updates: 1st update 84419869A1 - 2nd update 84419869A2 - etc.*
- *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries. In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

## IMPORTANT WARNINGS

- *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

No part of the text or illustrations may be copied



PRINTED IN FRANCE

© CNH GLOBAL N.V.

Print no. **84419869A** - 06 - 2011

## CONTENTS

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>					
General instructions . . . . .	1-2	06-11			
Safety regulations . . . . .	3-4-5	06-11			
Tractor refuelling . . . . .	6	06-11			
<b>10 - ENGINE</b>					
<b>CHAPTER 1</b>					
Summary . . . . .	1	06-11			
General specifications	2-3	06-11			
Engine removal-installation . . . . .	4-5-6-7-8-9-10	06-11			
Removal-Installation fuel tank . . . . .	11-12	06-11			
Coolant radiator removal-installation . . . . .	13-14-15	06-11			
Accelerator control cable adjustment . . . . .	16	06-11			
<b>18 - CLUTCH</b>					
Main Data . . . . .	1	06-11			
Torque Specifications . . . . .	2	06-11			
Tools . . . . .	2	06-11			
Sections . . . . .	3	06-11			
Troubleshooting . . . . .	4	06-11			
Removal-Installation - clutch . . . . .	5	06-11			
Clutch Overhaul . . . . .	6-7-8-9	06-11			
Checks and measurements - clutch . . . . .	10-11	06-11			
Adjustments - clutch disengagement levers . . . . .	11	06-11			
Adjustments - clutch pedal . . . . .	12	06-11			
Sectional view of PTO clutch servo control . . . . .	13	06-11			
Description and operation of PTO servo control . . . . .	14-15	06-11			
PTO servo control adjustment . . . . .	16	06-11			
PTO engaged switch adjustment . . . . .	17	06-11			
<b>21 - GEAR TRANSMISSION</b>					
<b>Chapter 1 - Mechanical transmission</b>					
Main Data . . . . .	1-2	06-11			
Torque Specifications . . . . .	2-3	06-11			
Tools . . . . .	4	06-11			
Sections . . . . .	5-6-7	06-11			
Description and operation	8	06-11			
Troubleshooting . . . . .	8-9	06-11			
Removal-Installation - rear transmission - gearbox casing . . . . .	10-11-12-13	06-11			
Disassembly-Assembly - transmission-gearbox casing . . . . .	17-18	06-11			
Disassembly-Assembly - clutch casing . . . . .	19-20-21	06-11			
Sealing compound application diagram . . . . .	22	06-11			
Transmission oil cooler removal-installation . . . . .	23	06-11			
<b>CHAPTER 3 - Power Shuttle transmission</b>					
Main Data . . . . .	1-2	06-11			
Torque Specifications . . . . .	3	06-11			
Tools . . . . .	4	06-11			
Sections . . . . .	5-6-7	06-11			
Description and operation .	8	06-11			
Troubleshooting . . . . .	8	06-11			
Disassembly-Assembly - clutch casing . . . . .	9-10-11	06-11			
Main clutch adjustments . .	12	06-11			
<b>23 - DRIVE LINES</b>					
Main Data . . . . .	1	06-11			
Torque Specifications . . . . .	2	06-11			
Sections . . . . .	3-4	06-11			
Description and operation .	5	06-11			
Troubleshooting . . . . .	6	06-11			
Drive shafts and guard. Disassembly - Assembly . . .	7	06-11			

	Page	Date		Page	Date
Removal-Installation - drive gear casing .....	8	06-11	Adjustments - bevel drive	14-15-16	06-11
<b>25 - FRONT AXLE MECHANICAL TRANSMISSION</b>			Removal - Installation side gear casing .....	17-18-19-20	06-11
<b>CHAPTER 1 - Front mechanical transmission</b>			Disassembly-Assembly - drive wheel shaft .....	21-22	06-11
Main Data .....	1-2	06-11	<b>31 - POWER TAKE-OFF</b>		
Torque Specifications ....	3-4	06-11	<b>CHAPTER 1 - Mechanical power take-off</b>		
Tools .....	5	06-11	Main Data .....	1-2	06-11
Sections .....	6	06-11	Torque Specifications ....	3-4	06-11
Removal-Installation - front axle .....	8-9-10	06-11	Sections .....	5-6	06-11
Front axle. Disassembly - Assembly .....	11-12-13-14-15-16-17-18	06-11	Description and operation .	7-8	06-11
Replacing steering knuckle pins and bearings .....	19	06-11	Troubleshooting .....	8	06-11
Adjustments - steering knuckle bearings .....	20-21	06-11	<b>33 - BRAKES</b>		
Adjustments - bevel drive	22-23-24-25-26-27-28	06-11	Main Data .....	1-2	06-11
Overhaul - front differential	29	06-11	Torque Specifications ....	2	06-11
LIM-SLIP self-locking differential .....	30-31	06-11	Sections .....	3	06-11
Checking leading wheel alignment .....	32	06-11	Description and operation .	4	06-11
Disassembly-Assembly - front epicyclic final drive ..	33-34	06-11	Troubleshooting .....	5-6	06-11
<b>27 - REAR MECHANICAL TRANSMISSION</b>			Removal-Installation - service brake .....	7	06-11
Main Data .....	1-2	06-11	Removal-Installation - service brake pump .....	8-9	06-11
Torque Specifications ....	3-4	06-11	Adjustments - service brake pedals travel .....	10	06-11
Tools .....	5	06-11	Service brake circuit air bleeding .....	11-12	06-11
Sections .....	6-7	06-11	<b>35 - HYDRAULIC SYSTEMS</b>		
Description and operation .	8	06-11	<b>CHAPTER 1 - Rear mechanical hydraulic lift</b>		
Troubleshooting .....	8	06-11	Main Data .....	2	06-11
Disassembly-Assembly - transmission-gearbox casing .....	9-10-11-12	06-11	Torque Specifications ....	2-3	06-11
Adjustments - differential lock engagement sleeve position .....	13	06-11	Tools .....	3	06-11
			Sections .....	4	06-11
			Troubleshooting .....	5	06-11
			Description and operation .	6-7-8-9-10-11	06-11
			Lift internal controls. Disassembly - Assembly .....	12-13-14-15	06-11

	Page	Date		Page	Date
Draft reading unit Disassembly - Assembly .....	16-17	06-11	Bucket control cylinder removal-installation .....	15	06-11
Lift arms shaft. Disassembly - Assembly .....	18-19	06-11	Replacement of pins .....	16	06-11
Removal-Installation - lift control valve .....	20	06-11			
Adjusting the lift .....	21-22-23	06-11			
<b>CHAPTER 2 - Open centre system auxiliary control valves</b>			<b>41 - STEERING</b>		
Main Data .....	2	06-11	<b>CHAPTER 1 - Steering</b>		
Tools .....	2	06-11	Main Data .....	2	06-11
Torque Specifications .....	2	06-11	Torque Specifications .....	2	06-11
Sections .....	3-4	06-11	Tools .....	3	06-11
Description and operation .	5-6-7-8	06-11	Description and operation .	4-5-6	06-11
Auxiliary control valves. Disassembly - Assembly ...	9-10-11	06-11	View of hydrostatic steering control valve components .	7	06-11
<b>CHAPTER 3 - Trailer brakes auxiliary control valves</b>			Troubleshooting .....	8-9	06-11
Sections .....	1	06-11	Replacement - hydrostatic steering wheel .....	10	06-11
Description and operation .	1-2-3-4-5-6-7	06-11	Removal-Installation - hydrostatic steering control valve .....	11-12	06-11
Troubleshooting .....	8-9-10	06-11	Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	06-11
<b>CHAPTER 8 - Front Loader</b>			Hydrostatic steering control valve bench testing .....	29-30	06-11
Main Data .....	1	06-11	Pressure relief valve testing	31	06-11
Sections .....	2	06-11	Steering control cylinder. Removal - Installation .....	32-33	06-11
Torque Specifications .....	3	06-11	Steering control cylinder. Disassembly-Assembly ..	34-35	06-11
Troubleshooting .....	4-5	06-11			
Parking the front loader ...	6	06-11	<b>50 - CAB HVAC SYSTEM</b>		
Front loader arm connection bracket Removal-Installation .....	7	06-11	Safety regulations .....	2	06-11
Replacement of control struts (mod. MSL) .....	8	06-11	Main Data .....	3	06-11
Replacement of triangular articulation levers (mod. MSL) .....	9	06-11	Tools .....	4	06-11
Bucket support device removal-installation .....	10	06-11	Operating principles .....	5	06-11
Position indicator disassembly-assembly .....	11	06-11	Conditioning system components .....	6-7-8-9-10	06-11
Bushing replacement .....	12-13	06-11	Cab controls .....	11-12-13	06-11
Loader cylinder removal-installation .....	14	06-11	Testing operation and cooling .....	14-15	06-11

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$