

---

# TC29D, TC33D REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	3
SECTION 18 - CLUTCHES .....	7
SECTION 21 - GEAR TRANSMISSION .....	8
SECTION 25 - FWD AXLE .....	9
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	11
SECTION 29 - HYDROSTATIC TRANSMISSION .....	11
SECTION 31 - POWER TAKE-OFF SYSTEMS .....	14
SECTION 33 - BRAKES .....	14
SECTION 35 - HYDRAULIC SYSTEM .....	15
SECTION 41 - STEERING SYSTEMS .....	16
SECTION 44 - WHEELS AND TIRES .....	17
SECTION 55 - ELECTRICAL SYSTEM .....	18
SECTION 90 - PLATFORM .....	20

The following pages are the collation of the contents pages from each section and chapter of the TC29D and TC33D Repair manual. Complete Repair part # 87036756

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC29D and TC33D Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87036757

## Chapter 1 - General Information

### CONTENTS

Section	Description	Page
	Personal Safety .....	2
	Machine Safety .....	2
	Safety .....	3
	Precautionary Statements .....	3
	Servicing the Tractor .....	3
	Operating the Tractor .....	4
	Driving the Tractor .....	4
	Operating the PTO .....	5
	Diesel Fuel .....	5
	Safety Frame (ROPS) .....	5
	Safety Decals .....	6
	Instruction Decals .....	7
	Ecology and the Environment .....	11
	Specifications .....	13
00 400	Lubrication and Maintenance .....	24
	Lubrication .....	24
	Recommended Lubricants and Coolants .....	24
	Liquid Ballast (Optional) .....	25
	Tire Pressure .....	25

---

# SECTION 10 - ENGINE

BOOK 1 - 87036757

## Chapter 1 - Engine Systems

### CONTENTS

Section	Description	Page
	General Information . . . . .	3
	Description and Operation . . . . .	3
	Cylinder Head and Valve Train Components . . . . .	4
	Cylinder Block Assembly . . . . .	4
	Engine Overhaul . . . . .	6
	Engine Disassembly . . . . .	6
	Fuel Injector and Glow Plug Removal . . . . .	7
	Oil Pressure Switch . . . . .	8
	Temperature Sending Switch and Alternator Removal . . . . .	8
	Fan, Water Pump, and External Oil Tube Removal . . . . .	8
	Air Inlet Manifold Removal . . . . .	9
	Valve Cover Removal . . . . .	9
	Rocker Arm Shaft and Support Bracket Removal . . . . .	9
10 101	Cylinder Head Removal . . . . .	10
	Valve Tappet Removal . . . . .	10
	Fuel Shutoff Solenoid Removal . . . . .	10
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft . . . . .	11
	Disassembly, Inspection, Fits, Clearances, and Assembly of Component Assemblies . . . . .	16
10 101	Cylinder Head Disassembly . . . . .	16
	Cylinder Head Inspection and Repair . . . . .	16
	Valve Seats . . . . .	17
	Valves . . . . .	18
	Valve Guides . . . . .	19
	Valve Springs . . . . .	20
	Rocker Arms . . . . .	20
	Push Rods . . . . .	21
	Cylinder Head Assembly . . . . .	22
	Cylinder Block . . . . .	22
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection . . . . .	23
	Pistons, Rings, and Connecting Rod Assembly . . . . .	28
10 103	Crankshaft . . . . .	29
	Crankshaft Bearing (Bushing) Inspection . . . . .	30
	Crankshaft Bearing (Bushing) Replacement . . . . .	31
	Crankshaft Main Bearing Assembly . . . . .	31
	Port Block Removal . . . . .	32
	Port Block Installation . . . . .	32
10 106	Timing Gear . . . . .	32
	Camshaft Disassembly . . . . .	33
	Camshaft Inspection . . . . .	33
	Camshaft Assembly . . . . .	33
10 103	Flywheel . . . . .	34
10 102	Timing Gear Housing . . . . .	34

---

# SECTION 10 - ENGINE

BOOK 1 - 87036757

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

Section	Description	Page
	Engine Reassembly .....	35
10 103	Crankshaft and Bearing Holder Reassembly .....	35
	Rear Oil Seal and Backplate Assembly .....	35
	Flywheel .....	36
10 105	Pistons and Connecting Rods .....	36
	Oil Suction Pipe and Suction Strainer .....	37
	Oil Sump .....	37
10 106	Timing Gear Cover, Timing Gears, and Camshaft Assembly .....	38
10 106	Idle Gear, Oil Pump, and Injection Timing .....	38
	Timing Gear Cover .....	38
	Crankshaft Pulley .....	39
	Fuel Injection Pump Assembly .....	39
	Power Steering Pump .....	39
10 101	Head Gasket Selection .....	40
	Head Gasket Selection Chart .....	40
	Cylinder Head Assembly .....	40
10 106	Valve Clearance Adjustment .....	41
	Valve Cover .....	42
	Water Pump and Cooling Fan Assembly .....	42
	Air Intake Manifold Assembly .....	42
	External Oil Tube .....	43
	Glow Plug and Connector .....	43
	Fuel Injector .....	43
10 218	Fuel Piping .....	44
	Alternator and Temperature Sender Switch .....	44
	Exhaust Manifold .....	44
	Engine Lubrication System .....	45
10 304	Description .....	45
10 206	Oil Filter .....	48
10 304	Oil Pump .....	48
	Engine Oil Pressure Check .....	50
	Oil Pressure Relief Valve .....	51
	Oil Consumption .....	51
	Cooling System .....	52
10 400	Description and Operation .....	52
	Maintenance .....	54
	Coolant .....	54
	Radiator Cap .....	54
10 402	Thermostat .....	55
10 402	Water Pump .....	55
10 414	Cooling Fan .....	55

---

# SECTION 10 - ENGINE

BOOK 1 - 87036757

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Cooling System Overhaul .....	56
10 406	Radiator .....	56
10 402	Water Pump .....	60
10 402	Thermostat .....	62
	Troubleshooting .....	64
	Specifications .....	68
	Metric Bolt Torque Specifications .....	76
	Special Tools .....	77

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$