

---

# TC30 REPAIR MANUAL

## COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE SYSTEMS .....	3
SECTION 18 - CLUTCHES .....	7
SECTION 21 - GEAR TRANSMISSION .....	8
SECTION 25 - FRONT-WHEEL DRIVE FRONT AXLE .....	8
SECTION 27 - DIFFERENTIAL, REAR AXLE .....	9
SECTION 29 - HYDROSTATIC TRANSMISSION .....	9
SECTION 31 - POWER TAKE-OFF SYSTEMS .....	11
SECTION 33 - BRAKES .....	12
SECTION 35 - HYDRAULIC SYSTEM .....	12
SECTION 41 - STEERING SYSTEMS POWER STEERING .....	14
SECTION 44 - WHEELS AND TIRES .....	16
SECTION 55 - ELECTRICAL SYSTEM .....	17
SECTION 72 - SEPARATING THE TRACTOR .....	20
SECTION 90 - PLATFORM .....	20

The following pages are the collation of the contents pages from each section and chapter of the TC30 Tractor Repair manual. Complete Repair part # 87021725.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC30 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87021726

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	2
	Precautionary Statements .....	3
	Safety .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	8
	Product Identification Plate .....	11
	International Symbols .....	12
	Specifications .....	13
	General Dimensions .....	19
	Minimum Hardware Tightening Torques .....	22
	Lubricants .....	24
	Adjustments .....	25
	Tire Inflation Pressure .....	25

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

## Chapter 1 - Engine

### CONTENTS

Section	Description	Page
10 000	Specifications .....	4
	Metric Bolt Torque Specifications .....	11
	Special Tools .....	12
	Compression Test and Tools .....	12
	General Information .....	13
	Description of Operation .....	13
	Cylinder Head and Valve Train Components .....	14
	Cylinder Block Assembly .....	14
	Troubleshooting .....	15
	Engine Overhaul .....	20
	Engine Disassembly .....	20
	Fuel Injector and Glow Plug Removal .....	21
	Oil Pressure Switch .....	21
	Temperature Sending Switch and Alternator Removal .....	22
	Fan, Water Pump, and External Oil Tube Removal .....	22
	Air Inlet Manifold Removal .....	22
	Valve Cover Removal .....	23
	Rocker Arm Shaft and Support Bracket Removal .....	23
	Cylinder Head Removal .....	23
	Valve Tappet Removal .....	24
	Fuel Shutoff Solenoid Removal .....	24
	Engine Timing Gear Cover, Timing Gears, and Cam Shaft .....	24
	Disassembly, Inspection, Fits, Clearances and Assembly of Component Assemblies .....	30
10 101	Cylinder Head Disassembly .....	30
	Cylinder Head Inspection and Repair .....	30
	Valve Seats .....	31
	Valves .....	32
	Valve Guides .....	33
	Valve Springs .....	34
	Rocker Arms .....	34
Push Rods .....	35	

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Cylinder Head Assembly .....	36, 54
	Cylinder Block .....	36
10 105	Pistons, Piston Rings, and Connecting Rods Disassembly and Inspection .....	37
	Pistons, Rings, and Connecting Rod Assembly .....	42
10 103	Crankshaft .....	43
	Crankshaft Bearing (bushing) Inspection .....	44
	Crankshaft Bearing (bushing) Replacement .....	45
	Crankshaft Main Bearing Assembly .....	45
	Port Block Removal .....	46
	Port Block Installation .....	46
10 106	Timing Gear .....	46
	Camshaft Disassembly .....	47
	Camshaft Inspection .....	47
	Camshaft Assembly .....	47
10 103	Flywheel .....	48, 50
	Timing Gear Housing .....	48
	Engine Reassembly .....	49
	Crankshaft and Bearing Holder Reassembly .....	49
	Rear Oil Seal and Backplate Assembly .....	49
	Pistons and Connecting Rods .....	50
	Oil Suction Pipe and Suction Strainer .....	51
	Oil Sump .....	51
	Timing Gear Cover, Timing Gears, and Camshaft Assembly .....	51
	Idler Gear, Oil Pump, and Injection Timing .....	52
	Timing Gear Cover .....	52
	Crankshaft Pulley .....	52
	Fuel Injection Pump Assembly .....	53
	Power Steering Pump .....	53
	Head Gasket Selection .....	54
	Head Gasket Selection Chart .....	54
	Valve Clearance Adjustment .....	55
	Valve Cover .....	55

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87021726

## Chapter 1 - Engine (Continued)

### CONTENTS

Section	Description	Page
	Water Pump and Cooling Fan Assembly .....	56
	Air Intake Manifold Assembly .....	56
	External Oil Tube .....	56
	Glow Plug and Connector .....	56
	Fuel Injector .....	57
	Fuel Piping .....	57
	Alternator and Temperature Sender Switch .....	57
	Exhaust Manifold .....	58
	Engine Lubrication System .....	58
10 304	Description .....	58
	Model TC30 Oil Flow Chart .....	60
10 206	Oil Filter .....	61
10 304	Oil Pump .....	61
	Engine Oil Pressure Check .....	62
	Oil Pressure Relief Valve .....	64
	Oil Consumption .....	64
	Cooling System .....	65
10 400	Description of Operation .....	65
	Maintenance .....	66
	Coolant .....	66
	Radiator Cap .....	66
10 402	Thermostat .....	67, 73
10 402	Water Pump .....	67
10 414	Cooling Fan .....	67
	Cooling System Overhaul .....	68
10 406	Radiator .....	68
10 402	Water Pump .....	71

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$