

SERVICE MANUAL

TL60E / TL75E / TL85E / TL95E
Tractor

Part number 47835583A

English
February 2017





SERVICE MANUAL

TL60E 12x4, 4WD, new cab [HCCZTL60CFC438464 -], TL60E Without cab, 12x4, 4WD [ZDCL05524 -], TL75E 12x4, 2WD, new cab [HCCZTL75CFC438464 -], TL75E Without cab, 2WD, 12x4 [ZDCY12367 -], TL75E 12x12, 20x12, 4WD, new cab [HCCZTL75CFC437744 -], TL85E Without cab, 4WD [ZDCL04468 -], TL85E Without cab, 2WD [ZEC134399 -], TL85E 12x4, 12x12, 2WD, new cab [HCCZTL85CFC437744 -], TL85E 12x12, 20x12, 4WD, new cab [HCCZTL75CFC438464 -], TL95E Without cab, 4WD [ZDC112512 -], TL95E 12x12, 20x12, 4WD, new cab [HCCZTL95EFC438464 -]

Link Product / Engine

Product	Market Product	Engine
TL60E 12x4, 4WD, cabine nova [HCCZTL60CFC438464 -]	Latin America	8035.05.716
TL60E Sem cabine, 12x4, 4WD [ZDCL05524 -]	Latin America	8035.05.716
TL75E 12x4, 2WD, cabine nova [HCCZTL75CFC438464 -]	Latin America	8045.05.260
TL75E 12x12, 20x12, 4WD, cabine nova [HCCZTL75CFC437744 -]	Latin America	8045.05.260
TL85E Sem cabine, 4WD [ZDCL04468 -]	Latin America	8045.25.260
TL85E Sem cabine, 2WD [ZEC134399 -]	Latin America	8045.25.260
TL85E 12x4, 12x12, 2WD, cabine nova [HCCZTL85CFC437744 -]	Latin America	8045.25.260
TL85E 12x12, 20x12, 4WD, cabine nova [HCCZTL75CFC438464 -]	Latin America	8045.25.260
TL95E Sem cabine, 4WD [ZDC112512 -]	Latin America	8045.25.262
TL95E 12x12, 20x12, 4WD, cabine nova [HCCZTL95EFC438464 -]	Latin America	8045.25.262

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.106] Valve drive and gears	10.2
[10.101] Cylinder heads	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.216] Fuel tanks	10.6
[10.218] Fuel injection system.....	10.7
[10.254] Intake and exhaust manifolds and muffler	10.8
[10.400] Engine cooling system	10.9
Clutch	18
[18.110] Clutch and components	18.1
Transmission	21
[21.114] Mechanical transmission	21.1
[21.160] Creeper	21.2
[21.162] Reverser	21.3
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes.....	33.1
Brakes and controls	33
[33.202] Hydraulic service brakes.....	33.2
[33.110] Parking brake or parking lock	33.3
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.322] Regulated/Low pressure system	35.3
[35.204] Remote control valves	35.4
[35.114] Three-point hitch control valve	35.5
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch	37.1
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders	41.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$