
TL70, TL80, TL90, TL100 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL GUIDELINES	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	3
SECTION 21 - TRANSMISSIONS	3
SECTION 23 - DRIVE LINES	6
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	7
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	8
SECTION 31 - POWER TAKE-OFF	8
SECTION 33 - BRAKES	10
SECTION 35 - HYDRAULIC SYSTEMS	11
SECTION 41 - STEERING	17
SECTION 44 - AXLES AND WHEELS	17
SECTION 50 - AUXILIARY UNITS	18
SECTION 55 - ELECTRICAL SYSTEM	19
SECTION 90 - BODYWORK AND DRIVING POSITION	25

The following pages are the collation of the contents pages from each section and chapter of the TL Series Tractor Repair manual. Complete Repair part # 87043516.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TL Series Tractors.

SECTION 00 - GENERAL GUIDELINES

BOOK 1 - 87043517

Chapter 1 - General Guidelines

CONTENT

Description	Page
General Instructions	1

SECTION 10 - ENGINE

BOOK 1 - 87043517

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	General specifications	2
	Data	5
	Tightening Torques	22
	Tools	23
	Cross-sectional views	25
	Lubrication diagram	27
	Cooling system diagram	28
	Fault diagnosis	29
10 001 10	Engine R.I.	33
10 001 30	Engine. Compression Test	48
10 001 53	Engine D.A. Checks, dimensions and repairs	49
10 101 53	Valve guides - Replacement	91
10 101 60	Injector sleeve - Replacement	95
10 102 70	Crankshaft front seal - Replacement	97
10 106 12	Valve tappet clearance - Adjustment	100
10 218 30	Engine injector R.I.	103
10 246 14	Bosch injection pump R.I. Timing. Air bleed	106
10 402 10	Coolant pump R.I.	114
10 402 28	Coolant pump D.A.	117
10 402 30	Thermostat valve R.I.	118
10 406 10	Radiator R.I.	122
10 414 10	Coolant pump and generator drive belts. Tension adjustment	126

SECTION 18 - CLUTCH

BOOK 2 - 87043518

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Clutches. General specifications	2
	Tightening Torques	3
	Tools	3
	Cross-sectional views	4
	Fault diagnosis	5
	Checks, dimensions and repairs	6
18 100 40	Main transmission clutch release - Adjustment	8
18 110 10	Clutch R.I.	9
18 110 30	Dual Clutch 12"/12" - Test bench overhaul and adjustment	21

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

Chapter 1 - Transmission and range gear (12 x 4)

CONTENTS

Section	Description	Page
	Transmission and range gear. Data	2
	Tightening Torques	3
	Tools	4
	Cross-sectional views	6
	Description and Operation	8
	Fault diagnosis	8
	Gearbox/transmission casing R.I. (See operation 21 118 12)*	
	Gearbox/transmission casing D.A. and adjustments	(See operation 21 118 85)*

*Note: These operations are covered in Section 27.

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

Chapter 2 - Reverser

CONTENTS

Section	Description	Page
	Transmission with range gear and reverser. Data	2
	Tightening Torques	3
	Tools	4
	Cross-sectional views	4
	Description and Operation	6
	Fault diagnosis	6
21 110 85	Clutch-reverser casing. Disassembly-Assembly	7

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

Chapter 3 - OVER DRIVE Unit

CONTENTS

Section	Description	Page
	OVER DRIVE transmission data	1
	Tightening Torques	2
	Tools	3
	Cross-sectional views	3
	Description and Operation	5
	Fault diagnosis	5
21 110 10	OVER DRIVE Unit R.I.	6
21 110 87	OVER DRIVE Casing - Replacement	7

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

Chapter 4 - 24x12 Mechanical Shuttle Transmission with Dual Command (HI-LO)

CONTENTS

Section	Description	Page
	Data	2
	Tightening Torques	4
	Tools	5
	Cross-sectional views	6
	Description and Operation	10
	Fault diagnosis	16
21 110 10	Clutch casing with Dual Command (2 Speed Power Shift) R.I.	18
21 110 87	Clutch casing with Dual Command (2 Speed Power Shift) D.A.	27
21 168 05	Dual Command (HI-LO) linkage adjustment	36
21 168 21	Dual Command (HI-LO) solenoid valve R.I.	37
21 168 22	Dual Command (HI-LO) control valve R.I.	41
21 168 23	Dual Command (HI-LO) control valve D.A.	45

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87043518

Chapter 5 - Reverser and creeper unit

CONTENTS

Section	Description	Page
	Data	2
	Tightening Torques	3
	Tools	4
	Cross-sectional views	6
	Description and Operation	8
	Fault diagnosis	8
21 110 87	Reverser-clutch casing and creeper unit D.A.	9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$