

SERVICE MANUAL

TL 75 / TL 85 / TL 95 POWER SHUTTLE - Tractor

Part number 47848279A

English
February 2017





SERVICE MANUAL

TL75E Power shuttle 12x12, new cab [HCCZTL75EFC438462 -], TL75E Power shuttle 12x12, without cab [HCCZTL75EFC438462 -], TL85E Power shuttle 12x12, without cab [HCCZTL85EFC438462 -], TL85E Power shuttle 12x12, new cab [HCCZTL85EFC438462 -], TL95E Power shuttle 12x12, without cab [HCCZTL95EFC438462 -], TL95E Power shuttle 12x12, new cab [HCCZTL95EFC438462 -]

Link Product / Engine

| Product | Market Product | Engine |
|---|-----------------------|---------------|
| TL75E Power shuttle 12x12, cabine nova [HCCZTL75EFC438462 -] | Latin America | 8045.05.260 |
| TL75E Power shuttle 12x12, sem cabine [HCCZTL75EFC438462 -] | Latin America | 8045.05.260 |
| TL85E Power shuttle 12x12, sem cabine [HCCZTL85EFC438462 -] | Latin America | 8045.05.260 |
| TL85E Power shuttle 12x12, cabine nova [HCCZTL85EFC438462 -] | Latin America | 8045.25.260 |
| TL95E Power shuttle 12x12, sem cabine [HCCZTL95EFC438462 -] | Latin America | 8045.05.260 |
| TL95E Power shuttle 12x12, cabine nova [HCCZTL95EFC438462 -] | Latin America | 8045.25.262 |

Contents

INTRODUCTION

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.106] Valve drive and gears | 10.2 |
| [10.101] Cylinder heads | 10.3 |
| [10.105] Connecting rods and pistons | 10.4 |
| [10.103] Crankshaft and flywheel..... | 10.5 |
| [10.216] Fuel tanks | 10.6 |
| [10.218] Fuel injection system..... | 10.7 |
| [10.254] Intake and exhaust manifolds and muffler | 10.8 |
| [10.400] Engine cooling system | 10.9 |
| Clutch | 18 |
| [18.110] Clutch and components | 18.1 |
| [18.112] Slip clutch or flywheel damper | 18.2 |
| Transmission | 21 |
| [21.112] Power shuttle transmission..... | 21.1 |
| [21.134] Power shuttle transmission external controls | 21.2 |
| [21.104] Power shuttle transmission lubrication system..... | 21.3 |
| [21.154] Power shuttle transmission internal components | 21.4 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| [23.304] Four-Wheel Drive (4WD) gearbox | 23.2 |
| [23.314] Drive shaft..... | 23.3 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |

| | |
|---|-----------|
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| Rear axle system | 27 |
| [27.100] Powered rear axle | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO) | 31 |
| [31.104] Rear electro-hydraulic control | 31.1 |
| [31.110] One-speed rear Power Take-Off (PTO) | 31.2 |
| [31.116] Three-speed rear Power Take-Off (PTO) | 31.3 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems | 35.1 |
| [35.104] Fixed displacement pump | 35.2 |
| [35.204] Remote control valves | 35.3 |
| [35.114] Three-point hitch control valve | 35.4 |
| Hitches, drawbars, and implement couplings | 37 |
| [37.110] Rear three-point hitch | 37.1 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Steering | 41 |
| [41.200] Hydraulic control components | 41.1 |
| [41.206] Pump | 41.2 |
| [41.216] Cylinders | 41.3 |
| Wheels | 44 |
| [44.511] Front wheels | 44.1 |
| [44.520] Rear wheels | 44.2 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$