

---

# TN60DA, TN60SA, TN70DA, TN70SA, TN75DA, TN75SA, TN85DA, TN95DA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL .....	2
SECTION 10 - ENGINE .....	2
SECTION 18 - CLUTCH .....	9
SECTION 21 - TRANSMISSIONS .....	11
SECTION 23 - FWD TRANSFER BOX AND AUTO FWD .....	14
SECTION 25 - FRONT AXLE (FWD) .....	15
SECTION 27 - REAR MECHANICAL DRIVE .....	17
SECTION 31 - MECHANICAL POWER TAKE-OFF .....	17
SECTION 33 - BRAKING SYSTEM .....	18
SECTION 35 - HYDRAULIC SYSTEM .....	18
SECTION 41 - STEERING .....	21
SECTION 44 - AXLES AND WHEELS .....	22
SECTION 50 - CAB AIR CONDITIONING SYSTEM .....	22
SECTION 55 - ELECTRICAL SYSTEM .....	23
SECTION 90 - PLATFORM, CAB, BODYWORK .....	29

The following pages are the collation of the contents pages from each section and chapter of the TNDA and TNSA Series Repair manual. Complete Repair part # 87393595.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNDA and TNSA Series Tractors.

---

## SECTION 00 - GENERAL

BOOK 1 - 87393596

### Chapter 1 - General

#### CONTENTS

Section	Description	Page
	General Instructions .....	3
	Health and Safety .....	5
	Precautionary Statements .....	15
	Safety .....	16
	Ecology and the Environment .....	19
	Minimum Hardware Tightening Torques .....	20
	Federal Emissions Warranty .....	22
	Lubricants and Fluids .....	25

## SECTION 10 - ENGINE

BOOK 1 - 87393596

### Chapter 1 - Engine (Three-Cylinder)

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	10
	Tightening Torques .....	12
	Sectional Views .....	13
	Engine Troubleshooting .....	15
	Overhaul .....	19
10 001 10	Engine .....	19
	Removal .....	19
	Installation .....	20
10 001 30	Compression Test .....	21
10 001 54	Disassembly .....	22
	Assembly .....	32
	Checks, Dimensions and Repairs .....	41
	Cylinder Block .....	41

---

# SECTION 10 - ENGINE

BOOK 1 - 87393596

## Chapter 1 - Engine (Three-Cylinder) (Continued)

### CONTENTS

Section	Description	Page
	Crankshaft .....	43
	Main Bearings .....	45
	Flywheel .....	46
	Connecting Rods .....	47
	Pistons .....	48
	Valves .....	51
	Tappets .....	51
	Camshaft .....	52
	Valve Timing .....	53
	Cylinder Head .....	54
	Valve Seats .....	55
10 101 53	Valve Guides .....	56
10 101 60	Injector Sleeves .....	59
10 102 70	Crankshaft Front Oil Seal .....	61
10 106 12	Valve/Rocker Arm .....	63
10 254 44	Exhaust Pipe .....	65
	Removal .....	65
	Installation .....	65

---

# SECTION 10 - ENGINE

BOOK 1 - 87393596

## Chapter 2 - Cooling System (Three-Cylinder)

### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional Views .....	4
	Description and Operation .....	5
	Cooling System .....	5
	Radiator .....	5
	Thermometer .....	5
	Thermostat .....	5
	Overhaul .....	6
10 402 11	Coolant Pump .....	6
	Removal .....	6
	Installation .....	7
10 402 28	Disassembly .....	8
	Assembly .....	8
10 414 10	Drive Belt Tension Adjustment .....	9
10 402 30	Cooling System Thermostat .....	10
	Removal .....	10
	Installation .....	11
10 406 10	Radiator .....	12
	Removal .....	12
	Installation .....	15

---

## SECTION 10 - ENGINE

BOOK 1 - 87393596

### Chapter 3 - Lubrication System (Three-Cylinder)

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	3
	Sectional View .....	4
	Description and Operation .....	5
	Oil Filter .....	5
	Low Oil Indicator .....	5
	Oil Pump .....	6

## SECTION 10 - ENGINE

BOOK 1 - 87393596

### Chapter 4 - Fuel System (Three-Cylinder)

#### CONTENTS

Section	Description	Page
	Specifications .....	2
	Special Tools .....	4
	Description and Operation .....	6
	Fuel Injection Pump (Bosch) .....	6
	Turbocharged Models .....	6
	All Models .....	8
	Overhaul .....	9
10 216 10	Fuel Tank .....	9
	Removal .....	9
	Installation .....	10
10 218 30	Fuel Injectors .....	11
	Removal .....	11
	Installation .....	12
10 246 14	Injection Pump .....	13
	Removal .....	13
	Lock Timing the Injection Pump On a Workbench .....	19
	Installation .....	24
	Check Fuel Injection Pump Timing with Pump Installed on Tractor .....	25

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$