
TN60VA, TN75VA, TN95VA REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - TRANSMISSIONS	11
SECTION 23 - FWD TRANSFER BOX AND AUTO FWD	13
SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION	15
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	19
SECTION 31 - MECHANICAL POWER TAKE-OFF	20
SECTION 33 - BRAKES	21
SECTION 35 - HYDRAULIC SYSTEMS	22
SECTION 41 - STEERING	25
SECTION 44 - AXLES AND WHEELS	27
SECTION 50 - CAB CLIMATE CONTROL	28
SECTION 55 - ELECTRICAL SYSTEM	30
SECTION 90 - PLATFORM, CAB, BODYWORK	38

The following pages are the collation of the contents pages from each section and chapter of the TNVA Series Repair manual. Complete Repair part # 87352279.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNVA Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87352280

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87352280

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Engine Type	3
	Timing System	4
	Valve Timing Gears	4
	Crankcase and Cylinder Block	5
	Crankshaft and Bearings	6
	Connecting Rod	7
	Piston	8
	Tappet	8
	Rocker Arm and Valve	9
	Rotating Counterweight Dynamic Balancer	9
	Cylinder Head	10
	Tightening Torques	11
	Special Tools	12

SECTION 10 - ENGINE

BOOK 1 - 87352280

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Description and Operation	14
	Sectional Views	14
	Troubleshooting	18
	Overhaul	22
	Engine	22
10 001 10	Removal	22
	Installation	28
10 001 30	Compression Test	29
10 001 54	Disassembly	30
	Assembly	46
	Crank, Main Bearings and Thrust Rings	46
	Rear Cover with Seal and Engine Flywheel	48
	Synchronizing the Timing Gears	49
	Bosch Injection Pump	50
	Cylinder Head	50
	Valve and Rocker Arm	51
	Fuel Injectors	52
	Cooling System Belt	53
	Cylinder Block	54
	Inspection	54
	Crankshaft and Main Bearings	56
	Crankshaft Inspection	56
	Main Bearing Inspection	58
	Main Bearing Cap Bolt Inspection	58
10 102 70	Crankshaft Front Oil Seal	59
	Removal	59
	Installation	60
	Engine Flywheel	61
	Refacing	61
	Flywheel Bolts	61
	Inspection	61

SECTION 10 - ENGINE

BOOK 1 - 87352280

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Connecting Rods	62
	Inspection	62
	Pistons with Rings, Pins, Connecting Rods, Big End Caps and Bearings	63
	Inspection	63
	Assembly	64
	Installation	65
	Valves, Tappets and Camshaft	67
	Valves, Grinding	67
	Dimensions (mm) of Valves and Valve Guides	67
	Valve Timing Check	68
	Tappets Inspection	68
	Camshaft Inspection	69
	Cylinder Head	70
	Inspection	70
	Valve Seats, Grinding	71
10 101 53	Valve Guides, Replacement	72
	Rotating Counterweight Dynamic Balancer	75
	Assembly	76
	Installation	76
10 254 44	Exhaust Pipe	77
	Removal	77
	Installation	77

SECTION 10 - ENGINE

BOOK 1 - 87352280

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Description and Operation	4
	Sectional Views	4
	Overhaul	6
	Thermostat	6
	Flushing the System (Models without Cabs)	6
	Flushing the System (Models with Cabs)	7
	Coolant Thermometer	8
	Coolant Pump Drive Belt	8
	Adjustment	8
10 402 11	Coolant Pump	9
	Removal	9
	Installation	10
10 402 28	Disassembly	10
	Assembly	11
10 402 30	Thermostat Valve	12
	Removal	12
	Installation	12
10 406 10	Radiator	13
	Removal	13
	Installation	14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$