

SERVICE MANUAL

TT4.55 / TT4.75 Tractor

Part number 47969435
1st edition English
November 2016
Replaces part number 47866577





SERVICE MANUAL

TT4.55 TIER 1 Engine, 2WD Tractor

TT4.55 TIER 1 Engine, 4WD Tractor

TT4.75 TIER 1 Engine, 2WD Tractor

TT4.75 TIER 1 Engine, 4WD Tractor

Contents

| | |
|---|-----------|
| Engine | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.102] Pan and covers | 10.2 |
| [10.106] Valve drive and gears | 10.3 |
| [10.101] Cylinder heads | 10.4 |
| [10.105] Connecting rods and pistons..... | 10.5 |
| [10.103] Crankshaft and flywheel..... | 10.6 |
| [10.210] Lift pump and lines | 10.7 |
| [10.206] Fuel filters | 10.8 |
| [10.218] Fuel injection system..... | 10.9 |
| [10.202] Air cleaners and lines | 10.10 |
| [10.400] Engine cooling system | 10.11 |
| [10.414] Fan and drive | 10.12 |
| [10.310] Aftercooler..... | 10.13 |
| [10.304] Engine lubrication system..... | 10.14 |
| [10.408] Oil cooler and lines..... | 10.15 |
| Clutch | 18 |
| [18.110] Clutch and components | 18.1 |
| Transmission | 21 |
| [21.114] Mechanical transmission | 21.1 |
| [21.112] Power shuttle transmission..... | 21.2 |
| [21.110] Master clutch housing | 21.3 |
| [21.134] Power shuttle transmission external controls | 21.4 |
| [21.154] Power shuttle transmission internal components | 21.5 |
| [21.120] Gearbox | 21.6 |
| [21.126] Gearbox external controls..... | 21.7 |

| | |
|---|-----------|
| [21.145] Gearbox internal components | 21.8 |
| [21.160] Creeper | 21.9 |
| [21.162] Reverser | 21.10 |
| [21.168] Hi-Lo unit | 21.11 |
| [21.200] Dropbox | 21.12 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.400] Non-powered front axle | 25.4 |
| Rear axle system | 27 |
| [27.100] Powered rear axle | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Power Take-Off (PTO) | 31 |
| [31.114] Two-speed rear Power Take-Off (PTO) | 31.1 |
| Brakes and controls | 33 |
| [33.120] Mechanical service brakes | 33.1 |
| [33.202] Hydraulic service brakes | 33.2 |
| [33.110] Parking brake or parking lock | 33.3 |
| Hydraulic systems | 35 |
| [35.000] Hydraulic systems | 35.1 |
| [35.104] Fixed displacement pump | 35.2 |
| [35.204] Remote control valves | 35.3 |
| [35.100] Main lift system | 35.4 |
| Steering | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components | 41.2 |

| | |
|--|-----------|
| [41.216] Cylinders | 41.3 |
| Wheels | 44 |
| [44.511] Front wheels..... | 44.1 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.100] Harnesses and connectors..... | 55.2 |
| [55.201] Engine starting system | 55.3 |
| [55.301] Alternator..... | 55.4 |
| [55.302] Battery..... | 55.5 |
| [55.640] Electronic modules | 55.6 |
| [55.404] External lighting | 55.7 |
| [55.408] Warning indicators, alarms, and instruments | 55.8 |
| Platform, cab, bodywork, and decals | 90 |
| [90.118] Protections and footboards..... | 90.1 |
| [90.114] Operator protections | 90.2 |
| [90.120] Mechanically-adjusted operator seat..... | 90.3 |
| [90.100] Engine hood and panels | 90.4 |
| [90.116] Fenders and guards..... | 90.5 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$