

Statistisse and y CEBMOSGNOB Blacktan SuppleMacuitle Supplement

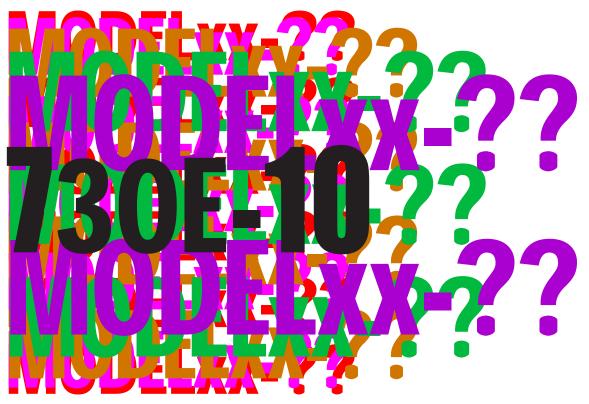

DUMPITRUSKRIPTION

SERIAL NUMBERS SERIAL NUMBERS SERIAL NUMBERS SERIAL NUMBERS SERIAL NUMBERS SERIAL NUMBERS

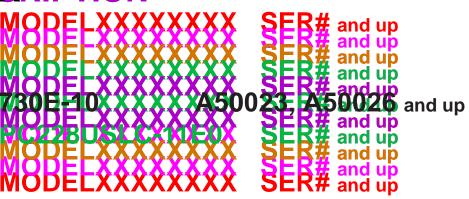

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



© Copyright 2023 Komatsu Ltd. or one of its subsidiaries All Rights Reserved Printed in the U.S.A.

DUMP TRUCK 730E

Machine model Serial number

730E-10 A50023, A50026 and up

00 Index and forewordIndex

Composition of shop manual	2
Table of contents	. 4

CEN00068-03 00 Index and foreword

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) •: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	CEBM036703
00 Index and foreword	
Index	CEN00068-03 ●
Foreword, safety and general information	CEN00050-05 ●
01 Specification	
Specification and technical data	CEN01021-00
10 Structure, function and maintenance standard	
Steering circuit	CEN10092-00
Hoist circuit	CEN10093-00
Brake circuits	CEN10094-00
Electrical system, 24 volt	CEN10109-02 ●
Heating/air conditioning (HVAC) systems	CEN10088-01
Automatic lubrication (auto lube) system	CEN10080-00
Engine emissions aftertreatment system	CEN10083-03
02 Standard value table	
Standard value table	CEN20009-00
30 Testing and adjusting	
Steering, hoist and auxiliary hydraulic systems	CEN30111-01
Brake system	CEN30112-00
Accumulators and suspensions	CEN30098-16 ●
Electrical systems	CEN30113-01
Interface module 2 (IM2)	CEN30125-04 ●
Payload meter IV	CEN30070-05
KOMTRAX Plus II	CEN30091-02 ●
Komatsu wireless bridge (KWB)	CEN30110-01

2

00 Index and foreword CEN00068-03

Cab air conditioning Automatic lubrication (auto lube) system KomVision Tire monitoring system	CEN30029-02 CEN30089-02 CEN30105-03 ● CEN30114-00
Fuse, diode and relay locations Troubleshooting by fault code, Part 1 Troubleshooting by fault code, Part 2 Troubleshooting by fault code, Part 3 Troubleshooting by fault code, Part 4 Troubleshooting by fault code, Part 5 Aftertreatment system fault codes Steering system KomVision Automatic lubrication (auto lube) system Heating/air conditioning (HVAC) system	CEN40203-01 CEN40178-03 CEN40179-04 ● CEN40180-03 CEN40181-04 CEN40182-03 CEN40222-02 CEN40185-01 CEN40200-01 CEN40202-01 CEN40226-00
50 Disassembly and assembly Service tools Wheels, spindles and rear axle Brake system Steering system Suspensions Hoist circuit Body and structures Operator cab Power module 90 Diagrams and drawings Hydraulic circuit diagrams Electrical circuit diagrams	CEN50112-06 CEN50113-07 CEN50114-02 CEN50111-02 CEN50040-02 CEN50116-01 CEN50117-03 CEN50079-05 CEN50115-03 CEN90031-02 CEN90052-00

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$