


**Original Instructions**

ORIGINAL INSTRUCTIONS

CEBMO36503

# Workshop Supplement

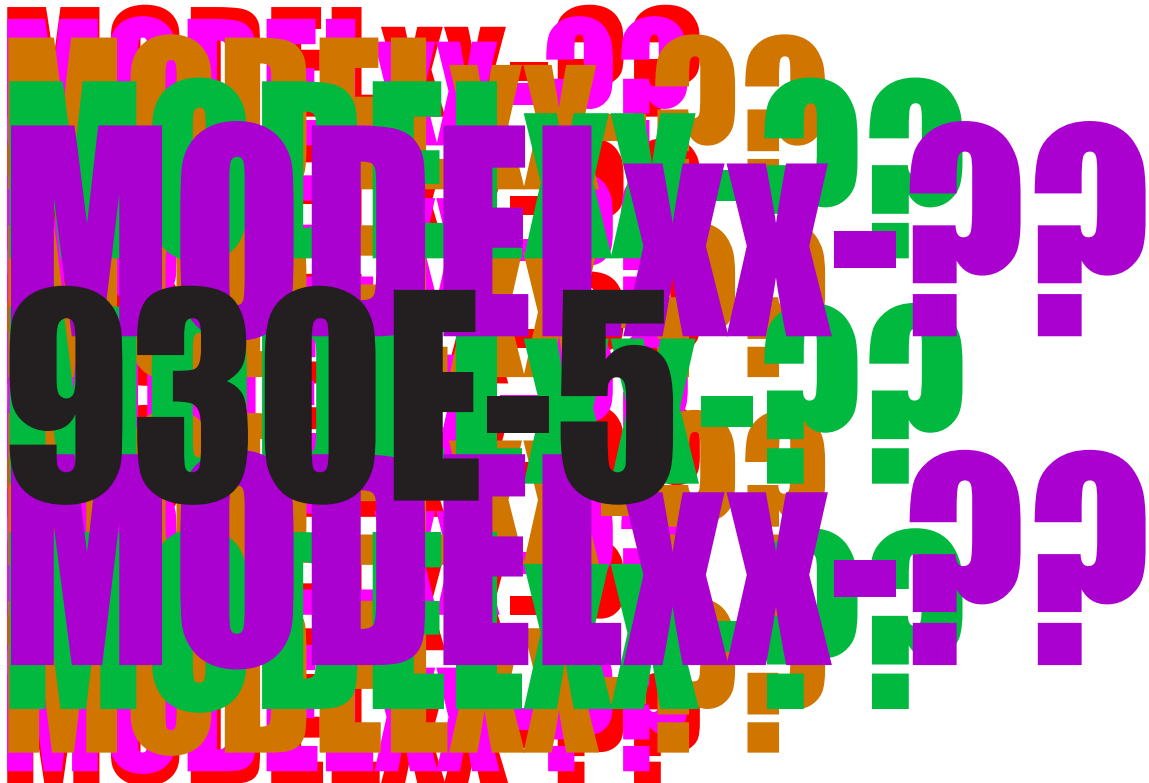

## DUMPTRUCKRIPTION

SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS  
SERIAL NUMBERS

MODELXXXXXXXXX  
MODELXXXXXXXXX  
MODELXXXXXXXXX  
MODELXXXXXXXXX  
**930E-5**XXXXXXXXX  
MODELXXXXXXXXX  
MODELXXXXXXXXX  
MODELXXXXXXXXX  
MODELXXXXXXXXX

SER# and up  
SER# and up  
SER# and up  
SER# and up  
SER# and up  
**A40216 - A40329**  
SER# and up  
SER# and up  
SER# and up  
SER# and up  
SER# and up

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



© Copyright 2023 Komatsu Ltd.  
or one of its subsidiaries  
All Rights Reserved  
Printed in the U.S.A.



# DUMP TRUCK

# 930E

Machine model	Serial number
930E-5	A40216 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

<u>Section Title</u>	<u>Form Number</u>
Shop Manual, contents binder, binder label and tabs	CEBM036503
00 Index and foreword	
Index	CEN00067-03 ●
Foreword, safety and general information	CEN00038-07
01 Specification	
Specification and technical data	CEN01018-03
10 Structure and functions	
Steering circuit	CEN10077-01 ●
Hoist circuit	CEN10078-00
Brake circuits	CEN10079-01
Electrical system, 24 volt	CEN10109-02 ●
Cab air conditioning	CEN10088-01
Automatic lubrication (auto lube) system	CEN10080-00
Engine emissions aftertreatment system	CEN10108-00
20 Standard value table	
Standard value table	CEN20007-00
30 Testing and adjusting	
Steering, brake cooling and hoist hydraulic system	CEN30087-02
Brake system	CEN30088-02
Accumulators and suspensions	CEN30098-16 ●
Electrical systems	CEN30102-04 ●
Interface module 2 (IM2)	CEN30125-04 ●
Payload meter IV	CEN30070-05
KOMTRAX Plus II	CEN30091-02 ●
Komatsu Wireless Bridge (KWB)	CEN30101-00

---

Cab air conditioning	CEN30029-02 ●
Automatic lubrication (auto lube) system	CEN30089-02
KomVision	CEN30105-03 ●
Tire monitoring system	CEN30114-00
40 Troubleshooting	
Fuse, diode and relay locations	CEN40186-02 ●
Troubleshooting by failure code, Part 1	CEN40178-03
Troubleshooting by failure code, Part 2	CEN40179-04 ●
Troubleshooting by failure code, Part 3	CEN40180-03
Troubleshooting by failure code, Part 4	CEN40181-04
Troubleshooting by failure code, Part 5	CEN40182-03
Aftertreatment system fault codes	CEN40222-02
Steering system	CEN40190-03 ●
KomVision	CEN40200-01
Automatic lubrication (auto lube) system	CEN40202-01
Heating/air conditioning (HVAC) system	CEN40226-00
Electronic fan clutch	CEN40256-01 ●
50 Disassembly and assembly	
Service tools	CEN50139-02 ●
Wheels, spindles and rear axle	CEN50140-03 ●
Brake system	CEN50066-04 ●
Steering system	CEN50067-02 ●
Suspensions	CEN50068-02
Hoist circuit	CEN50069-02 ●
Body and structures	CEN50070-01 ●
Operator cab	CEN50079-05 ●
Power module	CEN50073-04
90 Diagrams and drawings	
Hydraulic circuit diagrams	CEN90023-01 ●
Electrical circuit diagrams	CEN90051-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$