


Stop! At this time, nobody

ORIGINAL INSTRUCTIONS

CEBM037802

Blanket Support Material Supplement

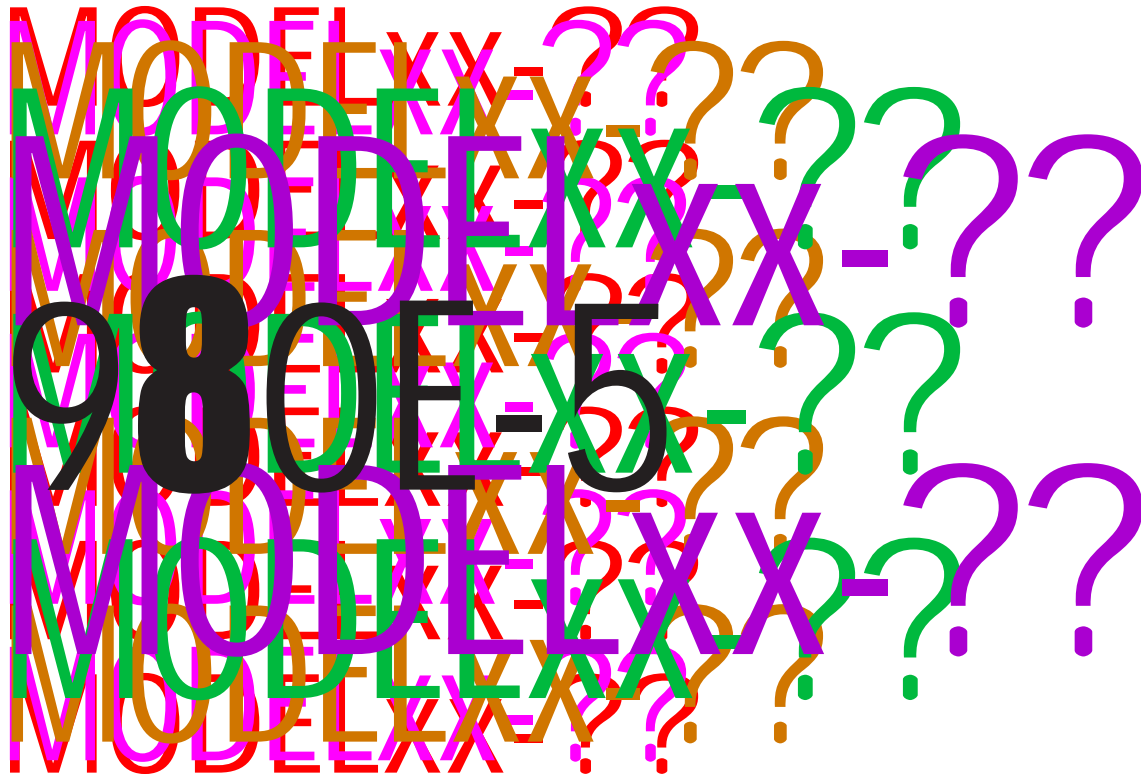

DUMPTRUCKRIPTION

SERIAL NUMBERS
 SERIAL NUMBERS
 SERIAL NUMBERS
 SERIAL NUMBERS
 SERIAL NUMBERS
 SERIAL NUMBERS

MODELXXXXXXXXXX
 MODELXXXXXXXXXX
 MODELXXXXXXXXXX
 MODELXXXXXXXXXX
 980E-5XXXXXXXXXX
 MODELXXXXXXXXXX
 MODELXXXXXXXXXX
 MODELXXXXXXXXXX
 MODELXXXXXXXXXX

SER# and up
 SER# and up
 SER# and up
 SER# and up
 SER# and up
 A50150 and up
 SER# and up
 SER# and up
 SER# and up
 SER# and up
 SER# and up

This material is proprietary to Komatsu and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



© Copyright 2023 Komatsu Ltd.
 or one of its subsidiaries
 All Rights Reserved
 Printed in the U.S.A.

DUMP TRUCK

980E

| Machine model | Serial number |
|---------------|-----------------|
| 980E-5 | A50150 - A50161 |

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

□: New module (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| <u>Section Title</u> | <u>Form Number</u> |
|---|--------------------|
| Shop Manual, contents binder, binder label and tabs | CEBM037302 |
| 00 Index and foreword | |
| Index | CEN00071-02 ● |
| Foreword, safety and general information | CEN00044-06 ● |
| 01 Specification | |
| Specification and technical data | CEN01020-03 ● |
| 10 Structure, function and maintenance standard | |
| Steering circuit | CEN10062-03 ● |
| Hoist circuit | CEN10067-02 |
| Brake circuits | CEN10068-02 |
| Electrical system, 24 volt | CEN10115-01 ● |
| Heating/air conditioning (HVAC) system | CEN10088-01 |
| Automatic lubrication (auto lube) system | CEN10080-00 |
| Engine emissions aftertreatment system | CEN10083-03 |
| 20 Standard value table | |
| Standard service value table | CEN20005-03 |
| 30 Testing and adjusting | |
| Steering, brake cooling and hoist hydraulic system | CEN30071-06 |
| Brake system | CEN30072-07 ● |
| Accumulators and suspensions | CEN30098-16 ● |
| Electrical systems | CEN30104-00 |
| Interface module 2 (IM2) | CEN30125-04 ● |
| KOMTRAX Plus II | CEN30091-02 |
| Payload meter IV | CEN30070-05 ● |
| Komatsu Wireless Bridge (KWB) | CEN30101-00 |
| Cab air conditioning | CEN30029-02 |
| Automatic lubrication (auto lube) system | CEN30089-02 |
| KomVision | CEN30105-03 ● |

| | |
|--|---------------|
| Tire monitoring system | CEN30114-00 |
| 40 Troubleshooting | |
| Fuse, diode and relay locations | CEN40199-02 ● |
| Troubleshooting by failure code, Part 1 | CEN40178-03 ● |
| Troubleshooting by failure code, Part 2 | CEN40179-04 ● |
| Troubleshooting by failure code, Part 3 | CEN40180-03 |
| Troubleshooting by failure code, Part 4 | CEN40181-04 |
| Troubleshooting by failure code, Part 5 | CEN40182-03 ● |
| Aftertreatment system fault codes | CEN40222-02 |
| Steering system | CEN40104-09 ● |
| KomVision | CEN40200-01 |
| Automatic lubrication (auto lube) system | CEN40202-01 |
| Heating/air conditioning (HVAC) system | CEN40226-00 |
| Electronic fan clutch | CEN40256-01 ● |
| 50 Disassembly and assembly | |
| Service tools | CEN50046-11 ● |
| Wheels, spindles and rear axle | CEN50047-13 ● |
| Brake system | CEN50023-03 ● |
| Steering system | CEN50045-02 ● |
| Suspensions | CEN50049-03 ● |
| Hoist circuit | CEN50051-07 ● |
| Body and structures | CEN50077-02 ● |
| Operator cab | CEN50109-01 ● |
| Power module (A50069 and up) | CEN50137-02 ● |
| 90 Diagrams and drawings | |
| Hydraulic circuit diagrams | CEN90014-03 |
| Electrical circuit diagrams | CEN90058-00 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$