

Shop Manual

MOBILE CRUSHER

BR380JG-3

SERIAL NUMBERS 5001 and up

KOMATSU

00 Index and foreword

Index

00 Index and foreword	
Index	00-2
Abbreviation list	00-17
Foreword, safety, and basic information	00-20
How to read the shop manual	00-20
Safety notice for operation	00-23
Precautions to prevent fire	00-31
Action if fire occurs	00-32
Precautions when disposing of waste materials	00-33
Exhaust gas regulations - Actions taken	00-34
Precautions about DEF	00-35
DEF - Store	00-36
Precautions for handling hydraulic component	00-37
Piping - Precautions for disconnection and connection	00-39
Precautions for handling electrical component	00-45
Precautions for handling fuel system component	00-47
Precautions for handling air intake system component	00-48
Practical use of KOMTRAX	00-49
Disconnection and connection of push-pull type coupler	00-50
Precautions for disconnecting and connecting connector	00-54
Procedures for disconnecting and connecting DT connectors	00-58
Procedures for disconnecting and connecting slide lock type connectors	00-59
Procedures for disconnecting and connecting connectors with pull and release type lock	00-60
Procedures for disconnecting and connecting connectors with push and release type lock	00-61
Procedures for disconnecting and connecting connectors that require rotation of housing to release and apply lock	00-63
How to read wire code	00-64
Description of terms used in maintenance standard	00-67
Standard tightening torque table	00-69
01 Specifications	
Specifications	01-3
Specification drawing	01-3
Specification drawing of :BR380JG-3	01-3
Specifications	01-4
Specifications of :BR380JG-3	01-4
Weight table	01-7
Weight table: BR380JG-3	01-7
Table of fuel, coolant and lubricants	01-8
10 Structure and function	
Urea SCR system	10-4
Urea SCR system component layout drawing	10-4
Urea SCR system diagram	10-9
Urea SCR system functions	10-10
Urea SCR system components	10-24
Starting system	10-33
Starting system component layout drawing (Machine with KOMTRAX terminal)	10-33
Starting system component layout drawing (Machine with Gateway function controller)	10-35
System operating lamp system (Machine with KOMTRAX terminal)	10-37
System operating lamp system (Machine with Gateway function controller)	10-38
Battery disconnect switch	10-39
Engine system	10-40
Engine system component layout drawing	10-40
Engine control system (Machine with KOMTRAX terminal)	10-42
Engine control system (Machine with Gateway function controller)	10-45

Engine automatic warm-up system	10-48
Overheat prevention system	10-50
Turbocharger protection system	10-52
Engine system component	10-54
Cooling system	10-72
Cooling system component layout drawing	10-72
Control system	10-74
Control system component layout drawing (Machine with KOMTRAX terminal)	10-74
Control system component layout drawing (Machine with Gateway function controller)	10-77
Machine monitor system (Machine with KOMTRAX terminal)	10-80
Machine monitor system (Machine with Gateway function controller)	10-81
KOMTRAX system (Machine with KOMTRAX terminal)	10-82
KOMTRAX system (Machine with Gateway function controller)	10-83
Control system component	10-84
Hydraulic system	10-116
Hydraulic system component layout drawing	10-116
CLSS	10-117
Pump and engine combined control system	10-121
Pump and valve control system	10-125
Hydraulic system components	10-127
Work equipment system	10-187
Work equipment system component layout drawing	10-187
Structure of valve control	10-190
Grizzly feeder semi automatic control system	10-192
Abnormal load shutdown system	10-193
Crusher jaw tip adjustment system	10-194
Work equipment system components	10-196
Crusher motor	10-196
Travel system	10-208
Travel system component layout drawing	10-208
Travel control system diagram	10-212
Travel system components	10-214
Undercarriage and frame	10-234
Undercarriage layout drawing	10-234
Work equipment	10-236
Primary conveyor	10-236
Grizzly feeder	10-238
Crusher	10-239
Vibrator	10-243
20. Standard value table	
Standard value table for engine	20-3
Standard value table for engine: BR380JG-3	20-3
Standard value table for machine	20-6
Standard value table for machine: BR380JG-3	20-6
Machine posture and measuring procedure drawings for performance measurement	20-13
30 Testing and adjusting	
Precautions before work	30-3
Related information on testing and adjusting	30-4
Tools for testing and adjusting	30-4
Sketches for testing and adjusting tools	30-10
Engine and cooling system	30-11
Testing engine speed	30-11
Testing boost pressure	30-13
Testing exhaust gas color	30-15
Testing and adjusting valve clearance	30-18
Testing compression pressure	30-20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$