

Shop Manual

MOBILE CRUSHER

BR380JG-3EO

SERIAL NUMBERS 5203 and up

KOMATSU

00 Index and foreword

Index

00 Index and foreword

Index -	00-2
Abbreviation list-	00-16
Foreword, safety, and basic information-	00-19
How to read the shop manual -	00-19
Safety notice for operation-	00-22
Precautions to prevent fire-	00-30
Action if fire occurs -	00-31
Precautions when disposing of waste materials-	00-32
Actions taken to meet exhaust gas regulations -	00-33
Precautions for DEF -	00-34
Store DEF -	00-35
Precautions for handling hydraulic component-	00-36
Piping - Precautions for disconnection and connection-	00-38
Precautions for handling electrical component-	00-44
Precautions for handling fuel system component -	00-46
Precautions for handling air intake system component -	00-47
Practical use of KOMTRAX -	00-48
Disconnection and connection of push-pull type coupler-	00-49
Precautions for disconnecting and connecting connector -	00-53
Procedures for disconnecting and connecting DT connectors -	00-57
Procedures for disconnecting and connecting slide lock type connectors -	00-58
Procedures for disconnecting and connecting connectors with pull and release type lock -	00-59
Procedures for disconnecting and connecting connectors with push and release type lock -	00-60
Procedures for disconnecting and connecting connectors that require rotation of housing to release and apply lock -	00-62
How to read wire code -	00-63
Description of terms used in maintenance standard -	00-66
Standard tightening torque table-	00-68

01 Specifications

Specifications -	01-3
Specification drawing -	01-3
Specifications -	01-4
Weight table -	01-7
Table of fuel, coolant and lubricants -	01-8

10 Structure and function

Urea SCR system -	10-3
Urea SCR system component layout drawing -	10-3
Urea SCR system diagram -	10-8
Urea SCR system functions-	10-9
Urea SCR system components -	10-18
Starting system -	10-27
Starting system component layout drawing	10-27
System operating lamp system -	10-29
Battery disconnect switch -	10-30
Engine system -	10-31
Engine system component layout drawing	10-31
Engine control system-	10-33
Engine automatic warm-up system-	10-36
Overheat prevention system -	10-38
Turbocharger protection system-	10-40
Engine system component -	10-42
Cooling system -	10-60
Cooling system component layout drawing	10-60

Control system - - - - -	10-62
Control system component layout drawing - - - - -	10-62
Machine monitor system - - - - -	10-65
KOMTRAX system - - - - -	10-66
Control system component - - - - -	10-67
Hydraulic system - - - - -	10-97
Hydraulic system component layout drawing - - - - -	10-97
CLSS - - - - -	10-98
Pump and engine combined control system - - - - -	10-102
Pump and valve control system - - - - -	10-106
Hydraulic system components - - - - -	10-108
Work equipment system - - - - -	10-168
Work equipment system component layout drawing - - - - -	10-168
Structure of valve control - - - - -	10-171
Grizzly feeder semi automatic control system - - - - -	10-173
Abnormal load shutdown system - - - - -	10-174
Crusher jaw tip adjustment system - - - - -	10-175
Work equipment system components - - - - -	10-177
Crusher motor - - - - -	10-177
Travel system - - - - -	10-189
Travel system component layout drawing - - - - -	10-189
Travel control system diagram - - - - -	10-193
Travel system components - - - - -	10-195
Undercarriage and frame - - - - -	10-215
Undercarriage layout drawing - - - - -	10-215
Work equipment - - - - -	10-217
Primary conveyor - - - - -	10-217
Grizzly feeder - - - - -	10-219
Crusher - - - - -	10-220
Vibrator - - - - -	10-224

20 Standard value table

Standard value table for engine - - - - -	20-3
Standard value table for engine: BR380JG-3E0 - - - - -	20-3
Standard value table for machine - - - - -	20-6
Standard value table for machine: BR380JG-3E0 - - - - -	20-6
Machine posture and measuring procedure drawings for performance measurement - - - - -	20-13

30 Testing and adjusting

Precautions before work - - - - -	30-3
Related information on testing and adjusting - - - - -	30-4
Tools for testing and adjusting - - - - -	30-4
Sketches for testing and adjusting tools - - - - -	30-10
Engine and cooling system - - - - -	30-11
Testing engine speed - - - - -	30-11
Testing boost pressure - - - - -	30-13
Testing exhaust gas color - - - - -	30-15
Testing and adjusting valve clearance - - - - -	30-18
Testing compression pressure - - - - -	30-20
Testing blowby pressure - - - - -	30-25
Testing engine oil pressure - - - - -	30-27
Testing EGR valve and VGT oil pressures - - - - -	30-28
Testing fuel pressure - - - - -	30-30
Testing fuel discharged volume, return rate, and leakage - - - - -	30-36
Bleeding air from fuel system - - - - -	30-42
Testing leakage from fuel system - - - - -	30-43
Handling cylinder cutout mode operation - - - - -	30-45
Handling no-injection cranking operation - - - - -	30-46

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$