

# Shop Manual

BULLDOZER

**D155A-6**

SERIAL NUMBERS 85001 and up

**KOMATSU**



---

# **BULLDOZER**

## **D155A-6**

**Machine model      Serial number**

D155A-6                      85001 and up

---

## **00 Index and foreword**

### **Index**

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02854-16
00 Index and foreword	SEN02855-16
Index	SEN02856-16 ●
Foreword and general information	SEN02857-03
01 Specification	SEN02858-03
Specification and technical data	SEN02859-03
10 Structure, function and maintenance standard	SEN02860-09
Engine and cooling system	SEN02861-02 ●
Power train, Part 1	SEN02862-03 ●
Power train, Part 2	SEN02863-01 ●
Undercarriage and frame	SEN02864-00
Hydraulic system	SEN02865-05 ●
Work equipment	SEN02866-02
Cab and its attachments	SEN02867-00
Electrical system	SEN02868-02
20 Standard value table	SEN02869-01
Standard service value table	SEN03199-01
30 Testing and adjusting	SEN02870-08
Testing and adjusting, Part 1	SEN03200-04
Testing and adjusting, Part 2	SEN03201-03
Testing and adjusting, Part 3	SEN03202-04
Testing and adjusting, Part 4	SEN03203-00
40 Troubleshooting	SEN02871-07
Failure code table and fuse locations	SEN03204-03 ●
General information on troubleshooting	SEN03205-03 ●
Troubleshooting by failure and error codes, Part 1	SEN03206-03 ●
Troubleshooting by failure and error codes, Part 2	SEN03207-03 ●
Troubleshooting by failure and error codes, Part 3	SEN03208-03 ●
Troubleshooting by failure and error codes, Part 4	SEN03209-01 ●
Troubleshooting of electrical system (E-mode)	SEN03210-02 ●

---

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03211-02 ●
Troubleshooting of engine (S-mode)	SEN03212-01
50 Disassembly and assembly	SEN02872-07
General information on disassembly and assembly	SEN03366-05 ●
Engine and cooling system	SEN03367-04 ●
Power train, Part 1	SEN03368-03 ●
Power train, Part 2	SEN03369-03 ●
Power train, Part 3	SEN03370-01 ●
Undercarriage and frame	SEN03371-03 ●
Hydraulic system	SEN03372-03 ●
Work equipment	SEN03373-02 ●
Cab and its attachments	SEN03375-01 ●
Electrical system	SEN03376-03 ●
60 Air conditioner	SEN04441-02
Structure, function, testing, adjusting, and troubleshooting	SEN04442-02 ●
90 Diagrams and drawings	SEN02873-05
Hydraulic diagrams and drawings	SEN02875-01
Electrical diagrams and drawings	SEN02874-04 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$