

Shop Manual

BULLDOZER

D155AX-6

SERIAL NUMBERS 80001 and up

ecot3

KOMATSU

BULLDOZER

D155AX-6

Machine model Serial number

D155AX-6 80001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00596-22
00 Index and foreword	SEN00597-22
Index	SEN00598-22 ●
Foreword and general information	SEN00599-04
01 Specification	SEN00600-05
Specification and technical data	SEN00601-04
10 Structure, function and maintenance standard	SEN00602-11
Engine and cooling system	SEN00603-01 ●
Power train, Part 1	SEN00604-03 ●
Power train, Part 2	SEN00605-03 ●
Undercarriage and frame	SEN00606-01
Hydraulic system	SEN00607-06 ●
Work equipment	SEN00608-04
Cab and its attachments	SEN00609-01
Electrical system	SEN00610-03
20 Standard value table	SEN00611-03
Standard service value table	SEN00678-03
30 Testing and adjusting	SEN00612-09
Testing and adjusting, Part 1	SEN00679-05
Testing and adjusting, Part 2	SEN00680-05
Testing and adjusting, Part 3	SEN00681-05
Testing and adjusting, Part 4	SEN00682-02
40 Troubleshooting	SEN00613-10
Failure code table and fuse locations	SEN04628-05 ●
General information on troubleshooting	SEN00851-02
Troubleshooting by failure and error codes, Part 1	SEN00716-04 ●
Troubleshooting by failure and error codes, Part 2	SEN00717-04 ●
Troubleshooting by failure and error codes, Part 3	SEN00718-07 ●
Troubleshooting by failure and error codes, Part 4	SEN00719-03 ●
Troubleshooting by failure and error codes, Part 5	SEN00720-04 ●

Troubleshooting by failure and error codes, Part 6	SEN00721-05 ●
Troubleshooting by failure and error codes, Part 7	SEN00722-02 ●
Troubleshooting by failure and error codes, Part 8	SEN00723-02 ●
Troubleshooting of electrical system (E-mode)	SEN00807-03 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00808-03 ●
Troubleshooting of engine (S-mode)	SEN00852-02
50 Disassembly and assembly	SEN00614-10
General information on disassembly and assembly	SEN01204-05 ●
Engine and cooling system	SEN01205-07 ●
Power train, Part 1	SEN01206-05 ●
Power train, Part 2	SEN01207-05 ●
Power train, Part 3	SEN02707-02 ●
Undercarriage and frame	SEN01208-04 ●
Hydraulic system	SEN01209-05 ●
Work equipment	SEN01210-03 ●
Cab and its attachments	SEN01211-04 ●
Electrical system	SEN02708-02 ●
80 Air conditioner	SEN04682-03
Structure, function, testing, adjusting, and troubleshooting	SEN04683-03 ●
90 Diagrams and drawings	SEN00615-07
Hydraulic diagrams and drawings	SEN00616-04
Electrical diagrams and drawings	SEN00617-06 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$