

# Shop Manual

BULLDOZER

**D155AX-6**

SERIAL NUMBERS 80001 and up

**ecot3**

**KOMATSU**



---

# **BULLDOZER**

## **D155AX-6**

**Machine model      Serial number**

D155AX-6              80001 and up

---

## **00 Index and foreword**

### **Index**

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00596-29
00 Index and foreword	SEN00597-29
Index	SEN00598-29
Foreword and general information	SEN00599-05
01 Specification	SEN00600-05
Specification and technical data	SEN00601-04
10 Structure, function and maintenance standard	SEN00602-11
Engine and cooling system	SEN00603-01
Power train, Part 1	SEN00604-03
Power train, Part 2	SEN00605-03
Undercarriage and frame	SEN00606-01
Hydraulic system	SEN00607-07
Work equipment	SEN00608-04
Cab and its attachments	SEN00609-01
Electrical system	SEN00610-03
20 Standard value table	SEN00611-03
Standard service value table	SEN00678-03
30 Testing and adjusting	SEN00612-11
Testing and adjusting, Part 1	SEN00679-07
Testing and adjusting, Part 2	SEN00680-07
Testing and adjusting, Part 3	SEN00681-05
Testing and adjusting, Part 4	SEN00682-02
40 Troubleshooting	SEN00613-14
Failure code table and fuse locations	SEN04628-07
General information on troubleshooting	SEN00851-02
Troubleshooting by failure and error codes, Part 1	SEN00716-06
Troubleshooting by failure and error codes, Part 2	SEN00717-06
Troubleshooting by failure and error codes, Part 3	SEN00718-09
Troubleshooting by failure and error codes, Part 4	SEN00719-05
Troubleshooting by failure and error codes, Part 5	SEN00720-08
Troubleshooting by failure and error codes, Part 6	SEN00721-07
Troubleshooting by failure and error codes, Part 7	SEN00722-04
Troubleshooting by failure and error codes, Part 8	SEN00723-04
Troubleshooting of electrical system (E-mode)	SEN00807-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00808-04
Troubleshooting of engine (S-mode)	SEN00852-02

---

50 Disassembly and assembly	SEN00614-15
General information on disassembly and assembly	SEN01204-09
Engine and cooling system	SEN01205-09
Power train, Part 1	SEN01206-07
Power train, Part 2	SEN01207-08
Power train, Part 3	SEN02707-04
Undercarriage and frame	SEN01208-07
Hydraulic system	SEN01209-07
Work equipment	SEN01210-05
Cab and its attachments	SEN01211-06
Electrical system	SEN02708-04
80 Air conditioner	SEN04682-04
Structure, function, testing, adjusting, and troubleshooting	SEN04683-04
90 Diagrams and drawings	SEN00615-07
Hydraulic diagrams and drawings	SEN00616-04
Electrical diagrams and drawings	SEN00617-06

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$