

Shop Manual

BULLDOZER

D275A-5R

SERIAL NUMBERS 35001 and up

KOMATSU

BULLDOZER

D275A-5R

Machine model Serial number

D275A-5R 35001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN02158-21
00 Index and foreword	SEN02159-21
Index	SEN02160-21
Foreword and general information	SEN02161-04
01 Specification	SEN02162-01
Specification and technical data	SEN02163-01
10 Structure, function and maintenance standard	SEN02164-08
Engine and cooling system	SEN02165-01
Power train system, Part 1	SEN02166-02
Power train system, Part 2	SEN02167-00
Undercarriage and frame	SEN02168-01
Hydraulic system, Part 1	SEN02169-02
Hydraulic system, Part 2	SEN02170-00
Hydraulic system, Part 3	SEN02171-01
Work equipment	SEN02172-04
Cab and its attachments	SEN02173-00
Electrical system	SEN02174-02
20 Standard value table	SEN02175-03
Standard service value table	SEN02751-03
30 Testing and adjusting	SEN02176-08
Testing and adjusting, Part 1	SEN02752-04
Testing and adjusting, Part 2	SEN02753-04
Testing and adjusting, Part 3	SEN02754-03
Testing and adjusting, Part 4	SEN02755-03
40 Troubleshooting	SEN02177-08
Failure code table and fuse locations	SEN02756-03
General information on troubleshooting	SEN02757-02
Troubleshooting by failure and error codes, Part 1	SEN02758-02
Troubleshooting by failure and error codes, Part 2	SEN02759-02
Troubleshooting by failure and error codes, Part 3	SEN02760-02
Troubleshooting by failure and error codes, Part 4	SEN02761-01
Troubleshooting by failure and error codes, Part 5	SEN02762-01
Troubleshooting by failure and error codes, Part 6	SEN02763-02
Troubleshooting of electrical system (E-mode)	SEN02764-01
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN02765-02
Troubleshooting of engine (S-mode)	SEN02766-01

50 Disassembly and assembly	SEN02178-09
General information on disassembly and assembly	SEN03240-05
Engine and cooling system	SEN03241-03
Power train, Part 1	SEN03242-02
Power train, Part 2	SEN03243-01
Undercarriage and frame, Part 1	SEN03244-04
Undercarriage and frame, Part 2	SEN03245-03
Hydraulic system	SEN03246-01
Work equipment	SEN03247-03
Cab and its attachments	SEN03248-02
Electrical system	SEN03249-01
90 Diagrams and drawings	SEN02179-03
Hydraulic diagrams and drawings	SEN02180-00
Electrical diagrams and drawings	SEN02181-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$