

Shop Manual

BULLDOZER

D275AX-5E0

SERIAL NUMBERS 30001 and up

ecot3

KOMATSU

BULLDOZER

D275AX-5E0

Machine model Serial number

D275AX-5E0 30001 and up

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

| Section Title | Form Number |
|---|-------------|
| Shop Manual, contents binder, binder label and tabs | SEN00919-24 |
| 00 Index and foreword | SEN00920-24 |
| Index | SEN00921-24 |
| Foreword and general information | SEN00922-05 |
| 01 Specification | SEN00923-01 |
| Specification and technical data | SEN00924-01 |
| 10 Structure, function and maintenance standard | SEN00925-09 |
| Engine and cooling system | SEN00926-01 |
| Power train, Part 1 | SEN00927-01 |
| Power train, Part 2 | SEN00928-01 |
| Undercarriage and frame | SEN00929-02 |
| Hydraulic system, Part 1 | SEN00930-03 |
| Hydraulic system, Part 2 | SEN00931-01 |
| Hydraulic system, Part 3 | SEN00932-02 |
| Work equipment | SEN00933-05 |
| Cab and its attachments | SEN00934-01 |
| Electrical system | SEN00935-02 |
| 20 Standard value table | SEN00936-02 |
| Standard service value table | SEN01413-02 |
| 30 Testing and adjusting | SEN00937-10 |
| Testing and adjusting, Part 1 | SEN01414-04 |
| Testing and adjusting, Part 2 | SEN01415-05 |
| Testing and adjusting, Part 3 | SEN01416-03 |
| Testing and adjusting, Part 4 | SEN01417-05 |
| 40 Troubleshooting | SEN00938-08 |
| Failure code table and fuse locations | SEN01767-02 |
| General information on troubleshooting | SEN01768-02 |
| Troubleshooting by failure and error codes, Part 1 | SEN01655-02 |
| Troubleshooting by failure and error codes, Part 2 | SEN01656-02 |
| Troubleshooting by failure and error codes, Part 3 | SEN01657-02 |
| Troubleshooting by failure and error codes, Part 4 | SEN01658-01 |
| Troubleshooting by failure and error codes, Part 5 | SEN01659-01 |
| Troubleshooting by failure and error codes, Part 6 | SEN01878-02 |
| Troubleshooting of electrical system (E-mode) | SEN01646-01 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN01647-02 |
| Troubleshooting of engine (S-mode) | SEN01648-02 |

| | |
|---|-------------|
| 50 Disassembly and assembly | SEN00939-10 |
| General information on disassembly and assembly | SEN02340-05 |
| Engine and cooling system | SEN02341-02 |
| Engine | SEN02342-02 |
| Power train, Part 1 | SEN02343-01 |
| Power train, Part 2 | SEN02344-03 |
| Undercarriage and frame, Part 1 | SEN02345-05 |
| Undercarriage and frame, Part 2 | SEN02346-04 |
| Hydraulic system | SEN02347-01 |
| Work equipment | SEN02348-03 |
| Cab and its attachments | SEN02349-02 |
| Electrical system | SEN02350-01 |
| | |
| 90 Diagrams and drawings | SEN00940-05 |
| Hydraulic diagrams and drawings | SEN00941-01 |
| Electrical diagrams and drawings | SEN00942-04 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$