

# Shop Manual

BULLDOZER

**D375A-6**

SERIAL NUMBERS 60001 and up

**ecot3**

**KOMATSU**



# **BULLDOZER D375A-6**

<b>Machine model</b>	<b>Serial number</b>
D375A-6	60001 and up

---

## **00 Index and foreword**

---

---

## Table of contents

Notice of revision.....	1
00 Index and Foreword	
Table of contents.....	00 - 2
Table of contents .....	00 - 2
Foreword and general information .....	00 - 5
Safety notice .....	00 - 5
How to read the shop manual .....	00 - 10
Explanation of terms for maintenance standard .....	00 - 12
Handling of electric equipment and hydraulic components.....	00 - 14
Handling of connectors newly used for engines .....	00 - 23
How to read electric wire code.....	00 - 26
Precautions when carrying out work.....	00 - 29
Method of disassembling and connecting push-pull type coupler.....	00 - 32
Standard tightening torque table.....	00 - 35
List of Abbreviation .....	00 - 39
Conversion table.....	00 - 43
01 Specification	
Specification and technical data.....	01 - 3
Specification drawing.....	01 - 3
Specifications.....	01 - 4
Weight table.....	01 - 9
Table of fuel, coolant and lubricants.....	01 - 11
10 Structure,function and maintenance standard	
Engine and cooling system .....	10- 4
Cooling system .....	10- 4
Cooling fan pump.....	10- 6
Cooling fan motor.....	10- 26
Power train .....	10- 32
Power train.....	10- 32
Overall drawing of power train unit .....	10- 34
Power train hydraulic equipment arrangement drawing.....	10- 36
Damper and universal joint .....	10- 38
Torque converter and PTO .....	10- 40
Torque converter control valve .....	10- 46
Main relief valve and torque converter relief valve.....	10- 48
Lockup clutch ECMV and stator clutch ECMV.....	10- 50
Scavenging pump .....	10- 55
Transmission control.....	10- 56
PCCS lever .....	10- 58
Transmission.....	10- 62
Transmission ECMV .....	10- 76
Transmission lubricating oil relief valve .....	10- 81
Steering and brake control.....	10- 82
Transfer unit, bevel gear shaft and steering .....	10- 84
Steering control valve .....	10- 90
Steering clutch ECMV and Steering brake ECMV .....	10- 92
Parking brake valve .....	10- 99
Sudden stop prevention valve.....	10- 101
Final drive .....	10- 103
Undercarriage and frame .....	10- 108
Track frame.....	10- 108
Idler cushion.....	10- 110
Track roller bogie .....	10- 111
Main frame .....	10- 112
Suspension .....	10- 114
Hydraulic system.....	10- 117
Work equipment hydraulic piping diagram.....	10- 117
PPC control piping diagram .....	10- 121

Work equipment control .....	10- 122
Hydraulic tank .....	10- 124
Accumulator .....	10- 126
PPC lock valve .....	10- 127
PPC valve .....	10- 129
Piston valve .....	10- 140
Quick drop valve .....	10- 141
Pin puller switch .....	10- 142
Pin puller solenoid valve .....	10- 143
Blade control lever (only for the machine with dual tilt specification) .....	10- 145
Work equipment pump .....	10- 146
Control valve .....	10- 158
Self-pressure reducing valve .....	10- 173
Work equipment .....	10- 180
Cylinder stay .....	10- 180
Cab .....	10- 181
Cab mount .....	10- 181
Cab .....	10- 182
Electrical system .....	10- 184
Engine control .....	10- 184
Engine control system .....	10- 185
CRI engine control system .....	10- 194
Monitor system .....	10- 196
Machine monitor .....	10- 198
Lamp system .....	10- 215
Engine preheat (electrical intake air heater) control .....	10- 216
Palm command control system .....	10- 217
Sensor .....	10- 220
Vehicle health monitoring system (VHMS) .....	10- 224
ORBCOMM system .....	10- 230
Pre-lubrication system .....	10- 233
20 Standard value table .....	
Standard service value table .....	20 - 3
Standard value table for engine .....	20 - 3
Standard value table for machine .....	20 - 4
30 Testing and adjusting .....	
Tools for testing, adjusting, and troubleshooting .....	30 - 4
Diagnosis equipment list .....	30 - 4
Engine and cooling system .....	30 - 6
Testing engine speed .....	30 - 6
Testing intake air pressure (boost pressure) .....	30 - 8
Testing exhaust temperature .....	30 - 10
Testing exhaust gas color .....	30 - 12
Adjusting valve clearance .....	30 - 14
Measuring compression pressure .....	30 - 16
Testing blow-by pressure .....	30 - 19
Testing engine oil pressure .....	30 - 21
Testing EGR valve drive oil pressure .....	30 - 22
Handling of fuel system devices .....	30 - 24
Releasing residual pressure from fuel system .....	30 - 25
Testing fuel pressure .....	30 - 26
Handling of reduced cylinder mode operation .....	30 - 27
Handling of no injection cranking operation .....	30 - 27
Testing leakage from pressure limiter and return rate from injector .....	30 - 28
Bleeding air from fuel circuit .....	30 - 31
Testing fuel circuit for leakage .....	30 - 33
Replacing and adjusting alternator and air conditioner compressor belt .....	30 - 34
Measuring fan speed .....	30 - 35
Testing fan circuit oil pressure .....	30 - 36
Bleeding air from fan pump .....	30 - 37
Adjusting fuel control dial and decelerator pedal .....	30 - 38

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$