

# Shop Manual

BULLDOZER

**D375Ai-8**

SERIAL NUMBERS    80001    and up

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-23
Foreword, Safety, Basic Information.....	00-26
How to Read the Shop Manual .....	00-26
Safety Notice for Operation .....	00-28
Precautions to Prevent Fire.....	00-36
Procedures If Fire Occurs .....	00-38
Precautions When You Discard Waste Materials.....	00-39
Precautions for DEF.....	00-40
Store DEF .....	00-41
Precautions When You Handle Hydraulic Equipment .....	00-42
Precautions When You Disconnect and Connect Pipings.....	00-45
Precautions When You Handle Electrical Equipment .....	00-51
Precautions When You Handle Fuel System Equipment .....	00-53
Precautions When You Handle Intake System Equipment .....	00-54
Practical Use of KOMTRAX .....	00-55
Disconnect and Connect Push-Pull Type Coupler .....	00-56
Precautions for Disconnection and Connection of Connectors .....	00-60
How to Disconnect and Connect Deutsch Connector .....	00-64
How to Disconnect and Connect Slide Lock Type Connector .....	00-65
How to Disconnect and Connect Connector with Lock to Pull .....	00-67
How to Disconnect and Connect Connector with Lock to Push .....	00-68
How to Disconnect and Connect Connector with Housing to Rotate .....	00-70
How to Read the Codes for Electric Cable .....	00-71
Explanation of Terms for Maintenance Standard .....	00-75
Standard Tightening Torque Table.....	00-78
Conversion Table .....	00-85
01 Specifications.....	01-1
Table of Contents .....	01-2
Specifications.....	01-3
Specification Drawing.....	01-3
Specifications.....	01-5
Weight Table .....	01-11
Fuel, Coolant, Lubricants (For North America) .....	01-13
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Boot-up System .....	10-6
System Operating Lamp System.....	10-6
Battery Isolator.....	10-8
Engine System.....	10-10
Layout Drawing of Engine System .....	10-10
Engine Control System .....	10-12
Automatic Idle Stop System .....	10-14
Component Parts of Engine System .....	10-17
Fuel System .....	10-37
Cooling System.....	10-43
Layout Drawing of Cooling System .....	10-43
Component Parts of Cooling System .....	10-45
Control System .....	10-73
Layout Drawing of Control System .....	10-73
Machine Monitor System.....	10-74
KOMTRAX Plus System .....	10-77
Component Parts of Control System .....	10-79
Hydraulic System .....	10-134
Layout Drawing of Hydraulic System.....	10-134
CLSS .....	10-135

Component Parts of Hydraulic System.....	10-138
Power Train System.....	10-171
Layout Drawing of Power Train System .....	10-171
Operation of Power Train System .....	10-174
Transmission, Steering, and Brake Control .....	10-175
Palm Command Control System .....	10-180
Centralized Pressure Pickup Port.....	10-184
Component Parts of Power Train System.....	10-186
Work Equipment System.....	10-248
Work Equipment Control .....	10-248
Layout Drawing of Front Work Equipment.....	10-250
Layout Drawing of Variable Giant Ripper.....	10-251
Layout Drawing of Variable Multi-Shank Ripper .....	10-252
Shoe Slip Control System .....	10-253
Component Parts of Work Equipment System .....	10-254
ICT System .....	10-268
Layout Drawing of ICT System.....	10-268
System Diagram of ICT Control System.....	10-269
Blade Control System .....	10-271
Smooth Start System .....	10-277
Slip Control System.....	10-279
Assist Control System .....	10-281
Straight Travel Correction System.....	10-283
Smooth Carry System .....	10-285
Component Parts of ICT System.....	10-287
Lifting System .....	10-302
Power Ladder System.....	10-302
Component Parts of Lifting System .....	10-305
Radio Control System .....	10-308
Layout Drawing of Radio Control System.....	10-308
Specifications of Radio Control System.....	10-309
Component Parts of Radio Control System .....	10-310
Undercarriage and Frame .....	10-315
Main Frame.....	10-315
Suspension .....	10-317
Track Frame and Idler Cushion .....	10-320
Work Equipment .....	10-322
Structure of Front Work Equipment .....	10-322
Structure of Cylinder Stay .....	10-324
Structure of Variable Giant Ripper .....	10-325
Structure of Variable Multi-Shank Ripper .....	10-326
CAB Related Parts .....	10-327
ROPS .....	10-327
CAB .....	10-328
CAB Mount .....	10-329
20 Standard Value Table .....	20-1
Table of Contents .....	20-2
Standard Value Table for Engine .....	20-3
Standard Value Table for Engine: D375AI-8 .....	20-3
Standard Value Table for Machine.....	20-9
Standard Value Table for Machine: D375AI-8 .....	20-9
Machine Posture and Procedures to Measure Performance .....	20-36
30 Testing and Adjusting .....	30-1
Table of Contents .....	30-2
Precautions Before Work .....	30-6
Related Information on Testing and Adjusting .....	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting .....	30-13

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$