

Shop Manual

BULLDOZER

D475A-8R

SERIAL NUMBERS 55001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Abbreviation List	00-22
Foreword, Safety, Basic Information.....	00-25
How to Read the Shop Manual	00-25
Safety Notice for Operation	00-27
Precautions to Prevent Fire.....	00-35
Procedures If Fire Occurs	00-37
Precautions When You Discard Waste Materials.....	00-38
Precautions When You Handle Hydraulic Equipment	00-39
Precautions When You Disconnect and Connect Pipings.....	00-42
Precautions When You Handle Electrical Equipment	00-48
Precautions When You Handle Fuel System Equipment	00-50
Precautions When You Handle Intake System Equipment	00-51
Practical Use of KOMTRAX	00-52
Disconnect and Connect Push-Pull Type Coupler	00-53
Precautions for Disconnection and Connection of Connectors	00-57
Disconnect and Connect Deutsch Connector.....	00-61
How to Disconnect and Connect Slide Lock Type Connector	00-62
Disconnect and Connect Connector with Lock to Pull	00-64
Disconnect and Connect Connector with Lock to Push	00-65
Disconnect and Connect Connector with Housing to Rotate	00-67
How to Read the Codes for Electric Cable	00-68
Explanation of Terms for Maintenance Standard	00-72
Standard Tightening Torque Table.....	00-75
Conversion Table	00-82
01 Specification.....	01-1
Table of Contents	01-2
Specifications.....	01-3
Specification Drawing.....	01-3
Specifications.....	01-5
Weight Table	01-15
Fuel, Coolant, Lubricant	01-18
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-6
Layout Drawing of Boot-up System	10-6
System Operating Lamp System.....	10-7
Battery Isolator.....	10-8
Engine System.....	10-10
Layout Drawing of Engine System	10-10
Engine Control System	10-12
Automatic Idle Stop System	10-15
Component Parts of Engine System	10-18
Cooling System.....	10-23
Layout Drawing of Cooling System	10-23
Specifications of Cooling System	10-25
Component Parts of Cooling System	10-26
Control System	10-47
Layout Drawing of Control System	10-47
Machine Monitor System.....	10-48
KOMTRAX Plus System	10-50
Component Parts of Control System	10-52
Hydraulic System	10-102
Layout Drawing of Hydraulic System.....	10-102
CLSS	10-103
Component Parts of Hydraulic System.....	10-106

Power Train System	10-159
Layout Drawing of Power Train System	10-159
Transmission, Steering, and Brake Control System	10-162
Palm Command Control System	10-166
Function of Gear Shift Mode	10-170
Centralized Pressure Pickup Port.....	10-173
Component Parts of Power Train System.....	10-175
Work Equipment System.....	10-233
Layout Drawing of Work Equipment System	10-233
Function of Work Equipment System	10-238
Component Parts of Work Equipment System	10-239
ICT System	10-250
Layout Drawing of ICT System.....	10-250
System Diagram of ICT Control System.....	10-251
Blade Control System	10-253
Smooth Start System	10-259
Slip Control System.....	10-261
Assist Control System	10-263
Straight Travel Correction System.....	10-265
Smooth Carry System	10-267
Component Parts of ICT System.....	10-269
Lifting System	10-283
Power Ladder System.....	10-283
Component Parts of Lifting System	10-286
Undercarriage and Frame	10-292
Main Frame.....	10-292
Suspension	10-294
Track Frame and Idler Cushion	10-296
Work Equipment	10-298
Structure of Front Work Equipment.....	10-298
Structure of Cylinder Stay	10-300
Structure of Variable Giant Ripper	10-301
Structure of Variable Multi-Shank Ripper.....	10-302
CAB Related Parts	10-303
ROPS.....	10-303
CAB	10-304
CAB Mount	10-305
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine	20-3
Standard Value Table for Engine: D475A-8R.....	20-3
Standard Value Table for Machine.....	20-8
Standard Value Table for Machine: D475A-8R	20-8
Machine Posture and Procedures to Measure Performance	20-34
30 Testing and Adjusting	30-1
Table of Contents	30-2
Precautions Before Work	30-6
Related Information on Testing and Adjusting	30-7
Tools for Testing and Adjusting.....	30-7
Sketch of Tools for Testing and Adjusting	30-17
Engine and Cooling System	30-20
Examine Engine Speed.....	30-20
Examine Boost Pressure.....	30-25
Examine Exhaust Gas Temperature	30-32
Examine Exhaust Gas Color	30-34
Examine and Adjust Valve Clearance.....	30-37
Examine Compression Pressure.....	30-40
Examine Blowby Pressure	30-44

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$